

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VEVOR](#) /

› [VEVOR Golf Travel Bag Model 50878 Instruction Manual](#)

VEVOR 50878

VEVOR Golf Travel Bag Model 50878 Instruction Manual

Your guide to safe and efficient use.

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your VEVOR Golf Travel Bag, Model 50878. Please read this manual thoroughly before using the product to ensure safe and optimal performance. Keep this manual for future reference.

PRODUCT OVERVIEW AND FEATURES

The VEVOR Golf Travel Bag is designed to protect and transport your golf clubs and accessories with ease. It features a robust construction and user-friendly design for convenient travel.

VEVOR
TOUGH TOOLS, HALF PRICE



Image: The VEVOR Golf Travel Bag open, revealing golf clubs and internal storage. The U-shaped opening allows for easy access to contents.

Key Features:

- **Large Capacity:** Accommodates a full golf bag with clubs, shoes, and other accessories.
- **Durable Material:** Constructed from 1800D waterproof Oxford fabric for excellent resistance to wear, tears, and water.
- **Easy Access:** Features a wide U-shaped opening for convenient loading and unloading of golf equipment.
- **Enhanced Protection:** Internal straps secure clubs, preventing movement during transit. A padded top section offers additional protection for club heads.
- **Triple-Layer Protection System:** Includes back adhesive support, stable feet, and a bottom support base with an L-shaped plastic piece and long anti-collision plastic strip to minimize wear and enhance stability.
- **Smooth Mobility:** Equipped with two smooth-rolling wheels and multiple handles (upright and Velcro) for effortless transport.
- **Secure Storage:** Two large external zippered pockets provide additional storage for accessories. Zippers are

lockable for added security.

- **Foldable Design:** The bag can be easily folded for compact storage when not in use.
- **Combination Lock:** Includes a combination lock for securing the main compartment zippers.
- **ID Card Window:** A dedicated window for displaying identification.



Image: Close-up of the bag highlighting features such as durable fabric, safety straps, lockable zippers, and the protective head design.

SETUP INSTRUCTIONS

1. **Unpack and Unfold:** Remove the travel bag from its packaging. Unfold the bag completely until it reaches its full upright position.
2. **Prepare for Loading:** Open the main U-shaped zipper to access the interior compartment.
3. **Insert Golf Bag and Clubs:** Carefully place your golf bag with clubs inside the travel cover. Ensure the club heads are positioned towards the padded top section of the travel bag for maximum protection.
4. **Secure Clubs:** Use the internal straps provided to firmly secure your golf bag and clubs, minimizing movement during transit. Tighten the straps until the contents are snug.
5. **Utilize External Pockets:** Place shoes, apparel, or other accessories in the two large external zippered pockets.
6. **Set Combination Lock (if applicable):**
 - The initial combination is typically 0-0-0.
 - To set your personal combination, push the reset button (usually a small button or lever) with a pen or pointed object until you hear a click.
 - While holding the reset button, set your desired 3-digit combination.
 - Release the reset button. Your new combination is now set. Remember your combination.
 - Use the combination lock to secure the main compartment zippers by threading the zipper pulls through the lock mechanism.

SUITABLE FOR VARIOUS SCENARIOS

Perfect gift choice for golf players



Airports



Hotels



Golf courses

Image: Visual guide for folding the golf travel bag for compact storage.

OPERATION

Transporting the Bag:

- **Using Wheels:** Tilt the bag onto its two smooth-rolling wheels. Use the upright handle at the top to pull the bag. Ensure the path is clear to avoid obstacles.
- **Carrying:** For shorter distances or when navigating stairs, use the reinforced Velcro handle or the additional grab handles located on the sides of the bag.

TRIPLE PROTECTION SMOOTH MOBILITY

Back adhesive support,
stable feet, and bottom support
base combination



Image: The golf travel bag being transported on its wheels, demonstrating ease of mobility. Close-ups show the upright handle and durable wheels.

Folding for Storage:

When not in use, the VEVOR Golf Travel Bag can be folded for compact storage:

1. Empty all contents from the bag and ensure all zippers are closed.
2. Lay the bag flat.
3. Follow the natural folds of the fabric to collapse the bag into its smallest size.
4. Secure with any integrated straps or buckles if present.
5. Store in a dry, cool place.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the bag with a damp cloth and mild soap as needed. Do not use harsh chemicals or

abrasive cleaners. Allow the bag to air dry completely before storage.

- **Zipper Care:** Periodically check zippers for debris. If zippers become stiff, apply a small amount of zipper lubricant or wax.
- **Wheel Inspection:** Inspect the wheels regularly for wear and tear. Remove any accumulated dirt or debris from the wheel axles to ensure smooth rolling.
- **Storage:** Store the bag in a clean, dry environment away from direct sunlight and extreme temperatures to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Difficulty rolling the bag.	Wheels are dirty or damaged.	Clean debris from wheels. Inspect for damage; if severely damaged, contact customer support.
Zippers are stiff or stuck.	Dirt or lack of lubrication.	Clean zippers and apply zipper lubricant or wax.
Golf clubs shift inside the bag during transport.	Internal straps are not tightened sufficiently.	Ensure internal straps are securely fastened and tightened around the golf bag and clubs.
Combination lock not working.	Incorrect combination or reset issue.	Verify the combination. If forgotten, refer to the lock's specific instructions for resetting (often involves a small reset button).

SPECIFICATIONS

Model Number:	50878
Color:	Black body + Red zipper
Material:	1800D Waterproof Oxford Fabric (Polyester)
Product Weight:	6.3 lbs / 2.85 kg
Product Dimensions (L x W x H):	520 x 450 x 1420 mm (20.5 x 17.7 x 55.9 inches)
Accessories:	1 x Combination Lock

VEVOR

PRODUCT SIZE

Item Model Number: **50878**

Color: **Black body + red zipper**

Material: **1800D waterproof Oxford fabric (polyester)**

Product weight: **6.3 lbs / 2.85kg**



Combination lock



We continue to be committed to provide you with cost-effective tools.
Save Half for any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us.
You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

Image: Product dimensions diagram for Model 50878.

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your VEVOR Golf Travel Bag, Model 50878, please refer to the official VEVOR website or contact VEVOR customer service directly. Contact details can typically be found on the product packaging or the manufacturer's website.

VEVOR Official Website: www.vevor.com



© 2023 VEVOR. All rights reserved. Information in this manual is subject to change without notice.