

Manuals.plus /

› MASTOP /

› MASTOP Model 1220 Retro Square Analog Digital Watch User Manual

MASTOP 1220

MASTOP Model 1220 Retro Square Analog Digital Watch User Manual

INTRODUCTION

Thank you for choosing the MASTOP Model 1220 Retro Square Analog Digital Watch. This timepiece combines a classic retro design with modern functionality, offering both analog and digital displays, temperature measurement, multiple time zones, an alarm, and a stopwatch. This manual provides detailed instructions to help you set up, operate, and maintain your watch for optimal performance.

PRODUCT OVERVIEW

Key Features

- **Stylish Retro Design:** Combines a vintage square case with both analog and digital displays.
- **Waterproof & Temperature Measurement:** 50-meter water resistance (3ATM) and a built-in temperature display.
- **Durable Premium Materials:** Constructed with a zinc alloy case, mineral tempered glass, and a stainless steel strap.
- **Comfortable Fit:** Adjustable band for various wrist sizes.
- **Multi-functional:** Equipped with luminous display, alarm, stopwatch, and three time zones.

Watch Components

Familiarize yourself with the main components of your MASTOP Model 1220 watch:



This image displays the watch face, showing the two analog dials, the digital display for time, date, and temperature, and the four control buttons located on the sides: MODE (top left), LIGHT (bottom left), START/STOP (top right), and SPLIT/RESET/SET (bottom right).

- **Analog Dials:** Two separate dials for displaying time.
- **Digital Display:** Shows time, date, day of the week, and temperature.
- **MODE Button:** Cycles through different functions (Time, Alarm, Stopwatch, Temperature).
- **LIGHT Button:** Activates the backlight for visibility in low light conditions.
- **START/STOP Button:** Used for starting/stopping stopwatch, and adjusting settings.
- **SPLIT/RESET/SET Button:** Used for split times in stopwatch mode, resetting, and confirming settings.

SETUP

Initial Power On

Your watch comes with a pre-installed battery (CR2032). If the display is blank, press any button to activate it. If it remains blank, the battery may need replacement.

Setting Digital Time and Date

To set the digital time and date:

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **START/STOP** button to select the digit or setting you wish to adjust (e.g., hours, minutes, year, month, day).
3. Use the **SPLIT/RESET/SET** button to increase the value of the selected digit. Hold the button to rapidly advance.
4. Repeat steps 2 and 3 for all desired time and date settings.
5. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

Setting Analog Time

The analog dials are typically synchronized with the digital time or set independently through digital controls. If your analog hands do not match the digital time after setting, consult the specific instructions for analog hand adjustment within the digital setting mode, which may involve a combination of button presses while in time setting mode.

Band Adjustment

The stainless steel band is adjustable to ensure a comfortable fit. To adjust the band:

1. Locate the clasp mechanism on the band.
2. Use a small tool (like a flat-head screwdriver or a watch tool) to lift the locking plate on the clasp.
3. Slide the clasp along the band to the desired position.
4. Press the locking plate back down firmly to secure the clasp in place. Ensure it clicks securely to prevent accidental opening.



This image shows the MASTOP Model 1220 watch comfortably fitted on a wrist, illustrating the adjustable stainless steel band. The band can be adjusted by sliding the clasp mechanism to achieve a secure and comfortable fit.

OPERATING INSTRUCTIONS

Mode Selection

Press the **MODE** button to cycle through the watch's various functions: Time Display, Alarm, Stopwatch, and Temperature Display.

Alarm Function

To set and activate the alarm:

1. Press the **MODE** button until the Alarm mode is displayed.
2. Use the **START/STOP** button to select the hour or minute digits.
3. Use the **SPLIT/RESET/SET** button to adjust the alarm time.
4. Press **MODE** to exit. To turn the alarm on/off, typically a short press of the **START/STOP** button while in alarm mode will toggle it.

Stopwatch Function

To use the stopwatch:

1. Press the **MODE** button until the Stopwatch mode is displayed (usually showing '00:00:00').
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to stop the stopwatch.
4. To record a split time, press the **SPLIT/RESET/SET** button while the stopwatch is running. The display will show the split time while the stopwatch continues to run in the background. Press **SPLIT/RESET/SET** again to return to the running time.
5. To reset the stopwatch to zero, press the **SPLIT/RESET/SET** button when the stopwatch is stopped.

Backlight

Press the **LIGHT** button (bottom left) to illuminate the digital display for a few seconds, allowing you to read the time in dark conditions.

Temperature Display

To view the temperature, cycle through the modes using the **MODE** button until the temperature is displayed. Note that the temperature sensor is located on the watch body, and readings may be influenced by your body heat. For a more accurate ambient temperature reading, remove the watch from your wrist for approximately 15-20 minutes.

MAINTENANCE

Water Resistance

Your MASTOP Model 1220 watch is water resistant to 3ATM (50 meters). This means it can withstand daily splashes, rain, and brief immersion in water. However, it is **not suitable** for swimming, showering, diving, or snorkeling. Avoid pressing buttons while the watch is wet or submerged to prevent water ingress.

Cleaning

To keep your watch clean, wipe the case and band regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish.

Battery Replacement

The watch uses a CR2032 coin cell battery. When the display becomes dim or stops functioning, it's time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Difficulty Setting Time

If you encounter difficulty setting the time or other functions, please review the 'Setup' section carefully. Watch settings often require precise button presses and sequences. Patience is key. If issues persist, ensure the battery is not low.

Inaccurate Temperature Reading

The watch's temperature sensor is affected by body heat. For an accurate ambient temperature reading, remove the watch from your wrist and allow it to sit in the open air for 15-20 minutes before checking the display.

Watch Band Pinches Hair

Some metal link bands may occasionally catch arm hair. Ensure the band is adjusted to a comfortable, but not overly tight, fit. If discomfort persists, consider consulting a jeweler for alternative band options or adjustments.

Small Text on Watch Face

The watch face features detailed information in a compact design. If you find the text difficult to read, especially in certain lighting conditions, using a magnifying glass may assist in viewing the smaller indicators.

SPECIFICATIONS

- **Model Number:** 1220
- **Brand:** MASTOP
- **Water Resistance:** 3ATM (50 meters)
- **Dial Case Diameter:** 40mm (1.57 inches)
- **Dial Case Thickness:** 12mm (0.47 inches)
- **Band Width:** 23mm (0.9 inches)
- **Band Length:** 220mm (8.66 inches)
- **Watch Weight:** 140g (5oz)
- **Case Material:** Zinc Alloy
- **Band Material:** Stainless Steel
- **Glass Material:** Mineral Tempered Glass
- **Battery Type:** CR2032
- **Manufacturer:** Mastop