

## TRIXIE 23885

# TRIXIE TR1600 Cordless Dog Clipper Instruction Manual

Model: 23885

## 1. PRODUCT OVERVIEW

The TRIXIE TR1600 Cordless Dog Clipper is a rechargeable pet grooming trimmer designed for efficient and quiet operation. It features a durable stainless steel blade, a digital display for monitoring, and a long-lasting battery for cordless convenience.

- **Cordless Convenience:** Up to 180 minutes of uninterrupted cordless operation.
- **Stainless Steel Blade:** High-quality precision blade for versatile cutting.
- **4 Attachment Combs:** Provides various cutting lengths and styles.
- **Digital Display:** Shows battery level, speed, and maintenance alerts.
- **Low-Vibration, Quiet Operation:** Designed to minimize noise and vibration for anxious pets.
- **Ergonomic Design:** Lightweight body reduces hand fatigue for precise handling.

## 2. SAFETY INFORMATION

- Read all instructions before use.
- Keep the clipper away from water.
- Do not use on wet fur.
- Ensure the clipper is fully charged before use to maintain optimal performance.
- Always use the appropriate attachment comb to prevent injury to your pet.
- Keep out of reach of children and pets when not in use.
- Unplug the clipper before cleaning or maintenance.

## 3. PACKAGE CONTENTS

Your TRIXIE TR1600 Cordless Dog Clipper package includes:

- TRIXIE TR1600 Cordless Dog Clipper
- 4 Attachment Combs
- Charging Cable
- Cleaning Brush

- Clipper Oil
- Instruction Manual

## 4. SETUP

1. **Charge the Clipper:** Before first use, fully charge the clipper. Connect the charging cable to the clipper and a suitable power adapter. The digital display will indicate charging status.
2. **Select Attachment Comb:** Choose one of the four attachment combs based on the desired hair length. Align the comb with the clipper blade and snap it into place securely.
3. **Apply Clipper Oil:** Before each use, apply a few drops of the included clipper oil to the blades. This ensures smooth operation and prolongs blade life.

## 5. OPERATING INSTRUCTIONS

1. **Prepare Your Pet:** Ensure your pet's fur is clean, dry, and free of tangles. Brush the fur thoroughly before clipping.
2. **Turn On:** Press the power button to turn on the clipper. The digital display will show the battery level and current speed setting.
3. **Adjust Speed (if applicable):** If your model supports multiple speeds, use the speed adjustment button to select the appropriate setting for your pet's fur type and your comfort.
4. **Begin Trimming:** Hold the clipper firmly and trim along the natural direction of your pet's coat. Use smooth, even strokes. Be extra cautious around sensitive areas such as the face, ears, paws, and stomach.
5. **Monitor Digital Display:** Keep an eye on the digital display for battery life and any maintenance alerts.
6. **Turn Off:** Once grooming is complete, press the power button to turn off the clipper.



Image: TRIXIE TR1600 clipper in use, demonstrating its ergonomic design and gentle approach to grooming.

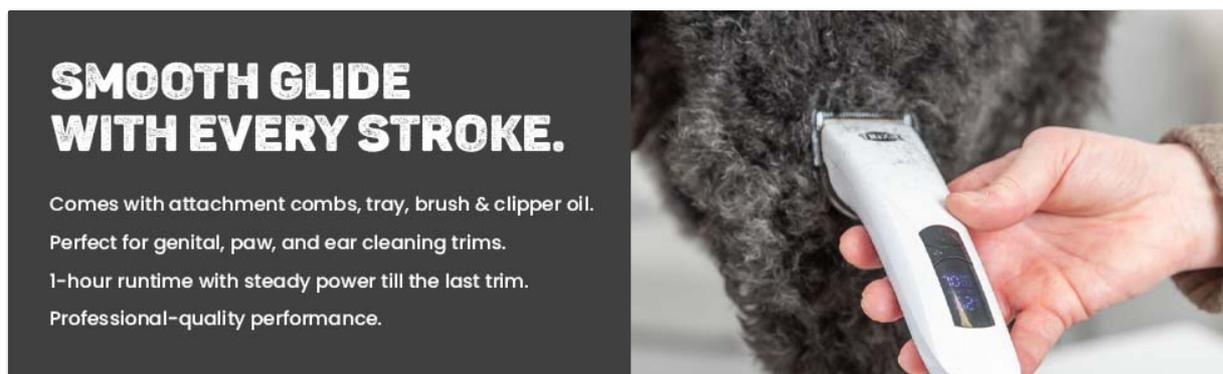


Image: The clipper delivering consistent performance for touch-ups and home grooming.

- | **STAINLESS STEEL BLADE.**
- | **COMPACT & PORTABLE.**
- | **DESIGNED IN GERMANY.**

Ideal for customized trimming lengths.

Slim & Ergonomic Design.

1 mm Cutting Head.

Rechargeable Battery.

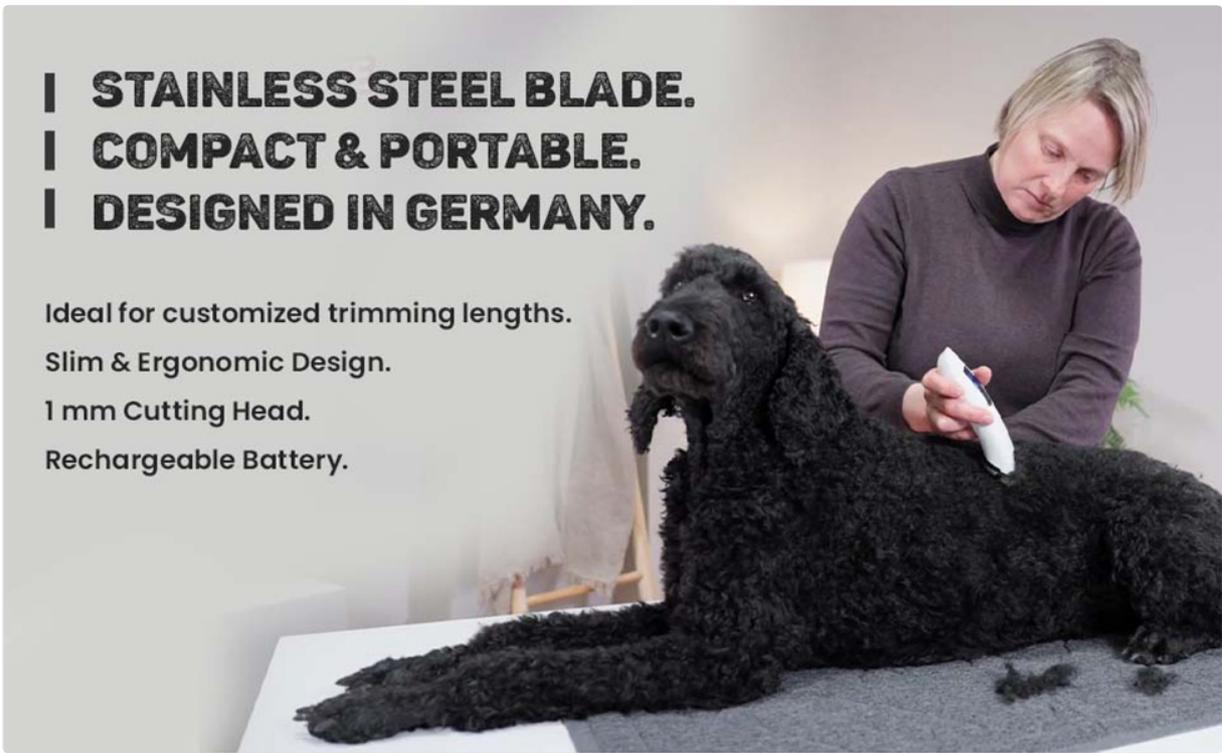


Image: Illustrating the clipper's ability to achieve a neat trim.

## 6. MAINTENANCE AND CLEANING

1. **Clean Blades:** After each use, remove the attachment comb and use the provided cleaning brush to remove any trapped hair from the blades.
2. **Oil Blades:** Reapply a few drops of clipper oil to the blades after cleaning to keep them lubricated and sharp.
3. **Store Properly:** Store the clipper and its accessories in a dry, safe place away from direct sunlight and moisture.
4. **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. Recharge when the digital display indicates low battery.



**LESS STRESS  
MORE STYLE.**

Delivers smooth, clean finishes  
with professional sharpness.

Low vibration and quiet operation  
reduce anxiety in sensitive pets.

Image: Detail of the stainless steel blade, crucial for effective trimming.

## 7. TROUBLESHOOTING

- **Clipper not turning on:** Ensure the battery is charged. If it still doesn't turn on, contact customer support.
- **Clipper pulling hair:** The blades might be dull or not properly oiled. Clean and oil the blades. If the issue persists, consider replacing the blade.

- **Reduced cutting performance:** Check if hair is clogged in the blades or attachment comb. Clean thoroughly. Ensure the battery is sufficiently charged.
- **Overheating:** If the clipper feels hot, turn it off and let it cool down. Ensure proper ventilation during use.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	23885
Power Source	Battery Powered
Battery Type	1 x 9V battery (included)
Runtime	Up to 180 minutes
Blade Material	Stainless Steel
Product Dimensions (LxWxH)	4 x 5 x 15 cm (40 x 50 x 150 Millimeters)
Item Weight	680 g
Material	Plastic
Special Feature	Cordless, Digital Display

## 9. WARRANTY AND SUPPORT

For warranty claims or support, please refer to the warranty card included with your product. You may also contact the following:

- **Manufacturer:** Andis Company
- **Packer:** TRIXIE Heimtierbedarf GmbH & Co. KG
- **Importer:** ABK IMPORTS PVT LTD

Please retain your proof of purchase for any warranty-related inquiries.