

[Manuals.plus](#) /

› [TRIXIE](#) /

› Trixie TR500 Slim Cordless Pet Clipper Instruction Manual

TRIXIE TR500

Trixie TR500 Slim Cordless Pet Clipper Instruction Manual

Model: TR500

[Overview](#)

[Safety Instructions](#)

[Package Contents](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. PRODUCT OVERVIEW

The Trixie TR500 Slim Cordless Pet Clipper is designed for precise and efficient grooming of pets, particularly for delicate areas such as the head, paws, and genital zone. Its lightweight and cordless design ensures ease of use and maneuverability.





Figure 1: Trixie TR500 Slim Cordless Pet Clipper with charging stand and oil.

Key Features:

- **Precision Cutting:** Equipped with a 1 mm cutting head for detailed grooming.
- **Adjustable Combs:** Includes 4 attachment combs for varying hair lengths.
- **Cordless Operation:** Rechargeable battery provides up to 1 hour of continuous runtime.

- **Compact Design:** Slim and lightweight for comfortable handling and precise control.
- **Quiet Operation:** Designed to minimize noise, reducing stress for sensitive pets.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance.

- Keep the appliance away from water or other liquids. Do not use it in wet conditions.
- Do not disassemble or attempt to repair the clipper yourself. Contact qualified personnel for service.
- Ensure the clipper is fully charged before use to avoid power interruptions during grooming.
- Keep out of reach of children and pets when not in use.
- Always switch off the clipper before cleaning or attaching/detaching combs.
- Use only the provided charging tray and accessories.
- Avoid dropping the clipper, as this may damage the internal components or blades.
- Do not use the clipper on irritated or wounded skin.
- Regularly check the blades for damage or dullness. Replace if necessary to prevent pulling hair.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Trixie TR500 Slim Cordless Pet Clipper
- Charging Tray
- 4 Adjustable Attachment Combs
- Cleaning Brush
- Clipper Oil
- Instruction Manual

4. SETUP

4.1 Initial Charging

Before first use, fully charge the clipper. Place the clipper into the charging tray. Connect the charging tray to a suitable power source. The charging indicator light will illuminate. A full charge typically takes approximately 1 hour of continuous runtime.

4.2 Attaching and Detaching Combs

1. Ensure the clipper is switched off.
2. Select the desired attachment comb. The clipper comes with 4 adjustable combs for various grooming lengths.
3. Align the comb with the clipper blade and slide it on until it clicks securely into place.
4. To remove, gently push the comb upwards and away from the blade.



Figure 2: Attaching an adjustable comb to the clipper.

5. OPERATION

5.1 General Grooming Guidelines

- Before grooming, ensure your pet's coat is clean, dry, and free of tangles. Brush the coat thoroughly.
- Familiarize your pet with the sound and feel of the clipper before starting.
- Always hold the clipper steadily and move it smoothly in the direction of hair growth.
- Use short, even strokes. Avoid pressing too hard against the skin.
- Take breaks if your pet becomes anxious.

5.2 Using the 1mm Cutting Head

The 1mm cutting head is ideal for precise trimming in sensitive and hard-to-reach areas without an attachment comb.

- **Head and Face:** Carefully trim around the eyes, ears, and muzzle. Use extreme caution to avoid injury.
- **Paws:** Trim hair between paw pads to prevent matting and improve traction.
- **Genital Zone:** Maintain hygiene by carefully trimming hair in this area.



GENTLE ON PETS TOUGH ON FUR.

Slim & Ergonomic Design.

1 mm Cutting Head.

Rechargeable Battery.



Figure 3: Trimming around the head with the clipper.

WHERE COMFORT MEETS CONTROL.

Delivers consistent performance with every session.
Perfect for touch-ups and home grooming.
Designed for dogs & cats with various coat types.



Figure 4: Detailed trimming of paw hair.

5.3 Using Attachment Combs

For longer coat lengths or general body trimming, attach one of the four adjustable combs. The combs help to achieve a uniform cut length.

- Start with a longer comb length if unsure, and gradually switch to shorter combs as needed.
- Move the clipper against the direction of hair growth for a shorter cut, or with the direction for a longer, blended look.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Trixie TR500 pet clipper.

6.1 Cleaning the Blades

1. After each grooming session, switch off and unplug the clipper.
2. Remove any attachment comb.

3. Use the provided cleaning brush to remove loose hair from the blades and the clipper head.
4. For thorough cleaning, the blade set can be carefully detached (refer to specific instructions if provided in a physical manual for blade removal).

6.2 Oiling the Blades

Regular oiling is crucial for smooth operation and to prevent blade wear and overheating.

1. After cleaning, apply 1-2 drops of the included clipper oil to the teeth and sides of the blade.
2. Switch on the clipper for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth.



Figure 5: Applying oil to the clipper blades.

6.3 Storage

Store the clipper in a dry, cool place, away from direct sunlight and moisture. Ensure it is clean and oiled before storing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper not turning on.	Battery is discharged.	Charge the clipper fully.
Clipper pulls hair or cuts poorly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. If dull, consider replacing the blade set. Ensure pet's coat is clean and tangle-free.
Clipper becomes hot during use.	Blades are not properly oiled or are dirty. Prolonged use.	Clean and oil the blades. Allow the clipper to cool down if used for extended periods.
Excessive noise or vibration.	Blades are loose or require oiling.	Ensure blades are securely attached. Apply clipper oil.

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	TRIXIE

Feature	Detail
Model Number	TR500 (Item model number: 23883)
Cutting Head	1 mm
Power Source	Battery Powered (Rechargeable)
Runtime	Up to 1 hour (cordless)
Included Combs	4 adjustable attachment combs
Blade Material	Stainless Steel
Dimensions (LxWxH)	20 x 5 x 5 cm
Item Weight	680 g
Country of Origin	Germany

9. WARRANTY & SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact TRIxie customer service directly. Keep your purchase receipt as proof of purchase. Extended warranty plans may be available from third-party providers. Please check with your retailer for details on such offerings.

Manufacturer: TRIxie HEIMTIERBEDARF GMBH CO. KG

© 2025 TRIxie. All rights reserved.

This manual is for informational purposes only. TRIxie is not responsible for any damage or injury caused by improper use of this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question