

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AAOBOSI](#) /

› [AAOBOSI C688 Carpet and Upholstery Cleaner Machine User Manual](#)

### AAOBOSI C688

# AAOBOSI C688 Carpet and Upholstery Cleaner Machine User Manual

Model: C688

## INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your AAOBOSI C688 Carpet and Upholstery Cleaner Machine. Please read this manual thoroughly before first use and retain it for future reference.



Image: The AAOBOSI C688 Carpet and Upholstery Cleaner Machine, shown with its various attachments and a dog, illustrating its use for pet-related cleaning.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without tanks in place.
- Always disconnect this appliance from the supply mains before connecting or disconnecting hose.
- Store the appliance indoors. After use, prevent tripping accidents.

## PRODUCT OVERVIEW AND COMPONENTS

---

The AAOBOSI C688 is a versatile carpet and upholstery cleaner designed for effective stain removal and deep cleaning. It features multiple cleaning modes and specialized tools to address various cleaning needs.

### What's in the Box:

# What's in the box?

1 Machine	2 Crevice Brush	3 Hose Support
4 Hose Cleaning Tool	5 Hose	6 Small Hand Tool (With 2 covers)
7 2-in-1 Large Hand Tool	8 User Manual	



Image: An illustration of all components included in the AAOBOSI C688 package, such as the main unit, hose, large and small hand tools, crevice brush, hose cleaning tool, and user manual.

1. Main Machine Unit
2. Crevice Brush
3. Hose Support
4. Hose Cleaning Tool
5. Hose
6. Small Hand Tool (with 2 covers)
7. 2-in-1 Large Hand Tool
8. User Manual (this document)

## SETUP INSTRUCTIONS

Follow these steps to prepare your AAOBOSI C688 for use:

- 1. Unpack the Machine:** Carefully remove all components from the packaging. Ensure all listed items in the "What's in the Box" section are present.
- 2. Fill the Clean Water Tank:**
  - Locate the clean water tank (usually the transparent tank for water/solution).
  - Remove the tank and fill it with clean water. For enhanced cleaning, you may add a suitable carpet cleaning solution as per the solution manufacturer's instructions. Do not exceed the MAX FILL line.
  - Securely place the clean water tank back into the machine.
- 3. Attach the Desired Cleaning Tool:**
  - Connect the flexible hose to the main unit.
  - Select the appropriate cleaning tool (e.g., 2-in-1 Large Hand Tool for large areas, Small Hand Tool for spots, Crevice Brush for tight spaces) and securely attach it to the end of the hose.
- 4. Power Connection:** Extend the power cord and plug the machine into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

---

### 1. Powering On and Mode Selection

- Press the **ON/OFF** button to power on the machine.
- Press the **Mode** button to cycle through the available cleaning modes:
  - Cold Wash:** For general cleaning and light stains.
  - Hot Wash:** For more effective cleaning of common stains, such as pet accidents.
  - Steam Wash:** For tough and oily messes. The machine will heat up to produce steam.
  - Steam Sterilization:** For refreshing upholstery and cleaning grout.

### 2. Using Cleaning Modes

# Steam Mode for Tough Mess

Steam Wash for tough and oily messes, Steam Mode for refreshing upholstery and cleaning grout



Image: The AAOBOSI C688 machine demonstrating its Steam Mode, effectively cleaning colorful stains from an upholstered chair.

- **Pre-treatment (Optional):** For heavily soiled areas, pre-treat with a suitable cleaning solution.
- **Application:** Hold the selected cleaning tool firmly against the surface to be cleaned. Press the trigger on the tool handle to dispense cleaning solution/steam.
- **Extraction:** Release the trigger and slowly pull the tool over the wet area to suction up the dirty water. Overlap passes slightly. Repeat until the area is clean and as dry as possible.
- **Fast Drying:** The machine's 17KPa powerful suction and upgraded technology achieve an 85% water return rate, allowing cleaned surfaces to dry in approximately 20 minutes.

# Fast Drying in 20 Minutes

Achieve an 85% water return rate with upgraded 17Kpa suction, fast drying in 20mins



Image: A user cleaning the interior of a car with the AAOBOSI C688, illustrating the machine's fast-drying capability.

### 3. Utilizing Multifunctional Cleaning Tools



## 4 Multifunctional Cleaning Tools

Small and large cleaning tools come with rubber replacements for cleaning pet hair

Image: A visual representation of the four specialized cleaning tools included with the AAOBOSI C688: Crevice Brush, Hose Cleaning Tool, Large Cleaning Tool, and Small Cleaning Tool.

- **2-in-1 Large Hand Tool:** Ideal for quickly cleaning larger areas such as carpets, rugs, and wide upholstery sections.
- **4" Small Hand Tool:** Designed for targeted spot cleaning, smaller upholstery areas, and car interiors.
- **Crevice Brush:** Perfect for reaching tight spaces, corners, and edges where other tools cannot access.
- **Hose Cleaning Tool:** Used for the self-cleaning function of the hose (see Maintenance section).

### 4. Smart Voice Prompting and Auto-Stop

# Smart Voice Prompting

Smart voice prompts remind you every step of the way



Image: The AAOBOSI C688 machine displaying its smart voice prompting feature, with a speech bubble indicating "Steam preparation, please wait~".

- The machine provides voice alerts to guide you through steam wash and steam sterilization cycles.
- An auto-stop feature prevents overflow when the dirty water tank is full. A voice prompt will alert you, and the machine will stop operation.

# Auto-stop Leak Prevention

Auto-stop when the sewage tank is full,  
prevent the sewage from staining the carpet



Image: The AAOBOSI C688 demonstrating its auto-stop leak prevention, with a voice prompt indicating "The dirty tank is full, please clean it in time~" and a visual indicator for a full tank.

## 5. Portable Design and Reach



## Portable & Superior Reach

13.2ft cord, 5.6ft hose with fewer move, lightweight at 9.2lbs

Image: A user cleaning carpeted stairs with the AAOBOSI C688, highlighting its portable design with a 13.2 ft power cord and 5.6 ft hose for extended reach.

The AAOBOSI C688 is lightweight at 9.2 lbs, making it easy to transport. Its extra-long 13.2 FT power cord and 5.6 FT hose provide superior reach, allowing you to clean larger areas with fewer repositioning stops.

### MAINTENANCE

#### 1. Self-Cleaning the Hose

# 2 Steps Easy Self-cleaning

Install the self-cleaning tool & run a hot/cold wash mode to clean hose and prevent odor



Image: A user demonstrating the 2-step self-cleaning process for the AAOBOSI C688's hose, using the dedicated hose cleaning tool.

To prevent unpleasant odors and maintain optimal performance, regularly self-clean the hose:

1. **Step 1:** Install the dedicated Hose Cleaning Tool onto the end of the flexible hose.
2. **Step 2:** Turn on the machine and select either the Cold Wash or Hot Wash mode. Allow the machine to run for a few minutes, drawing clean water through the hose and into the dirty water tank. This flushes out any residue.

## 2. Emptying and Cleaning Tanks

- **Dirty Water Tank:** After each use, or when the auto-stop feature activates, remove the dirty water tank. Empty the dirty water and rinse the tank thoroughly with clean water.
- **Clean Water Tank:** If any cleaning solution remains, empty it and rinse the tank. It is recommended to use fresh solution for each cleaning session.
- Ensure both tanks are dry before reassembling them into the machine or storing.

## 3. General Cleaning and Storage

- Wipe down the exterior of the machine with a damp cloth.
- Clean any residue from the cleaning tools.
- Store the machine and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If you encounter issues with your AAOBOSI C688, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet fault; power button not pressed.	Ensure power cord is securely plugged into a working outlet. Press the ON/OFF button.
No suction or weak suction.	Dirty water tank full; hose or tool clogged; tank not properly seated; seals not tight.	Empty and clean the dirty water tank. Check hose and tools for blockages. Ensure tanks are securely in place and seals are intact.
No water/solution dispensed.	Clean water tank empty; tank not properly seated; spray nozzle clogged; trigger not pressed.	Refill the clean water tank. Ensure tank is securely in place. Check spray nozzle for blockages. Press the trigger firmly.
Machine leaks.	Tanks not properly seated; seals damaged or missing; dirty water tank overfilled.	Ensure all tanks are correctly and securely installed. Check seals for damage. Do not overfill the dirty water tank (auto-stop should prevent this, but manual check is advised).
Steam function not working.	Not enough water in clean tank; machine not heated up; steam mode not selected.	Ensure clean water tank has sufficient water. Allow time for the machine to heat up after selecting Steam Wash/Sterilization mode. Confirm Steam mode is selected.

## SPECIFICATIONS

Feature	Detail
Brand	AAOBOSI
Model Number	C688
Product Dimensions	44 x 34.5 x 28 cm (17.3 x 13.6 x 11 inches)
Item Weight	4.2 kg (9.2 lbs)
Capacity (Water Tank)	1200 Milliliters
Suction Power	17KPa
Water Return Rate	85%
Power Cord Length	13.2 FT
Hose Length	5.6 FT
Special Features	4 Cleaning Tools, Fast Drying, Self-cleaning, Steam Cleaning, Voice Prompt, Auto shut-off
Power Source	AC

## WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or any questions regarding your AAOBOSI C688 Carpet and Upholstery Cleaner Machine, please refer to the warranty card included with your purchase or contact AAOBOSI customer service directly. Contact details can typically be found on the product packaging or the official AAOBOSI website. Please have your model number (C688) and purchase date available when contacting support.

© 2025 AAOBOSI. All rights reserved.

## Related Documents - C688

	<p><a href="#"><u>Ansjer Security Cameras &amp; Smart Home Solutions Catalog</u></a></p> <p>Explore the comprehensive range of Ansjer security cameras, including WiFi, PoE, and AI-powered solutions for smart homes and communities. Discover advanced features, high-definition video, and reliable surveillance for ultimate peace of mind.</p>
---	---