

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tornado](#) /

› [Tornado 65UA5300E 65-inch 4K Frameless Android Smart TV User Manual](#)

Tornado 65UA5300E

Tornado 65UA5300E 65-inch 4K Frameless Android Smart TV User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Tornado 65UA5300E 65-inch 4K Frameless Android Smart TV. Please read it thoroughly before using the product and retain it for future reference.



Image 1.1: Front view of the Tornado 65UA5300E Smart TV, showcasing its frameless design and included stand.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Ensure proper ventilation; do not block ventilation openings.
- Do not place the TV on an unstable cart, stand, tripod, bracket, or table.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Tornado 65UA5300E 65-inch 4K Frameless Android Smart TV
- Remote Control
- Power Cable
- TV Stand (2 pieces)
- Screws for Stand Assembly
- User Manual (this document)

4. SETUP

4.1 Unpacking

Carefully remove the TV from its packaging. It is recommended to keep the original packaging for potential future transport or servicing.

4.2 Attaching the Stand

If you are not wall-mounting the TV, attach the included stand pieces. Place the TV face down on a soft, flat surface to prevent screen damage. Align each stand piece with the corresponding slots on the bottom of the TV and secure them with the provided screws.



Image 4.1: Bottom view of the TV, illustrating the designated areas for stand attachment.

4.3 Wall Mounting

For wall mounting, remove the stand (if attached). Use a VESA-compatible wall mount (not included) that supports the TV's weight and dimensions. Consult a professional for wall mounting to ensure safety and proper installation.



Image 4.2: Rear view of the TV, highlighting the VESA mounting pattern and various input/output ports.

4.4 Connecting Peripherals

Connect your external devices to the TV using the appropriate ports:

- **HDMI:** For high-definition devices like Blu-ray players, gaming consoles, or set-top boxes. The TV has 3 HDMI ports, one with ARC support.
- **USB:** For connecting USB storage devices to play media (video, photos, music). The TV has 2 USB ports.
- **LAN:** For a wired internet connection.
- **RF Input:** For connecting an antenna or satellite dish for the built-in digital receiver.
- **Digital Audio Output (Optical):** For connecting to an external audio system.
- **Headphone Jack (3.5mm):** For connecting headphones.



Image 4.3: Side view of the TV, illustrating the accessible side input ports.

4.5 Initial Power On and Setup Wizard

After connecting the power cable, press the power button on the remote control or TV. The TV will guide you through an initial setup wizard, including language selection, network connection (Wi-Fi or LAN), channel scanning, and Google account setup for Android TV features.

5. OPERATING THE TV

5.1 Remote Control Overview

The included remote control allows you to navigate the TV's functions. It features dedicated buttons for power, volume, channel, input selection, smart TV apps (Netflix, YouTube, Prime Video, Disney+), Google Assistant voice search, and menu navigation.

5.2 Basic Functions

- **Power On/Off:** Press the power button.
- **Volume Control:** Use the Volume Up/Down buttons.
- **Channel Selection:** Use the Channel Up/Down buttons or numeric keypad.
- **Input Source:** Press the 'Input' button to select between HDMI, AV, TV, etc.

5.3 Smart TV Features (Android 11)

Your TV runs on Android 11, providing access to a wide range of smart features:

- **Applications:** Access pre-installed apps like Netflix, YouTube, Prime Video, Disney+, Shahid VIP, and download more from the Google Play Store.
- **Google Assistant:** Use voice commands via the remote control for search, control, and information.
- **Chromecast Built-in:** Cast content from your smartphone or tablet directly to the TV.
- **Web Browser:** Browse the internet directly on your TV.

- **Bluetooth 5.0:** Connect wireless headphones, speakers, or other Bluetooth devices.

5.4 Picture and Sound Settings

Customize your viewing and listening experience through the TV's settings menu:

- **Picture Modes:** Select from Dynamic, Game, Sports, Cinema, or User-defined modes.
- **Color Temperature:** Adjust to Normal, Cool, or Warm.
- **Sound Modes:** Choose from Smart, User, Game, Movie, Music, or News.
- **Dolby Digital Plus:** Enhanced audio processing for compatible content.

6. MAINTENANCE

6.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- **Body:** Wipe the TV's frame and back panel with a soft, dry cloth. Do not use abrasive cleaners or solvents.

6.2 Software Updates

Ensure your TV's software is up to date for optimal performance and security. Connect the TV to the internet and check for updates periodically through the settings menu.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

| Problem | Possible Solution |
|----------------------------------|--|
| No power | Check if the power cable is securely plugged into the TV and the wall outlet. Ensure the outlet is functional. |
| No picture, but sound is present | Check the input source. Ensure external devices are powered on and connected correctly. |
| No sound, but picture is present | Check the volume level and mute status. Verify audio settings and external audio connections. |
| Remote control not working | Replace batteries. Ensure no obstructions between the remote and the TV's IR sensor. |
| Cannot connect to Wi-Fi | Check your router and modem. Re-enter the Wi-Fi password. Try restarting the TV and router. |

If the problem persists, contact customer support.

8. SPECIFICATIONS

| Feature | Detail |
|---------|--------|
|---------|--------|

| Feature | Detail |
|--------------------------------------|--|
| Model Number | 65UA5300E |
| Screen Size | 65 Inches |
| Display Technology | LED |
| Resolution | 4K UHD (3840 x 2160) |
| Aspect Ratio | 16:9 |
| Viewing Angle | 178 Degrees |
| Brightness | 250 cd/m ² |
| Refresh Rate | 50/60 Hz |
| HDR Support | HDR10, HLG |
| Audio Technology | Dolby Digital Plus, Surround Sound |
| Audio Output Power | 10W x 2 |
| Operating System | Android 11 |
| Internal Memory | 16 GB |
| Connectivity | Wi-Fi, Bluetooth 5.0, LAN |
| Inputs | RF Input (Digital) x1, Video Input x1, HDMI x3 (ARC), USB x2, LAN x1 |
| Outputs | Digital Audio Output (Optical) x1, Headphone Jack (3.5mm) x1 |
| Power Supply | AC 90-240V / 50Hz |
| Standby Power | 0.5W |
| Dimensions (W x H x D) without stand | 1446 x 832 x 84 mm |
| Dimensions (W x H x D) with stand | 1446 x 892 x 305 mm |
| Net Weight | 15.32 kg |
| Gross Weight | 21.32 kg |
| Country of Origin | Egypt |

9. WARRANTY

This Tornado TV comes with a **3-year full free warranty**. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card included with your product or contact Tornado customer service.

10. SUPPORT

For further assistance, technical support, or service inquiries, please contact Tornado customer service. Contact details can typically be found on the manufacturer's official website or on the warranty card.