

## KISLOT DC7Y077

# KISLOT Upholstered Dining Chair DC7Y077 Instruction Manual

## INTRODUCTION

---

Thank you for choosing the KISLOT Upholstered Dining Chair DC7Y077. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new chair.

Designed for comfort and versatility, this modern dining chair features elegant wooden armrests, a plush fabric cushion, and smooth-rolling casters for easy mobility. Please read these instructions carefully before use and retain them for future reference.



Front view of the KISLOT Upholstered Dining Chair, showcasing its design.

## ASSEMBLY INSTRUCTIONS

Your KISLOT dining chair is designed for quick and easy assembly, typically taking 10-20 minutes. All necessary hardware and installation tools are included in the package. Please ensure all parts are present before beginning assembly.

1. Unpack all components and verify against the parts list (not provided in this manual, refer to your package insert).
2. Attach the wooden armrests to the chair base using the provided screws and tools. Ensure they are securely fastened.
3. Confirm that the casters are properly installed at the base of the chair for smooth movement.
4. Place the upholstered cushion onto the chair frame.

### Note:

- If you purchased multiple chairs, they may arrive in separate packages and at different times.

- Ensure all screws are tightened firmly but do not overtighten to avoid damaging the wood.



Detail of the chair's construction, including the cushion, wooden armrest, and a hidden caster wheel.

## OPERATING YOUR CHAIR

The KISLOT dining chair is designed for ease of use and comfort in various settings.

### Smooth Mobility with Casters

The chair is equipped with discreet, smooth-rolling wheels, allowing for effortless movement across your floor. This feature enables easy rearrangement of your dining space or convenient tucking under a table without the need for lifting. The casters operate quietly, making daily use simple and practical.


# PRODUCT DETAIL



Elegant Wood Armrests



Mid-century Modern Design

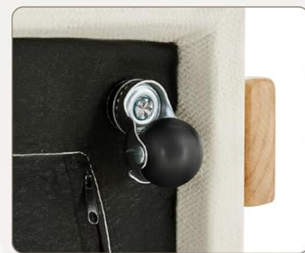

Sturdy Wooden Frame

The chair features four hidden smooth-rolling wheels for effortless movement.

## Comfortable and Versatile Seating

Enjoy superior comfort with the chair's plush, spacious fabric cushion and ergonomic design, providing lumbar support. It is suitable for extended sitting, whether for dining, reading, working at a computer, or simply relaxing. The mid-century modern design with clean lines and gentle curves complements both contemporary and classic interiors.

## ERGONOMIC

Lumbar Support for Back Pain Relief



## UPHOLSTERED DESIGN

Comfortable and Beautiful



The chair offers ergonomic lumbar support and a comfortable upholstered design.

### Product Demonstration Video

Your browser does not support the video tag.

Official product video demonstrating the features and movement of the KISLOT Upholstered Dining Chair, including its comfortable seat, wooden armrests, and smooth-rolling wheels.

### CARE AND MAINTENANCE

Proper care will ensure the longevity and appearance of your KISLOT dining chair.

- **Fabric Care:** The fabric is designed to be durable and family-friendly. For general cleaning, gently vacuum the upholstery to remove dust and debris. For spills, blot immediately with a clean, dry cloth. Avoid rubbing, which can spread the stain. For tougher stains, a mild fabric cleaner suitable for upholstered furniture can be used, following the product instructions carefully. Test on an inconspicuous area first.
- **Wood Care:** Wipe wooden armrests with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the wood finish. Polish occasionally with a wood-safe furniture polish to maintain its natural luster.
- **Caster Maintenance:** Periodically check the casters for any accumulated dust or hair that might impede smooth rolling. Clean as needed.

- **General Inspection:** Regularly check all screws and connections to ensure they remain tight. Retighten if necessary to maintain stability.

## TROUBLESHOOTING

If you encounter any issues with your KISLOT dining chair, please refer to the following common solutions:

- **Chair feels unstable or wobbly:** Check all assembly screws. Loosen slightly, adjust the chair to a level position, and then retighten all screws firmly. Ensure the chair is on a flat, even surface.
- **Casters not rolling smoothly:** Inspect the wheels for any debris (hair, lint, etc.) that may be caught in the mechanism. Clean the casters thoroughly. Ensure the chair is not overloaded.
- **Squeaking noises:** This can often be resolved by tightening all assembly screws. If the noise persists, apply a small amount of silicone lubricant to the joints where wood meets wood or metal.
- **Fabric appears discolored or stained:** Refer to the 'Care and Maintenance' section for appropriate cleaning methods. Avoid using harsh chemicals or excessive moisture.

If these steps do not resolve the issue, please contact customer support.

## PRODUCT SPECIFICATIONS

# Modern Dining Chairs



High Resilience  
Sponge



Not Easily  
Deformed

Feature	Detail
Model Name	KISLOT Upholstered Dining Chairs DC7Y077
Model Number	DC7Y077
UPC	810188714701
Brand	KISLOT
Color	Beige (also available in Sand, Green)
Material	Wood, Fabric (Polyester), Foam
Product Dimensions (D x W x H)	26.4"D x 27.2"W x 31.1"H
Item Weight	32.6 Pounds
Maximum Weight Recommendation	300 Pounds
Assembly Required	Yes
Included Components	Cushion
Recommended Uses	Computer, Dining, Office, Reading, Relaxing

## SAFETY GUIDELINES

---

To ensure safe use of your KISLOT dining chair, please observe the following:

- Do not exceed the maximum weight limit of 300 lbs (136 kg).
- Avoid standing on the chair or using it as a step stool.
- Keep children from playing on or around the chair unsupervised.
- Ensure the chair is placed on a stable, level surface before use.
- Regularly check and tighten all fasteners to prevent loosening and potential hazards.

## WARRANTY AND CUSTOMER SUPPORT


---

All KISLOT products are covered by a one-year warranty from the date of purchase. This warranty covers manufacturing defects and ensures your satisfaction with the product.

If you require any support, have questions about assembly, operation, or encounter any issues not covered in the troubleshooting section, please do not hesitate to contact us directly.

**Email:** [CS.furniture@outlook.com](mailto:CS.furniture@outlook.com)

We are committed to providing complete home design solutions and excellent customer service.

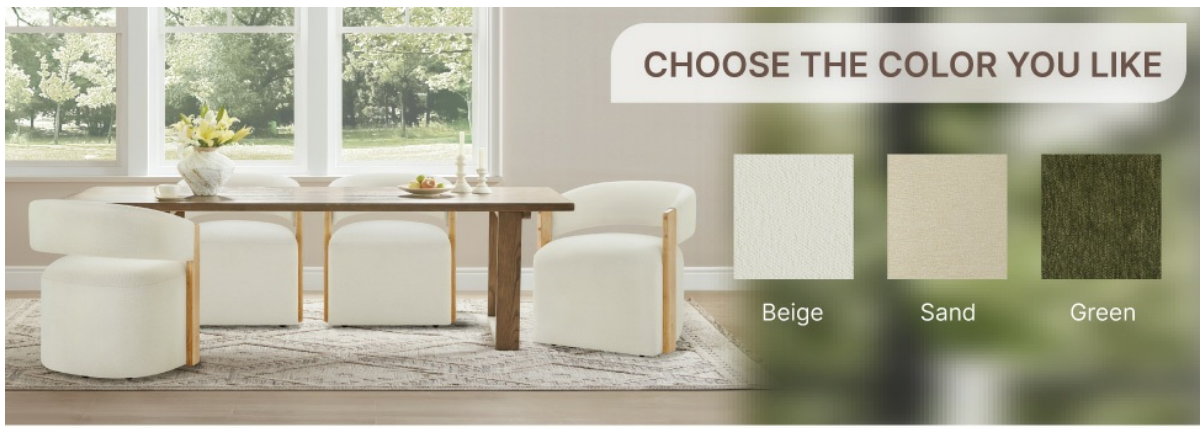

## Offer A Complete Home Design Solutions

We have experience over 20 years of providing furniture for supermarket.  
All our products are covered by a one year warranty from the date of purchase.  
If you need any support, please contact us directly.

Email: [CS.furniture@outlook.com](mailto:CS.furniture@outlook.com).

KITCHEN · LIVING · DINING · BEDROOM · PATIO · OFFICE



Information on available colors and warranty details.