

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [artfone](#) /
- › [artfone G6 Pro 4G Senior Flip Phone User Manual](#)

### artfone G6 Pro

## artfone G6 Pro 4G Senior Flip Phone User Manual

Model: G6 Pro

### INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your artfone G6 Pro 4G Senior Flip Phone. Please read this manual thoroughly before operating the device and keep it for future reference.



*Image: The artfone G6 Pro 4G flip phone, showcasing its dual LCD screens and large keypad.*

### WHAT'S IN THE BOX

Verify that all items are present in the package:

- 1 x artfone G6 Pro Senior Flip Phone
- 1 x 1300 mAh Battery
- 1 x USB Charging Cable
- 1 x Charging Head (Power Adapter)
- 1 x Charging Dock

- 1 x User Manual (English, German, French, Spanish, Italian)



*Image: All components included in the artfone G6 Pro package: the phone, battery, USB cable, power adapter, charging dock, and user manual.*

## SETUP

### 1. Installing the SIM Card, Micro SD Card, and Battery

1. Remove the back cover of the phone.
2. Insert your Nano SIM card(s) into the designated slot(s). Ensure the gold contacts face downwards.
3. If desired, insert a Micro SD card (up to 64GB) into the Micro SD slot for expanded storage.
4. Insert the 1300mAh battery, aligning the contacts correctly.
5. Replace the back cover until it clicks securely into place.

# Phone memory:128MB+48MB

Support micro SD card up to 64GB maximally



Image: An exploded view of the artfone G6 Pro, showing the back cover removed, revealing slots for Nano SIM and Micro SD cards, and the 1300mAh battery.

## 2. Initial Charging

Before first use, fully charge the phone. You can charge it using the provided charging dock or directly via the USB-C cable.

- **Using the Charging Dock:** Connect the USB cable to the charging head, then plug it into a power outlet. Place the phone into the charging dock. The phone will indicate charging status.
- **Direct Charging:** Connect the USB-C cable directly to the phone's charging port and the other end to the charging head, then plug into a power outlet.




Up to **5** emergency contacts  
reachable at the touch of a button

**3** Press and hold for 3 seconds for emergency SMS


*Image: The artfone G6 Pro phone placed in its charging dock, connected to a power source.*

## OPERATING INSTRUCTIONS

### 1. Power On/Off

- **To Power On:** Press and hold the red End Call/Power button  until the screen lights up.
- **To Power Off:** Press and hold the red End Call/Power button until the power-off options appear, then select 'Power Off'.

### 2. Making and Receiving Calls

- **Making a Call:** Dial the number using the large keypad and press the green Call button .
- **Receiving a Call:** Open the flip to answer, or press the green Call button. Close the flip or press the red End Call button to end a call.
- **Adjusting Volume:** Use the volume buttons on the side of the phone during a call.

## User-friendly UI Excellent operation



Image: A close-up of the artfone G6 Pro's large, backlit keypad, designed for easy dialing.

### 3. Dual Screen Features

The artfone G6 Pro features a 2.4-inch internal screen and a 1.8-inch external screen.

- The external screen displays time, date, battery status, and caller ID without opening the phone.
- Press and hold the dedicated time announcement button (often located on the side or front) for 2 seconds to hear the current time spoken aloud.



Image: The artfone G6 Pro displaying the time on its external screen, with an illustration of the time announcement feature.

### 4. SOS Emergency Function

The SOS button provides quick access to emergency contacts.

- **Setting SOS Numbers:** Navigate to the 'SOS Settings' in the phone's menu to program up to 5 emergency contact numbers.
- **Activating SOS:** In an emergency, press and hold the SOS button on the back of the phone for 3 seconds. The phone will automatically call the programmed numbers in sequence until one answers. It will also send an emergency SMS to these contacts.



**AAC receiver like iPhone's**  
**and unique dual receivers design**



*Image: The artfone G6 Pro with its SOS button highlighted, illustrating how it connects to up to 5 emergency contacts.*


## 5. Speed Dial

Assign frequently called numbers to speed dial keys (A, B, 1-9) for quick access.

- **Setting Speed Dial:** Go to 'Settings' > 'Speed Dial' to assign contacts to specific keys.
- **Using Speed Dial:** Press and hold the assigned key (e.g., 'A' or '1') to call the stored contact.

## 6. Other Features

- **Camera:** Access the camera through the main menu to take basic photos.
- **FM Radio:** Plug in headphones (3.5mm jack) to use the FM radio function.
- **Flashlight:** Activate the flashlight via a dedicated side switch or through the menu.
- **User Interface:** The phone features a simple, user-friendly interface with clear icons for easy navigation.

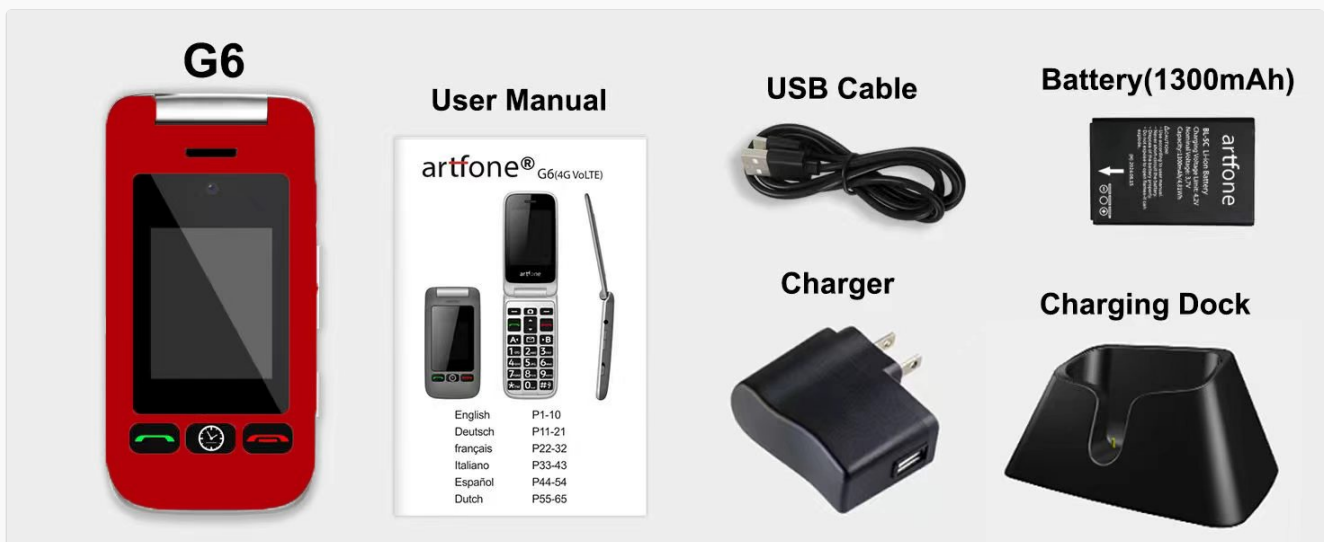

*Image: A visual representation of the artfone G6 Pro's menu, showing large, clear icons for Contacts, Tools, Message, SOS, Calendar, Settings, Internet, Multimedia, and Call logs.*

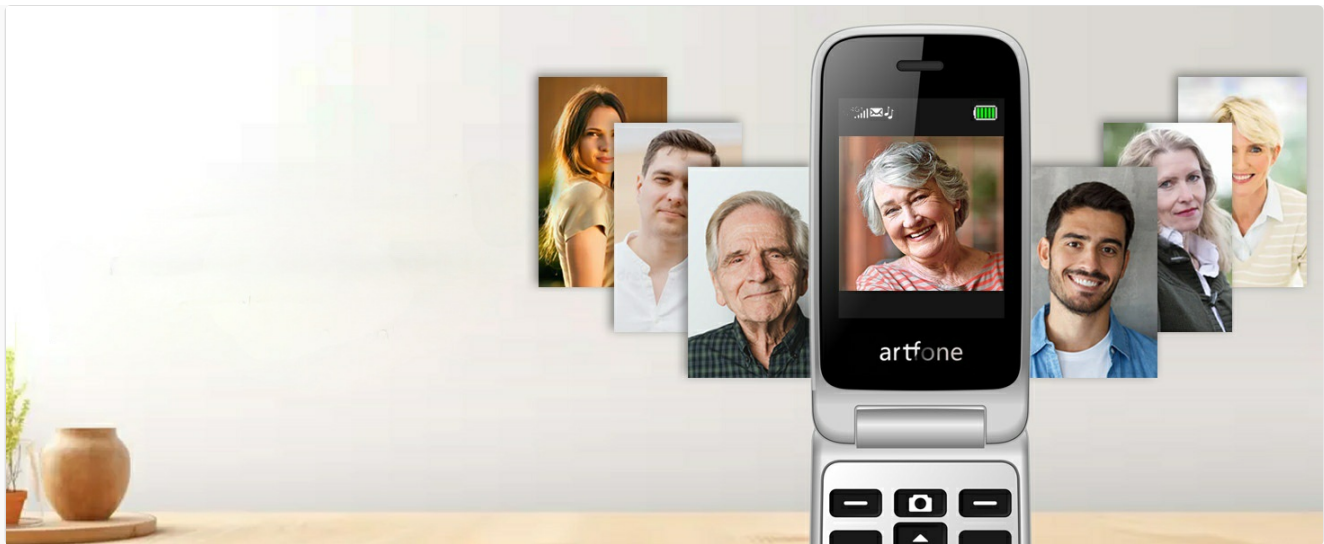


Image: A composite image illustrating the flashlight, FM radio, and 3.5mm headphone jack features of the artfone G6 Pro.

## MAINTENANCE

- Keep the phone dry. Moisture can damage electronic circuits.
- Do not expose the phone to extreme temperatures. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft, damp cloth.
- Handle the phone gently. Do not drop, knock, or shake it. Rough handling can break internal circuit boards and fine mechanics.
- Only use original or certified compatible batteries, chargers, and accessories.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on	Battery is low or not installed correctly.	Charge the battery. Ensure the battery is correctly inserted.
Cannot make or receive calls	No SIM card, SIM card not properly inserted, or no network signal.	Ensure SIM card is inserted correctly. Check network coverage. Contact your service provider.
Poor call quality / Low volume	Weak signal, speaker blocked, or volume too low.	Move to an area with better signal. Ensure speaker is not obstructed. Adjust call volume using side buttons.
Battery drains quickly	Frequent use, background applications, or old battery.	Reduce screen brightness. Close unused applications. Consider replacing the battery if it's old.
SOS function not working	SOS numbers not programmed or incorrect.	Verify and correctly program the emergency contact numbers in SOS settings.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

- **Model:** artfone G6 Pro
- **Network Technology:** 4G, 3G, 2G
- **Operating System:** artfone Mocor RTOS
- **Main Screen:** 2.4 inches
- **External Screen:** 1.8 inches
- **Memory:** 128MB + 48MB
- **Expandable Storage:** Micro SD card up to 64GB
- **SIM Card Type:** Nano SIM
- **Battery:** 1300mAh Lithium-ion
- **Talk Time:** Up to 5-6 hours
- **Standby Time:** Up to 10 days
- **Connectivity:** Bluetooth
- **Charging Port:** USB Type-C
- **Special Features:** SOS Button, Large Keys, Dual Screen, Charging Dock, FM Radio, Flashlight, Camera

## WARRANTY AND SUPPORT

### Warranty Information

The artfone G6 Pro comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

### Customer Support

For technical assistance, warranty claims, or further inquiries, please refer to the contact information provided in your product packaging or visit the official artfone website. Please have your product model and purchase details ready when contacting support.

