

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Aspiron](#) /

> [Aspiron Steam Cleaner AS-CA019 User Manual](#)

## Aspiron AS-CA019

# Aspiron Steam Cleaner AS-CA019 User Manual

Model: AS-CA019

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged from the electrical outlet before filling with water, cleaning, or performing maintenance.
- Do not leave the steam cleaner unattended while it is powered on or generating steam.
- Keep the appliance out of reach of children and pets. The built-in child lock feature is designed to prevent accidental operation.
- Use only clean tap water. Do not add cleaning solutions, perfumes, or other chemicals to the water tank, as this can damage the appliance and void the warranty.
- Exercise caution when using steam. Steam is hot and can cause burns. Keep hands, face, and other body parts away from the steam nozzle.
- Do not direct steam at electrical outlets, appliances, or other electrical components.
- Ensure the water tank cap is securely closed before operating the unit.
- If the steam pressure in the boiler becomes too high, the system is designed to release steam directly as a safety measure.
- Inspect the power cord and hose for any damage before each use. Do not operate if damaged.

## 2. PRODUCT COMPONENTS

---

The Aspiron Steam Cleaner AS-CA019 comes with a comprehensive set of accessories for various cleaning tasks. Familiarize yourself with each component:



Image: Aspiron Steam Cleaner unit with all included accessories, including floor brush, ironing brush, glass brush, various round brushes, extension tubes, big nozzle, towels, carpet glider, gloves, squeegee, measuring cup, funnel, and cleaning wipe.

- Steam Cleaner Unit
- Floor Brush
- Ironing Brush
- Glass Brush
- Nylon Round Brushes (3 pieces)
- Stainless Steel Brushes (3 pieces)

- Extension Tubes (2 pieces)
- Big Nozzle
- Towel for Floor Brush
- Ironing Towel
- Carpet Glider
- Gloves (1 pair)
- Squeegee
- Measuring Cup
- Funnel
- Cleaning Wipe
- Storage Bag

### 3. SETUP INSTRUCTIONS

---

Follow these steps to prepare your steam cleaner for use:

1. **Unpack and Inspect:** Carefully remove all components from the packaging. Inspect the unit and accessories for any signs of damage.
2. **Water Filling:** Ensure the unit is unplugged. Unscrew the water tank cap. Use the provided measuring cup and funnel to fill the 50.7oz (1.5L) water tank with clean tap water. Do not overfill. Securely close the water tank cap.

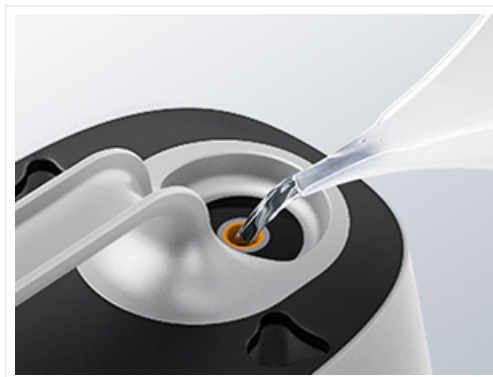


Image: Close-up of water being poured into the steam cleaner's water tank opening with a funnel.

3. **Attach Desired Accessory:** Select the appropriate cleaning attachment for your task. Connect it firmly to the steam hose or extension tubes. For example, attach the floor brush for floor cleaning or a round brush for detailed scrubbing.



Image: A hand demonstrating how to attach a nozzle accessory to the steam cleaner's hose.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The unit has a 16ft (5M) power cord, and with the 1.5M cleaning hose and 1M extension rod, it offers an approximate 11M diameter cleaning range.



Image: The steam cleaner's power cord laid out on a wooden floor, illustrating its 16.4ft (5M) length.

5. **Heating:** Turn on the power switch. The unit will begin to heat the water. This process typically takes 4-6 minutes. The indicator lights on the unit will show its status.

## 4. OPERATING INSTRUCTIONS

---

Once the unit is heated and ready, you can begin cleaning:

1. **Steam Release:** Press the steam trigger on the handle to release steam. The unit delivers hot steam at approximately 293°F and 58 PSI (4 bar steam pressure).
2. **Child Lock:** To prevent accidental steam release, engage the child lock mechanism located on the steam trigger. Push the lock button to the 'locked' position when not actively steaming or when storing.



Image: A detailed view of the red child lock button on the steam cleaner's handle, indicating its safety function.

3. **Cleaning Surfaces:** Move the steam cleaner slowly over the surface to be cleaned. For stubborn dirt, hold the steam over the area for a few seconds. The steam is effective on various surfaces including tile, hardwood, laminate, vinyl, linoleum, marble, concrete, windows, glass, countertops, stovetops, refrigerators, showers & bathtubs, toilets, upholstery, carpets & rugs, curtains, grills, decks & patio furniture, vehicles (interiors, wheels, mats), air vents & HVAC systems, grout, and appliances.

### Specific Applications:

- **Floors and Carpets:** Attach the floor brush with the appropriate towel or carpet glider. Move the brush back and forth over the surface.



Image: A person using the steam cleaner with the floor mop attachment to clean a wooden floor.

- **Grease and Grime:** Use a nylon or stainless steel round brush with the big nozzle for concentrated steam on stovetops, ovens, and grills.



Image: A brush attachment from the steam cleaner being used to clean a greasy oven rack, showing a before and after effect.

- **Windows and Glass:** Attach the glass brush or squeegee. Steam the surface and then wipe clean.



Image: The steam cleaner with a squeegee attachment being used to clean a window, with steam visible.

- **Tiles and Grout:** Use a round brush or the big nozzle to target grout lines and tile surfaces.

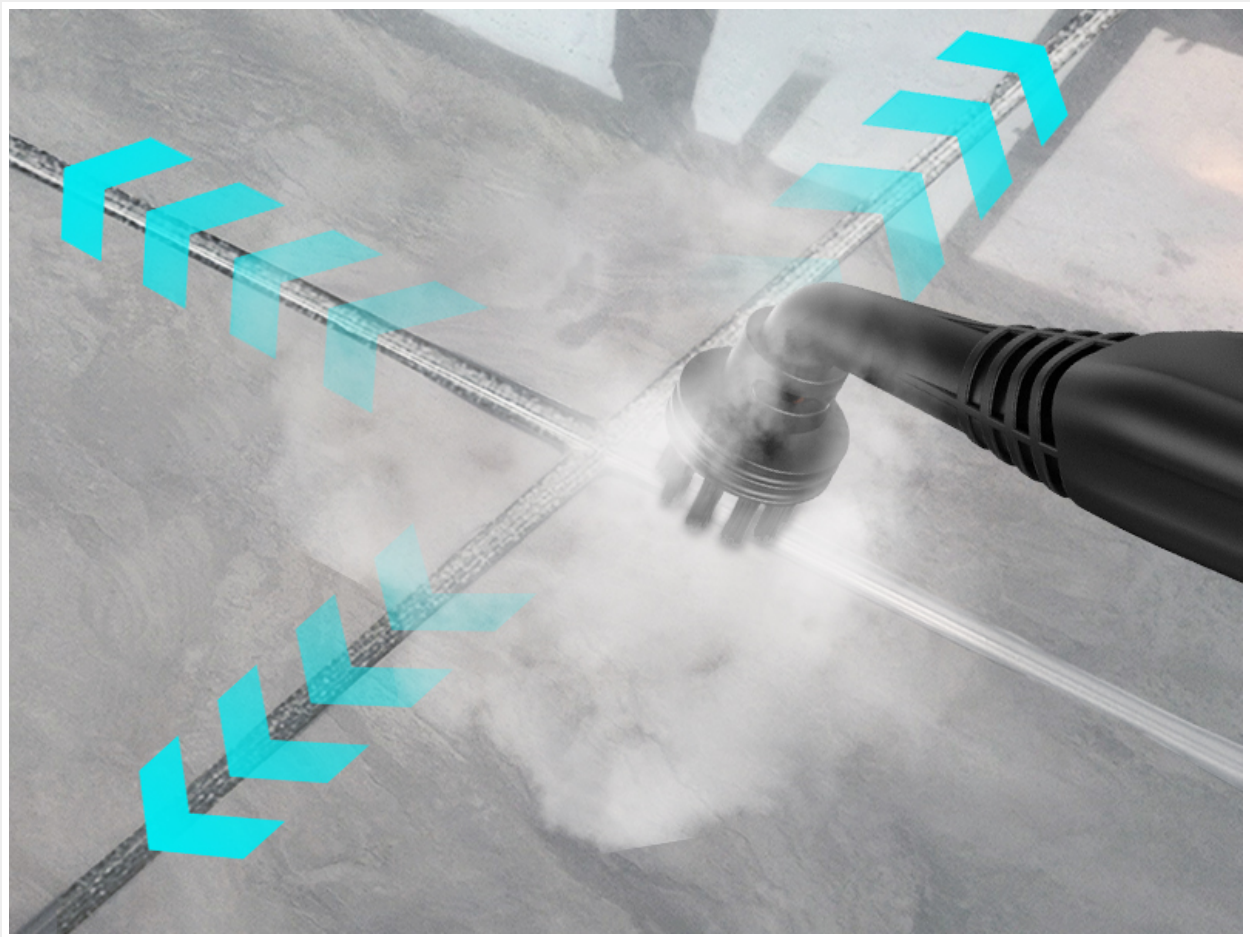


Image: A brush attachment from the steam cleaner cleaning grout lines on a tiled floor, with arrows indicating the cleaning motion.

- **Upholstery and Car Interiors:** Use the ironing brush with a towel or the big nozzle for refreshing and cleaning fabrics. Test on an inconspicuous area first.



Image: The steam cleaner being used to clean a car seat, with steam visible on the upholstery.

- **Wallpaper Residue:** The steam can help loosen wallpaper for easier removal without chemicals.



Image: A person using the steam cleaner to remove wallpaper residue from a wall, demonstrating chemical-free removal.

## 5. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your steam cleaner.

1. **Draining Water:** After each use, ensure the unit is unplugged and cooled down. Carefully open the water tank cap and drain any remaining water.
2. **Cleaning Accessories:** Wash towels and brushes with mild soap and water. Allow them to air dry completely before storing.

3. **Unit Cleaning:** Wipe the exterior of the steam cleaner with a damp cloth. Do not use abrasive cleaners or solvents.
4. **Storage:** Store the steam cleaner and all accessories in a cool, dry place. The included storage bag can be used to keep accessories organized.



Image: A woman placing steam cleaner accessories into a storage bag, demonstrating convenient storage.

## 6. TROUBLESHOOTING

---

If you encounter issues with your Aspiron Steam Cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	<ul style="list-style-type: none"> <li>• Water tank is empty or low.</li> <li>• Unit not fully heated.</li> <li>• Hose is kinked or blocked.</li> <li>• Nozzle/attachment is clogged.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the Water Shortage Indicator (red light) and refill the tank.</li> <li>• Allow 4-6 minutes for the unit to heat up.</li> <li>• Straighten the hose.</li> <li>• Clean the nozzle/attachment.</li> </ul>
Water leaking from tank or joints	<ul style="list-style-type: none"> <li>• Water tank cap not securely closed.</li> <li>• Overfilling the water tank.</li> <li>• Loose attachment connection.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the water tank cap is tightened.</li> <li>• Do not exceed the maximum fill line.</li> <li>• Verify all attachments are securely fastened.</li> </ul>
Unit does not turn on	<ul style="list-style-type: none"> <li>• Not plugged in.</li> <li>• Power outlet malfunction.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the power cord is firmly plugged into a working outlet.</li> <li>• Test the outlet with another appliance.</li> </ul>

Problem	Possible Cause	Solution
<p>Steam pressure indicator (green light) not on</p>	<p>Unit is not yet at optimal operating pressure.</p>	<p>Allow more time for the unit to heat up. The green light indicates 4 bar steam pressure.</p> <div data-bbox="651 293 1437 1301" data-label="Image"> <p>The image shows a woman in a blue top and white pants using a steam cleaner on a wooden floor. A young child is sitting on the floor nearby. The text 'AdvancedSafety' is overlaid on the image. Below the main image is an inset showing a close-up of the control panel with two indicators: a green light labeled '4 Bar Steam Pressure Indicator' and a red light labeled 'Water Shortage Indicator'.</p> </div> <p>Image: The Aspiron steam cleaner showing its control panel with a green 4 Bar Steam Pressure Indicator and a red Water Shortage Indicator.</p>

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	Aspiron
Model Name	AS-CA019
Special Feature	Child Lock
Wattage	1500 watts
Voltage	110 Volts
Power Source	AC
Item Weight	11 Pounds
Product Dimensions	20"D x 11"W x 12"H
Tank Volume / Capacity	1.5 Liters (50.7 oz)
Heat Time	4-6 Minutes (to operating temperature)
Maximum Temperature	293°F
Steam Pressure	58 PSI (4 bar)
Continuous Steaming Time	Up to 50 minutes (on a full tank)
Power Cord Length	16 ft (5M)
Cleaning Hose Length	1.5M
Extension Rod Length	1M
UPC	779614323491

## 8. WARRANTY AND SUPPORT

---

Aspiron is committed to providing quality products and customer satisfaction.

- **Warranty:** This product includes a 12-month warranty, extendable by an additional 18 months upon registration, totaling a 30-month free service agreement.
- **Returns:** Enjoy a 30-day free return policy from the date of purchase.
- **Support:** For any inquiries, technical assistance, or warranty claims, please contact our customer support team. We offer 24-hour support.
- **VIP Service:** Registered products may qualify for free replacement under our VIP service.

**Contact Support:** [support@aspiron.co](mailto:support@aspiron.co)

