



[Manuals.plus](#) /

› [FOTING](#) /

› [FOTING Pressure Power Washer CBK-KLC-T2-RD001 User Manual](#)

FOTING CBK-KLC-T2-RD001

FOTING Pressure Power Washer User Manual

Model: CBK-KLC-T2-RD001

[Introduction](#) [Safety Information](#) [Product Components](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your FOTING Pressure Power Washer. Please read all instructions carefully before assembly, operation, or maintenance. Retain this manual for future reference.



FOTING 

**MULTIFUNCTION
PRESSURE WASHER**

Max. Flow Rate	Max. Psi
3.2GPM	4500PSI
Max. Pressure	Rated Voltage
310Bar	120V/60Hz
Hose Length	Power Cord
23FT	16FT
Adjustable Nozzles	
0° / 15° / 25° / 40°	





TSS

Image 1.1: FOTING Pressure Power Washer with various accessories.

2. SAFETY INFORMATION

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury. This pressure washer operates at high pressure, which can cause serious injury if not handled correctly.

General Safety Rules:

- Read the entire manual before operating the unit.
- Do not operate the unit if any parts are damaged or missing.
- Wear appropriate personal protective equipment (PPE), including eye protection, hearing protection, and protective clothing.
- Keep children and pets away from the operating area.
- Never point the spray gun at people, animals, or electrical devices.
- Ensure all connections are secure before starting the unit.
- Do not use flammable liquids with the pressure washer.
- Always disconnect the power supply before performing any maintenance or cleaning.

Electrical Safety:

- Connect to a properly grounded outlet only.
- Do not use extension cords unless absolutely necessary and ensure they are rated for outdoor use and the appliance's power requirements.
- Keep all connections dry and off the ground.

3. PRODUCT COMPONENTS

The FOTING Pressure Power Washer comes with several components designed for efficient cleaning. Familiarize yourself with each part before assembly.



Image 3.1: Overview of the FOTING Pressure Power Washer and its included accessories.

Key Components:

- **Main Unit:** The core of the pressure washer, housing the motor and pump.
- **High-Pressure Spray Gun:** For directing the water flow. Features a child safety switch.
- **High-Pressure Water Pipe (Hose):** Connects the main unit to the spray gun.
- **Inlet Hose & Filter:** For drawing water from a source.
- **Quick Connect Nozzles (0°, 15°, 25°, 40°):** Interchangeable nozzles for various spray patterns.
- **Foam Cannon (Detergent Tank):** For applying soap or detergent.
- **Wheeled Trolley:** For easy portability.
- **Cable Storage Space & Hooks:** For organized storage of the power cord and accessories.

Easily push pressure washer to wherever cleaning is needed




Image 3.2: Key features including cable storage, child safety switch, siphon hose, and Total Stop System.

4. SETUP

Follow these steps to assemble and prepare your FOTING Pressure Power Washer for use.

Assembly Steps:

1. **Mounting Handle:** Secure the handle to the main unit using the provided swivel screws.
2. **Mounting Bracket:** Attach the accessory mounting bracket to the side of the unit.
3. **Connecting Nozzle:** Attach the desired spray nozzle to the spray gun.
4. **Install Water Outlet Pipe:** Connect the high-pressure hose to the water outlet on the main unit.
5. **Install Water Inlet Pipe:** Connect the inlet hose to the water inlet on the main unit. Ensure the filter is attached to the end of the inlet hose submerged in the water source.
6. **Rotary Switch:** Ensure the power switch is in the 'OFF' position before connecting to power.

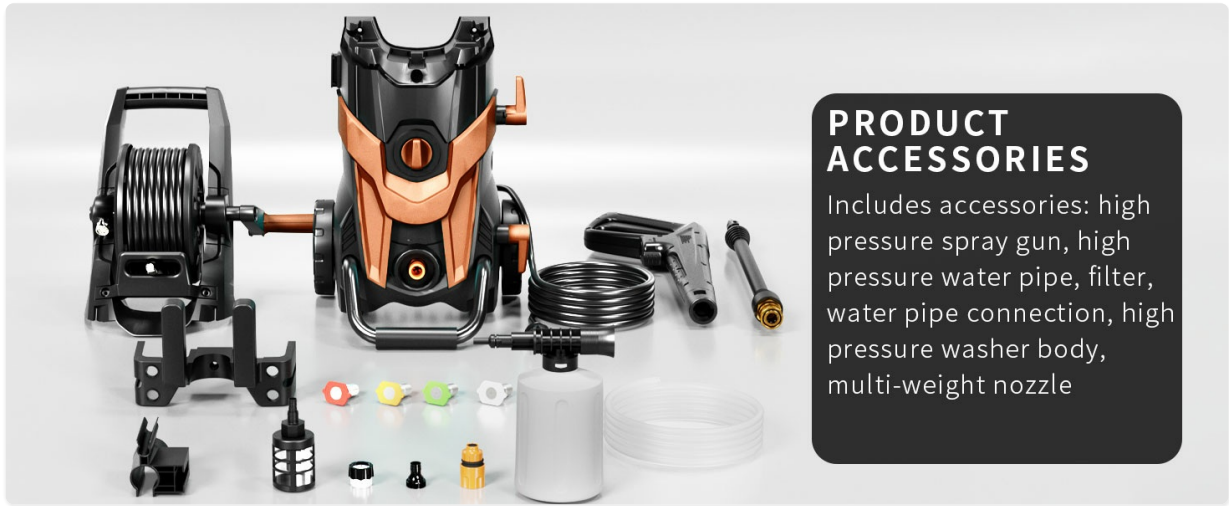

PRODUCT ACCESSORIES
 Includes accessories: high pressure spray gun, high pressure water pipe, filter, water pipe connection, high pressure washer body, multi-weight nozzle

Image 4.1: Visual guide for assembling the pressure washer components.

Water Source Connection:

The FOTING Pressure Power Washer can draw water from a standard garden hose connection or directly from a bucket using the siphon hose and filter. Ensure the water inlet hose is fully fed and free of air or impurities.

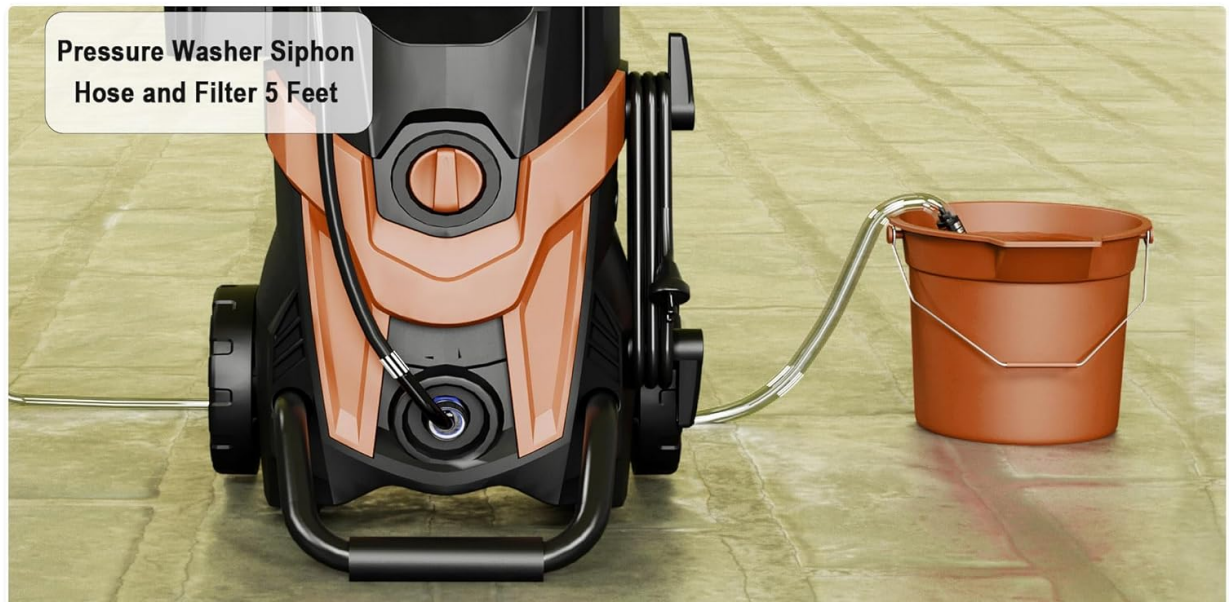


Image 4.2: Using the siphon hose to draw water from a bucket.

Setup Video Guide:

Video 4.1: This video demonstrates the FOTING Electric Pressure Washer's components, quick attachment features, and initial setup steps, including connecting the water inlet and spray gun.

Video 4.2: A quick guide showing the assembly of the pressure washer, including attaching the handle, hose, and spray gun components.

5. OPERATING INSTRUCTIONS

Once assembled and connected to a water source, your pressure washer is ready for operation. Always ensure the area is clear of obstructions and follow safety guidelines.

Starting the Unit:

1. Connect the power cord to a grounded electrical outlet.
2. Turn on the water supply to the pressure washer.
3. Press the ON/OFF switch to start the motor.
4. Engage the trigger on the spray gun to begin spraying.

Nozzle Selection:

The FOTING Pressure Power Washer includes 4 quick-connect nozzles (0°, 15°, 25°, 40°) and a detergent tank for versatile cleaning.

- **0° (Red):** Powerful jet for tough, concentrated cleaning on cracks, footpaths, and metal.
- **15° (Yellow):** Focused cleaning for concrete, asphalt, and bricks.
- **25° (Green):** Suitable for decks, fences, and terraces.
- **40° (White):** General cleaning for vehicles, windows, and outdoor furniture.

5 Spray Modes



Image 5.1: Different spray patterns from the quick-connect nozzles.

Using the Foam Cannon:

Fill the foam cannon with your desired detergent. Attach it to the spray gun to apply a rich foam for cleaning cars, fences, or other surfaces.

4 Quick Connect Nozzles with Detergent Bottlelets you tailor the spray for different surfaces



Image 5.2: Applying foam with the foam cannon for effective cleaning.

Operating Video Guide:

Video 5.3: This video demonstrates the FOTING Electric Pressure Washer in various cleaning scenarios, showcasing different nozzle applications and the foam cannon for effective cleaning of cars, patios, and other surfaces.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

After Each Use:

- Turn off the power and water supply.
- Relieve any remaining pressure in the system by squeezing the spray gun trigger.
- Disconnect all hoses and attachments.
- Drain all water from the pump, hoses, and spray gun to prevent freezing damage.
- Clean the nozzles and filter to remove any debris.
- Wipe down the unit with a damp cloth.

Storage:

Store the pressure washer in a dry, frost-free area. Utilize the integrated cable storage and accessory holders for a tidy setup.

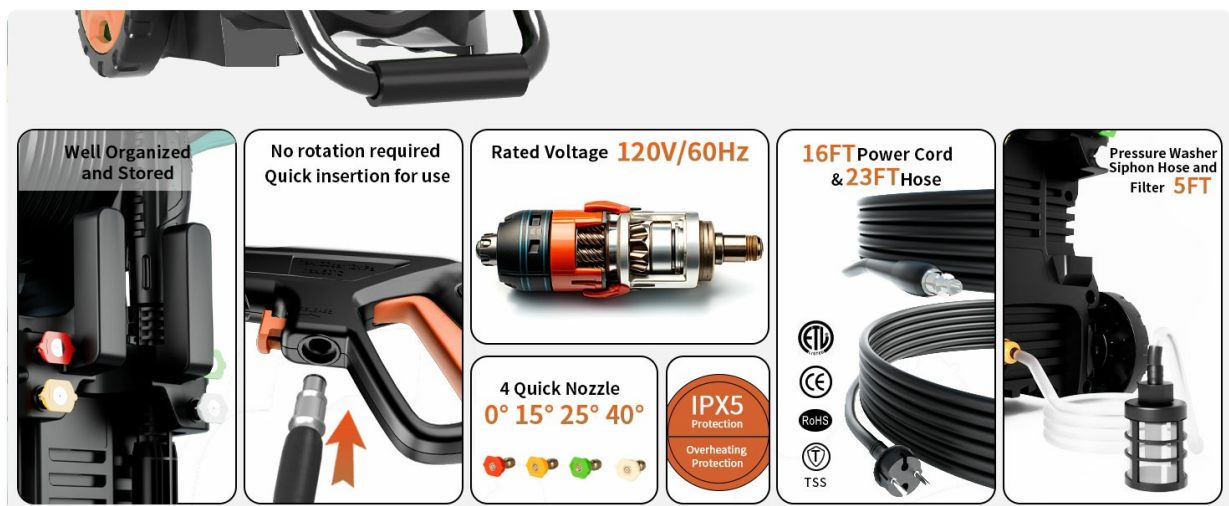


Image 6.1: Portable storage features for the pressure washer.

7. TROUBLESHOOTING

If you encounter issues with your FOTING Pressure Power Washer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not start	No power supply; ON/OFF switch not engaged; Thermal overload protection activated.	Check power connection; Ensure switch is ON; Allow unit to cool down.

Problem	Possible Cause	Solution
Low pressure	Insufficient water supply; Clogged nozzle; Air in the pump.	Ensure full water flow; Clean or replace nozzle; Purge air by running unit with trigger open until steady flow.
Water leaks	Loose connections; Damaged O-rings.	Tighten all connections; Replace worn O-rings.
Motor runs but no water sprays	No water supply; Clogged inlet filter; Air in the pump.	Check water supply; Clean inlet filter; Purge air from the system.

Tripping Problem (Overheating Protection):

If the machine trips or shuts off unexpectedly, it may be due to the overheating protection function. Allow the machine to rest for a period of time before resuming use. If the problem persists, check for a clogged spray gun nozzle or ensure the water inlet hose is fully fed without air or impurities entering the system. Also, verify that the water inlet pipe and black adapter at the bottom of the machine are completely fastened.

Video 7.1: This video provides troubleshooting tips for common issues like tripping due to overheating or water supply problems, emphasizing proper hose connection and nozzle maintenance.

8. SPECIFICATIONS

Feature	Detail
Brand	FOTING
Model Number	CBK-KLC-T2-RD001
Max Pressure	4500 PSI
Max Flow Rate	3.2 GPM
Power Source	AC (120V/60Hz)
Product Dimensions	8 x 15 x 27 inches
Hose Length	23 FT
Power Cord Length	16 FT
Color	Red

9. WARRANTY & SUPPORT

For warranty information, product registration, or technical support, please refer to the documentation included with your purchase or contact FOTING customer service directly. Keep your purchase receipt as proof of purchase.

