



[Manuals.plus](#) /

› [YESHOMY](#) /

› YESHOMY Tall Dresser (Model YH-0911) Instruction Manual

YESHOMY YH-0911

YESHOMY Tall Dresser (Model YH-0911) Instruction Manual

Model: YH-0911

[Safety Information](#) [Package Contents](#) [Setup & Assembly](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your YESHOMY Tall Dresser (Model YH-0911). Please read all instructions carefully before assembly and use to ensure safe and proper functioning of the product. Keep this manual for future reference.



Image: The YESHOMY Tall Dresser, a white unit with five drawers and silver knobs, suitable for various room settings.

SAFETY INFORMATION

WARNING: Furniture tip-over hazard. Serious or fatal crushing injuries can occur from furniture tip-over. To prevent tip-over, this furniture must be permanently attached to the wall using the anti-toppling device provided.

- Always use the anti-toppling device.
- Do not allow children to climb or hang on drawers, doors, or shelves.
- Place heaviest items in the lowest drawers.
- Never open more than one drawer at a time.
- Ensure the dresser is placed on a level surface.

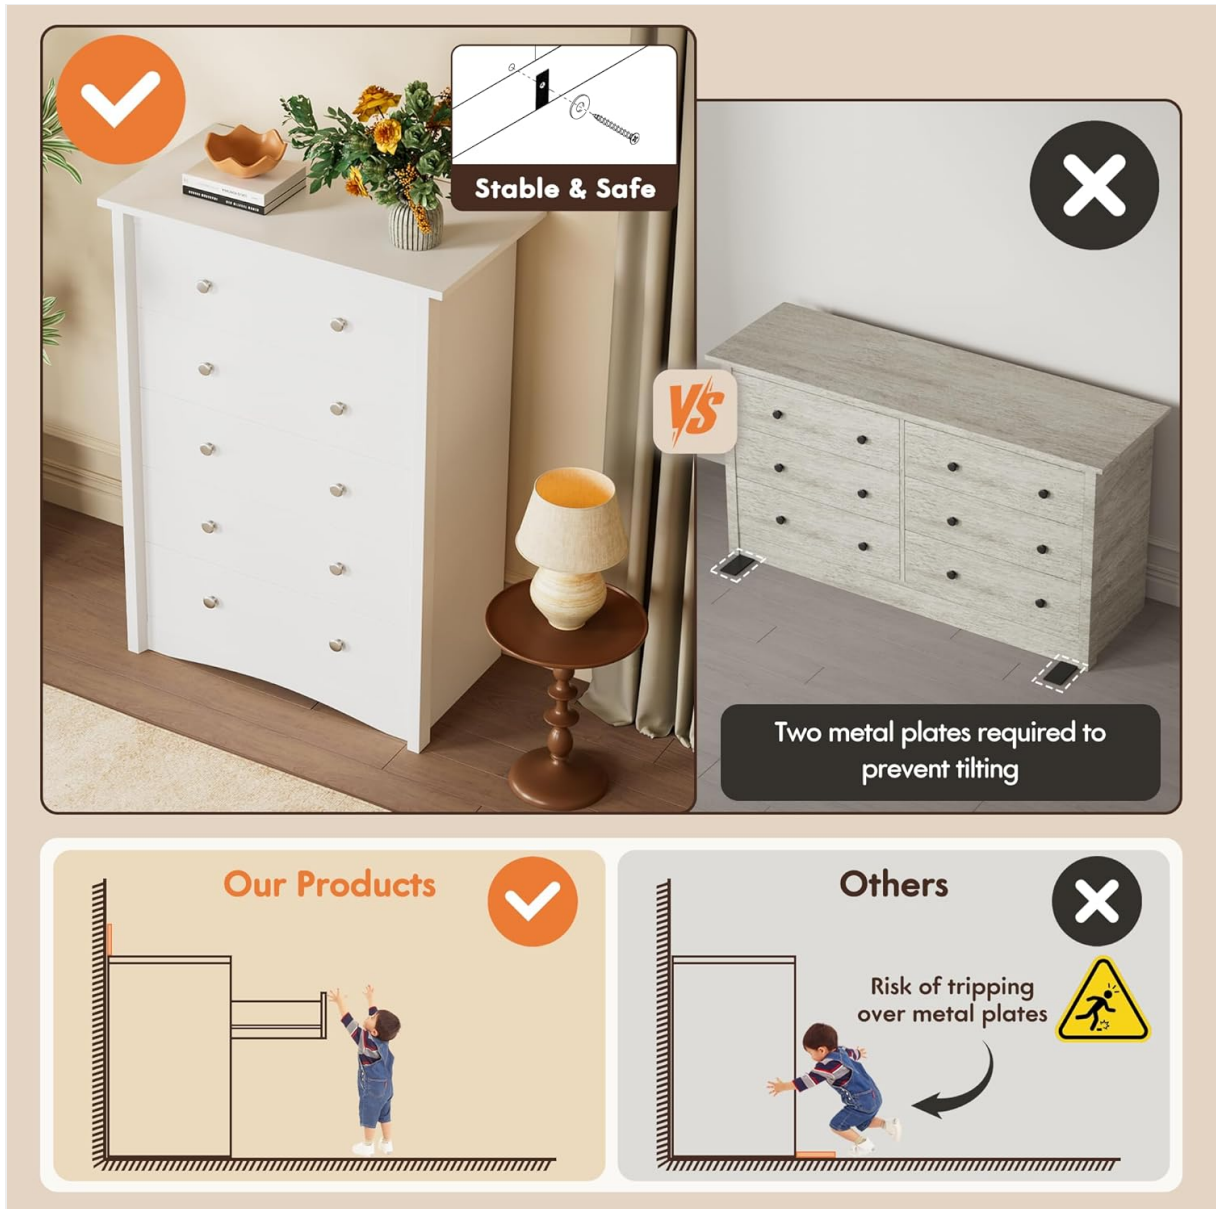


Image: Illustration demonstrating the anti-toppling design, showing how to secure the dresser to a wall for safety.



Image: A visual comparison highlighting the stable and safe design of this dresser, which uses a wall anchor, versus other designs that might pose a tripping risk with floor-level metal plates.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the parts list in the included installation manual. The package typically includes:

- Dresser components (panels, drawer parts, hardware)
- Assembly tool kit
- Installation and usage manual
- Anti-toppling device

SETUP & ASSEMBLY

Assembly is required for this dresser. It is recommended to have two adults for assembly. Follow the step-by-step instructions provided in the separate installation manual included in your package. Typical assembly involves:

1. Unpack all components and verify against the parts list.

2. Assemble the main frame of the dresser.
3. Install the drawer slides onto the dresser frame.
4. Assemble each of the five drawers.
5. Insert the assembled drawers into the dresser frame.
6. Attach the drawer knobs.
7. Secure the dresser to the wall using the provided anti-toppling device.

For visual guidance on the product's features and assembly, please refer to the official product video:

Video: Official YESHOMY White Dresser overview, demonstrating features and providing a general visual guide for the product.

OPERATING INSTRUCTIONS

The YESHOMY Tall Dresser features five smoothly sliding drawers designed for organized storage. Each drawer is equipped with smooth sliding tracks for comfortable and convenient use.

- **Opening/Closing Drawers:** Gently pull or push the drawer knobs to open and close the drawers. Avoid forcing them.
- **Weight Capacity:** Each drawer has a weight capacity of 22 lbs. The top surface can support up to 250 lbs. Do not exceed these limits to prevent damage or instability.
- **Storage:** The larger drawers are suitable for bedding and clothing, while smaller items like remote controls, cosmetics, or jewelry can be stored in the smaller drawers.



Image: The dresser with its drawers partially open, revealing various organized items such as books, clothes, and accessories.



Image: A close-up view of an open drawer, illustrating its capacity for folded items like t-shirts, pants, towels, dresses, and snacks.

MAINTENANCE

Proper care will extend the life and appearance of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that can damage the finish.
- **Spills:** Clean spills immediately with a dry cloth to prevent staining or water damage.
- **Hardware:** Periodically check and tighten all screws and fasteners to ensure stability.
- **Drawer Slides:** If drawers become stiff, a silicone-based lubricant can be applied sparingly to the slides.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned slides, debris in tracks, loose screws.	Check alignment of drawer slides. Clean tracks of any debris. Tighten screws on slides and drawer components. Apply silicone lubricant if necessary.
Dresser feels unstable or wobbles.	Uneven floor, loose connections, anti-toppling device not installed.	Ensure dresser is on a level surface. Tighten all assembly screws. Verify the anti-toppling device is correctly installed and secured to the wall.
Drawer falls off track.	Overloaded drawer, damaged slide, improper installation.	Reduce weight in the drawer. Inspect drawer slides for damage; replace if necessary. Re-install the drawer, ensuring it is properly seated on the slides.
Knobs are loose.	Loose screw attaching the knob.	Tighten the screw from the inside of the drawer.

SPECIFICATIONS

Brand: YESHOMY

Model Name: Tall Dresser for Bedroom

Model Number: YH-0911

Material: Engineered Wood

Finish Type: Painted

Product Dimensions (D x W x H): 15.7" x 31.5" x 45.3"

Number of Drawers: 5

Drawer Weight Capacity: 22 lbs per drawer

Top Surface Weight Capacity: 250 lbs

Item Weight: 79 Pounds

Assembly Required: Yes

Mounting Type: Floor Mount (with wall anchor for safety)

PRODUCT DIMENSION

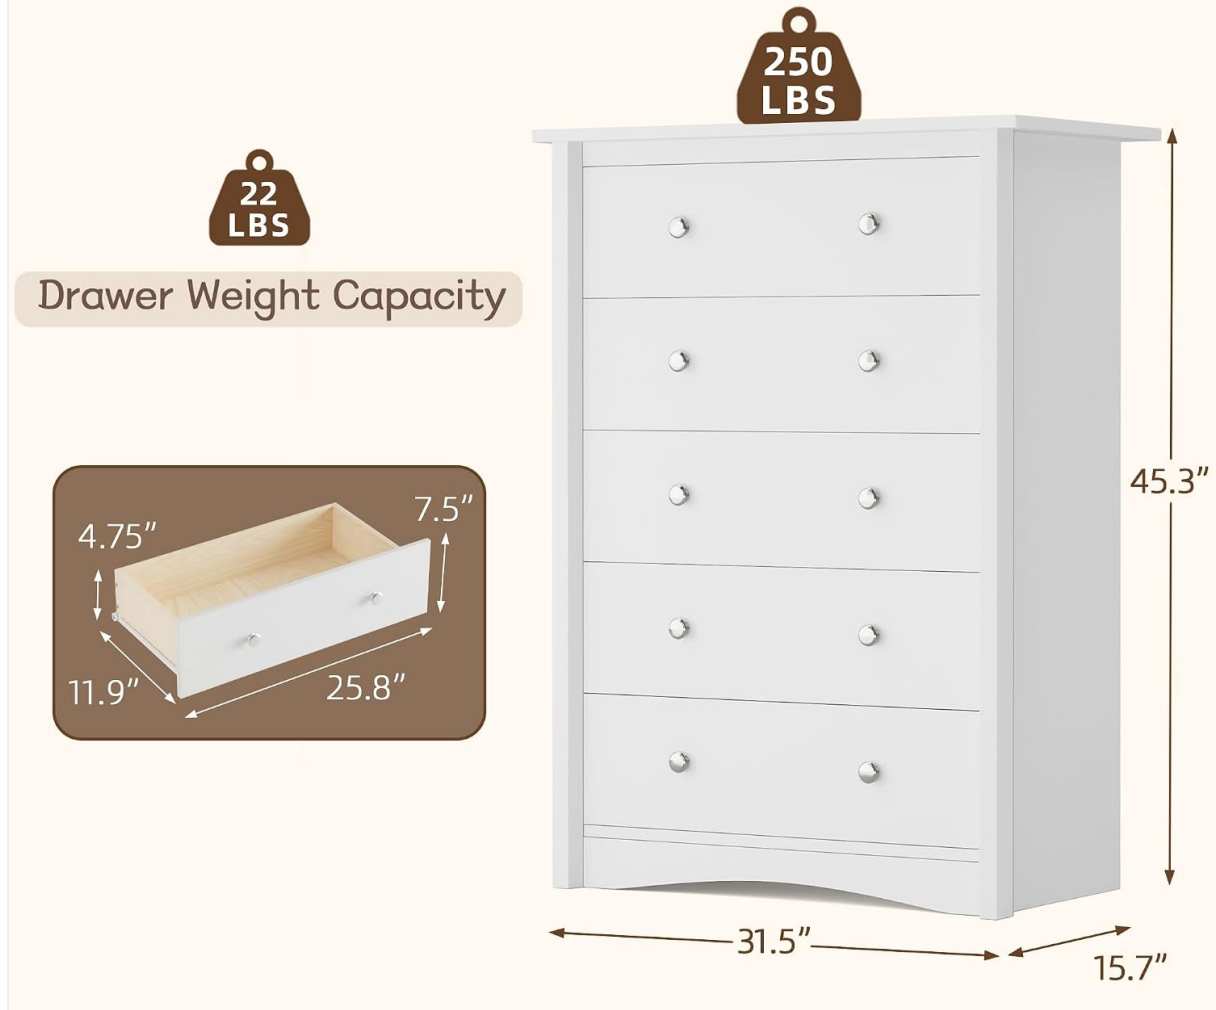


Image: Diagram showing the overall dimensions of the dresser (45.3"H x 31.5"L x 15.7"W) and individual drawer dimensions, along with weight capacities.

WARRANTY AND SUPPORT

For any issues, missing parts, or questions regarding your YESHOMY Tall Dresser, please contact our customer support team. We are committed to assisting you patiently and resolving any concerns you may have.

Please refer to your purchase documentation or the official YESHOMY website for specific warranty details and contact information.