

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CXK](#) /

› [CXK Open Ear Headphones CT13 User Manual](#)

## CXK CT13

# CXK Open Ear Headphones CT13 User Manual

Model: CT13

## 1. PRODUCT OVERVIEW

The CXK Open Ear Headphones CT13 are designed for comfort and performance, featuring an open-ear design that allows awareness of surroundings while enjoying audio. These lightweight earbuds utilize Bluetooth 5.4 for stable connectivity and offer extended battery life, making them suitable for various activities including sports and daily use.



Image: CXK Open Ear Headphones CT13 and their charging case. The earbuds feature an ergonomic hook design, and the case has a digital power display.

## 2. WHAT'S IN THE BOX

Verify that all components are present upon unboxing:

- CXK CT13 Open Ear Headphones (1 pair)
- Charging Case (1)
- USB-C Charging Cable (1)

- User Manual (1)



## What's in the Box

CXK CT13 x1  
User manual x1  
USB-C Cable x1  
Charging Case x1

Image: An illustration showing the CXK CT13 earbuds, charging case, USB-C cable, and user manual, representing the contents included in the product packaging.

## 3. SETUP

### 3.1 Charging the Headphones and Case

Before first use, fully charge the headphones and the charging case. Place the earbuds into the charging case. Connect the USB-C cable to the charging case and a power source. The LED display on the charging case will indicate the battery level. A full charge takes approximately 1.5 hours.

# LONG BATTERY LIFE FOR UNLIMITED FUN

**12H**

Single Charge

**60H**

With Charging Case



Digital Power Display

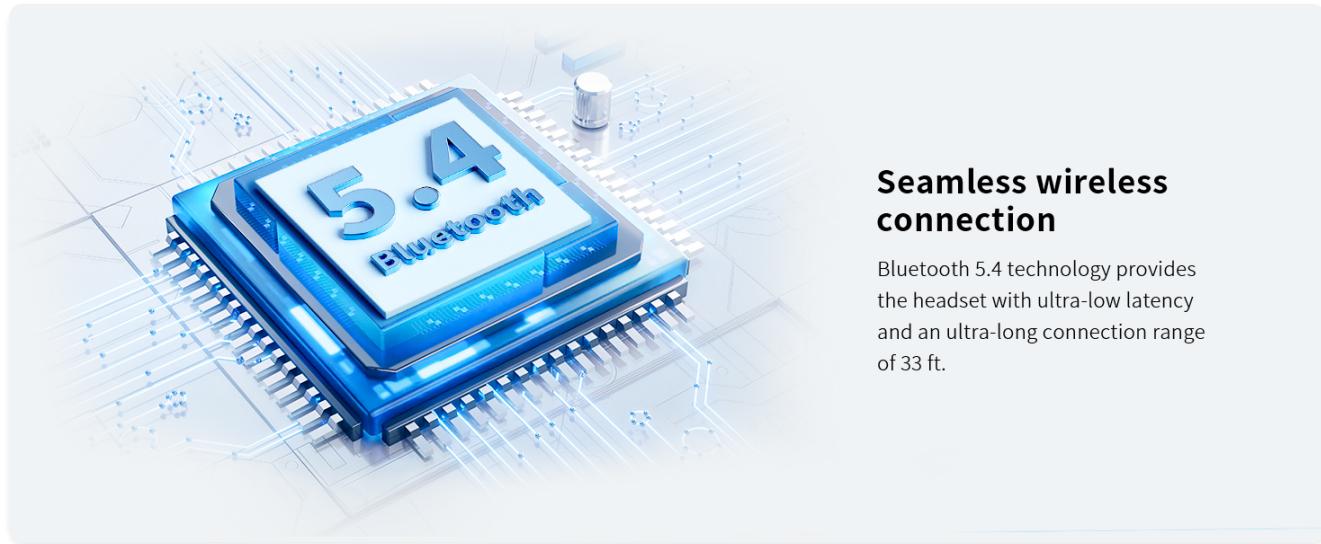


Image: The CXK CT13 earbuds are shown inside their charging case, which displays a digital battery percentage, indicating the charging status and remaining power.

## 3.2 Bluetooth Pairing

1. Ensure the headphones are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth.
4. Search for available Bluetooth devices and select "CXK CT13" from the list.
5. Once connected, a voice prompt will confirm successful pairing. The headphones will automatically reconnect

to the last paired device when taken out of the case.



### Seamless wireless connection

Bluetooth 5.4 technology provides the headset with ultra-low latency and an ultra-long connection range of 33 ft.

Image: An illustration of a Bluetooth 5.4 chip, symbolizing the seamless and stable wireless connection technology used in the headphones, offering an ultra-long connection range of 33 feet.

### 3.3 Wearing the Headphones

The CXK CT13 headphones feature an open-ear design with flexible ear hooks for a secure and comfortable fit.

1. Hang the end of the earbud on the ear helix.
2. Rotate it backward along the auricle.
3. Adjust the ear hook until the headset is worn stably and comfortably.

#### Ergonomic Design for a Secure fit



Step 1: Hang the end of the earbud on the ear helix  
Step 2: Rotate it backward along the auricle  
Step 3: Adjust the ear hook until the headset is worn stably

Image: A three-step diagram illustrating the ergonomic design and proper method for wearing the CXK Open Ear Headphones, ensuring a secure and comfortable fit around the ear.

### 4. OPERATING INSTRUCTIONS

The CXK CT13 headphones feature intuitive physical buttons for control.

# INTUITIVE BUTTON CONTROL

Touch the buttons physically to avoid accidental presses.



Answer calls



Skip tracks



Volume Control



Image: A visual guide detailing the intuitive button controls on the CXK CT13 earbuds, showing icons for answering calls, skipping tracks, and volume control.

## Button Functions

Action	Function
Click either earbud button once	Answer/End a call, Play/Pause music
Double click L/R earbud button	Previous/Next Song

Action	Function
Long press R/L earbud button	Volume +/-
Triple click either earbud button	Activate Voice Assistant
Long press either earbud button for 2 seconds	Reject call

## 5. MAINTENANCE

### 5.1 Cleaning

Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Avoid using abrasive materials or harsh chemicals. Do not submerge the charging case in water.

### 5.2 Water Resistance

The CXK CT13 headphones are IPX6 water-resistant, meaning they can withstand powerful water jets. This makes them suitable for use during workouts and in light rain. However, they are not designed for swimming or submersion in water. Ensure the earbuds are dry before placing them back into the charging case to prevent damage.

#### IPX6 Water-Resistant

You can continue to enjoy music during your sweaty workout without any interruptions.



Image: The CXK CT13 earbuds are shown with water droplets on their surface, illustrating their IPX6 water-resistant capability, allowing continued use during sweaty workouts without interruption.

### 5.3 Storage

When not in use, store the headphones in their charging case to protect them from dust, dirt, and physical damage. Store in a cool, dry place away from extreme temperatures.

## 6. TROUBLESHOOTING

## Common Issues and Solutions

Problem	Possible Cause	Solution
Headphones not turning on	Low battery	Place earbuds in charging case and charge fully.
Cannot pair with device	Bluetooth not enabled, out of range, or already paired to another device	Ensure Bluetooth is on, move closer to device, disconnect from other devices, or try re-pairing.
No sound or low volume	Volume too low on device/headphones, or not properly connected	Adjust volume on both device and headphones. Reconnect Bluetooth.
Sound cutting in/out	Interference, too far from device, or low battery	Move closer to device, avoid strong electromagnetic fields, charge headphones.
Microphone not working	Microphone blocked, or device settings	Ensure microphone is clear. Check device's audio input settings.

## 7. SPECIFICATIONS

### Technical Specifications

Feature	Detail
Model Name	CT13
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Bluetooth Range	Up to 33 Feet (10 meters)
Audio Driver Type	Bone Conduction Driver
Audio Driver Size	13 Millimeters
Frequency Response	20 Hz
Sensitivity	98 dB
Impedance	32 Ohm
Earpiece Shape	Open Ear
Single Charge Playtime	Up to 12 hours
Total Playtime (with Charging Case)	Up to 60 hours
Charging Time	Approx. 1.5 hours
Water Resistance Level	IPX6

Feature	Detail
Item Weight (each earbud)	0.27 ounces (approx.)
Control Type	Physical Buttons (Touch, Voice)
Material	Plastic, Silicone (Ear hooks)

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or the official CXK website. Keep your purchase receipt as proof of purchase for any warranty claims.