

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YESHOMY](#) /

› [YESHOMY YH-0911 Tall 5-Drawer Dresser Instruction Manual](#)

YESHOMY YH-0911

YESHOMY YH-0911 Tall 5-Drawer Dresser Instruction Manual

Model: YH-0911

1. INTRODUCTION

Thank you for purchasing the YESHOMY YH-0911 Tall 5-Drawer Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

2. SAFETY INFORMATION

To ensure safe use and prevent injury or damage, please adhere to the following safety guidelines:

- **Two-Person Assembly:** This furniture requires two people for safe assembly.
- **Surface Protection:** Assemble the dresser on a soft, clean surface like a carpet or the empty carton to prevent scratches or damage.
- **Anti-Toppling Device:** Always install the included anti-toppling device to secure the dresser to a wall. This is crucial to prevent the dresser from tipping over, especially in households with children.
- **Weight Limits:** Do not exceed the maximum weight capacity for the top surface or individual drawers.
- **Drawer Usage:** Avoid opening multiple drawers simultaneously, as this can affect stability.



Image: The anti-toppling design is crucial for safety, preventing the dresser from tipping forward.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present and undamaged. If any items are missing or damaged, please contact customer support.

Items Included:

- Dresser components
- Tool kit (for assembly)
- Installation and usage manual



Image: Product dimensions and individual drawer weight capacity of 22 lbs.

4. ASSEMBLY INSTRUCTIONS

Follow the steps below carefully. It is recommended to have two people for assembly.

Assembly Video Guide:

Your browser does not support the video tag.

Video: This official product installation manual video provides a detailed visual guide for assembling your YESHOMY dresser.

General Assembly Tips:

- Identify all parts and hardware using the provided diagrams before starting.
- Use the correct tools as indicated in the manual.
- Do not overtighten screws to avoid damaging the wood.
- Ensure all cam locks are properly engaged for a secure connection.

5. OPERATING INSTRUCTIONS

The YESHOMY Tall Dresser is designed for efficient storage and ease of use.

Drawer Usage:

- The dresser features five spacious drawers for organizing various items.
- Drawers are equipped with smooth sliding tracks for comfortable opening and closing.
- To open a drawer, gently pull the knob. To close, push firmly until it is fully seated.
- Avoid placing excessive weight in drawers; each drawer has a maximum capacity of 22 lbs.



Image: The five drawers offer ample space for various items, from clothing to accessories.

Product Overview Video:

Your browser does not support the video tag.

Video: This video demonstrates the drawer depth and overall functionality of the dresser.

6. CARE AND MAINTENANCE

Proper care will help maintain the appearance and longevity of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or water damage.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Heat and Moisture:** Keep the dresser away from direct heat sources and areas of high humidity.
- **Hardware Check:** Periodically check and tighten all hardware to ensure stability.

7. TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dresser wobbles or is unstable.	Uneven floor; loose hardware; anti-toppling device not installed.	Ensure the dresser is on a level surface. Tighten all assembly hardware. Install the anti-toppling device securely to the wall.
Drawers do not slide smoothly.	Misaligned drawer slides; debris in tracks; overtightened screws.	Check that drawer slides are correctly aligned and free of obstructions. Ensure screws holding the slides are not overtightened.
Drawers do not close completely.	Obstruction in the drawer or behind it; misaligned slides.	Remove any items blocking the drawer. Verify drawer slides are properly installed and aligned.

8. SPECIFICATIONS

- **Brand:** YESHOMY
- **Model Name:** Tall Dresser for Bedroom
- **Model Number:** YH-0911
- **Color:** Black
- **Product Dimensions (D x W x H):** 15.7" x 31.5" x 45.3"
- **Number of Drawers:** 5
- **Material:** Engineered Wood
- **Finish Type:** Painted
- **Item Weight:** Approximately 79 pounds
- **Top Surface Weight Capacity:** Up to 250 pounds
- **Individual Drawer Weight Capacity:** Up to 22 pounds
- **Assembly Required:** Yes

9. WARRANTY AND SUPPORT

For any issues, missing parts, or questions regarding your YESHOMY dresser, please contact our customer service team. We are committed to assisting you patiently.

- **Customer Support:** Refer to your purchase documentation or the retailer's website for specific contact information.
- **Warranty Information:** Specific warranty details may vary by retailer and region. Please consult your purchase receipt or the product listing for applicable warranty terms.