

[Manuals.plus](#) /

› [Yoidesu](#) /

› Yoidesu Foldable Bluetooth Keyboard User Manual

Yoidesu Yoidesu46fy85mwqi

Yoidesu Foldable Bluetooth Keyboard User Manual

Model: Yoidesu46fy85mwqi

Brand: Yoidesu

INTRODUCTION

Thank you for choosing the Yoidesu Foldable Bluetooth Keyboard. This portable wireless keyboard is designed for convenience and efficiency, allowing seamless connectivity with up to three devices simultaneously. Its ultra-slim, foldable design makes it ideal for business travel and on-the-go productivity.

Package Contents

- 1 x Yoidesu Foldable Bluetooth Keyboard
- 1 x Instruction Manual
- 1 x Type-C Charging Cable



Image: The Yoidesu Foldable Bluetooth Keyboard displayed in its fully open, flat configuration, showcasing the full keyboard layout and integrated touchpad.

SETUP GUIDE


1. Initial Charging

Before first use, fully charge the keyboard. Connect the provided Type-C charging cable to the keyboard's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged.

The keyboard has a built-in 210mAh battery, offering a standby time of up to 5 months on a single charge.

2. Powering On/Off

To power on the keyboard, simply unfold it. The keyboard will automatically power on. To power off, fold the keyboard. It will automatically power off to conserve battery.

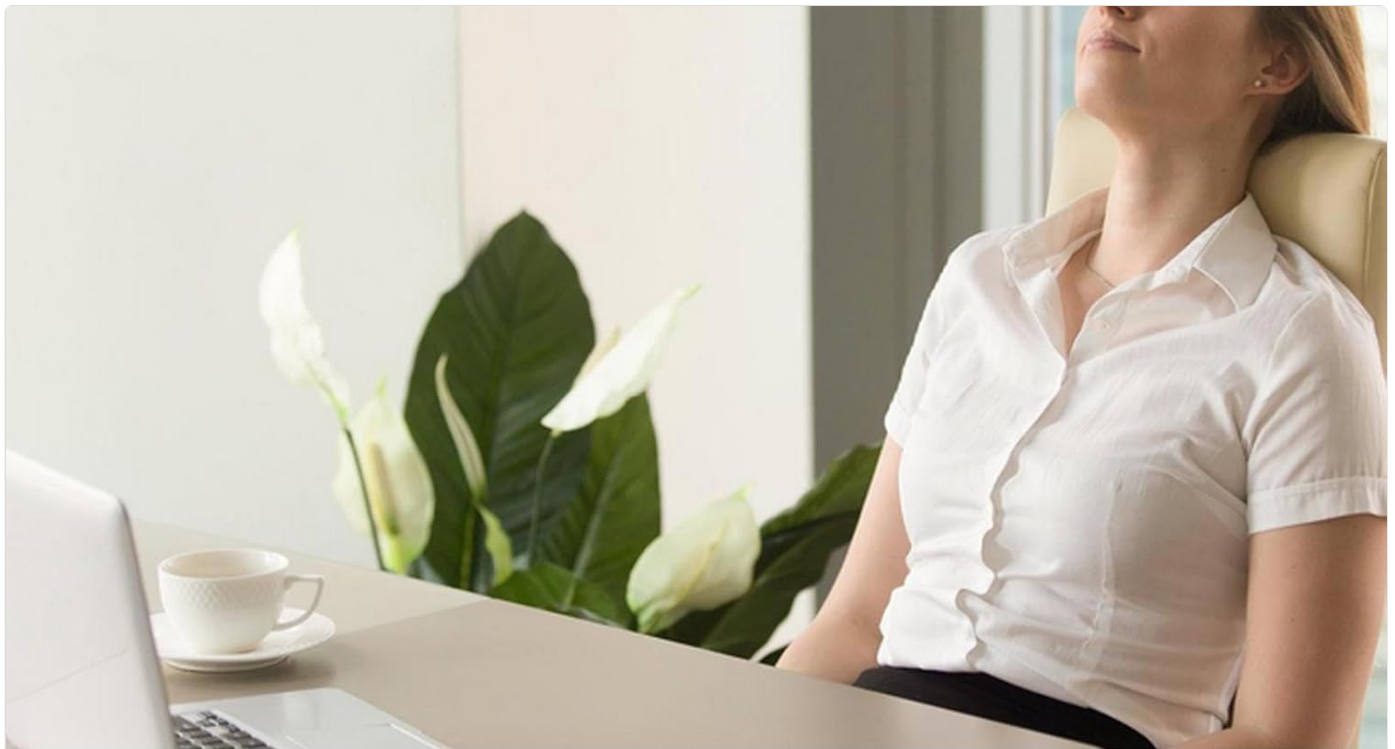

Power on Low voltage reminder Light display

Image: The keyboard in an open position on a desk, with a user typing. Text overlay indicates "Power on", "Low voltage reminder", and "Light display", referring to the keyboard's status indicators.

3. Bluetooth Pairing

The keyboard supports pairing with up to three devices. Follow these steps to pair your device:

1. Unfold the keyboard to power it on.
2. Press and hold the **Fn** key simultaneously with one of the device keys **Q** for Device 1, **W** for Device 2, or **E** for Device 3 for 3-5 seconds until the corresponding indicator light (e.g., Bluetooth indicator) starts blinking, indicating it's in pairing mode.
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings and search for available devices.
4. Select "Yoidesu Keyboard" or a similar name from the list of found devices.
5. If prompted, enter the pairing code displayed on your device using the Yoidesu keyboard and press **Enter**.
6. Once paired, the indicator light will stop blinking and remain solid or turn off, depending on the keyboard model.



Image: The keyboard is shown connected via Bluetooth to a laptop, a tablet, and a smartphone, illustrating its multi-device connectivity feature.

Switching between multiple devices for use



Image: A close-up view of the keyboard's left side, highlighting the 'Q', 'W', and 'E' keys with numerical indicators (1, 2, 3) and operating system labels (Win, And), used for switching between paired devices.

4. Switching Between Paired Devices

To switch between your paired devices, simply press the **Fn** key along with the corresponding device key **Fn + Q** for Device 1, **Fn + W** for Device 2, or **Fn + E** for Device 3).

OPERATING INSTRUCTIONS

1. Basic Typing

The Yoidesu keyboard provides a standard QWERTY layout. Its scissor switch keys offer a quiet and precise typing experience similar to a laptop keyboard.

Big Key Scissor Switch

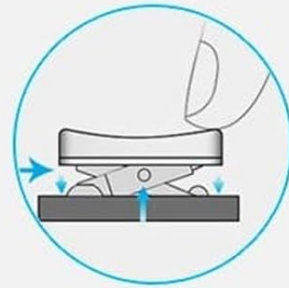


Image: A diagram illustrating the "Big Key Scissor Switch" mechanism, showing the internal structure of a key for a quiet and stable typing experience.

2. Multimedia Hotkeys

The keyboard features 12 multimedia hotkeys for quick access to various functions. To use these, press the **Fn** key simultaneously with the desired function key (F1-F12).

- **Fn + F1:** Home
- **Fn + F2:** Search
- **Fn + F3:** Select All
- **Fn + F4:** Copy
- **Fn + F5:** Paste
- **Fn + F6:** Cut
- **Fn + F7:** Previous Track
- **Fn + F8:** Play/Pause

- **Fn + F9:** Next Track
- **Fn + F10:** Mute
- **Fn + F11:** Volume Down
- **Fn + F12:** Volume Up

To toggle the default behavior of the F1-F12 keys between standard function keys and multimedia hotkeys, press **Fn + ESC**.

3. Touchpad Gestures

The integrated touchpad supports various gestures for enhanced navigation. Refer to the diagram below for common gestures:

	Left mouse key Single finger click		Return to the previous page Double finger click
	Mouse wheel Slide up and down, left and right with both fingers		Cursor sliding Single finger movement
	Single point Customize		Cursor sliding Single finger movement
	Zoom in and out of web pages Swipe left and right on the screen		Separate and close both fingers Slide left and right with both fingers
	Vertical rolling of the roller		Home Screen Three finger click
	Open all activity window Three finger downward sliding		Open and hide the bottom application bar
	Switch activity window to the left		Regional screenshot Four finger click
	Switch the activity window to the right Three consecutive strokes pointing to the right		

Image: A comprehensive diagram illustrating various touchpad gestures, including single-finger click for left mouse key, double-finger click for returning to the previous page, two-finger sliding for mouse wheel, single-finger movement for cursor sliding, pinch-to-zoom, two-finger

swipe for horizontal scrolling, three-finger click for Home Screen, three-finger downward slide for opening all activity windows, three-finger upward slide for showing/hiding the application bar, three-finger left/right swipe for switching activity windows, and four-finger click for regional screenshot.

- **Single finger click:** Left mouse key
- **Double finger click:** Return to the previous page
- **Two fingers slide up/down/left/right:** Mouse wheel scrolling
- **Single finger movement:** Cursor sliding
- **Pinch in/out with two fingers:** Zoom in/out on web pages
- **Swipe left/right with two fingers:** Separate and close both fingers (horizontal scrolling)
- **Three finger click:** Home Screen
- **Three fingers downward sliding:** Open all activity windows
- **Three fingers upward sliding:** Open and hide the bottom application bar
- **Three fingers swipe left:** Switch activity window to the left
- **Three fingers swipe right:** Switch activity window to the right
- **Four finger click:** Regional screenshot

MAINTENANCE

1. Charging the Keyboard

When the battery is low, the low voltage indicator light will flash. Connect the keyboard to a power source using the provided Type-C charging cable. A full charge typically takes a few hours.

2. Cleaning

To clean the keyboard, gently wipe the surface with a soft, dry, or slightly damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the keyboard.

3. Storage

When not in use, fold the keyboard to protect the keys and conserve battery. Store it in a cool, dry place away from direct sunlight and extreme temperatures.

Double fold design



Image: The keyboard is shown in both its open and folded states, with an additional image demonstrating how compactly it fits into a small bag, highlighting its portability and "Double fold design".



Image: The Yoidesu Foldable Bluetooth Keyboard is shown in its compact, folded state, placed next to a laptop, emphasizing its small footprint and ease of transport.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Keyboard does not power on.	Battery is depleted. Keyboard is not fully unfolded.	Charge the keyboard using the provided Type-C cable. Ensure the keyboard is fully unfolded to activate power.

Problem	Possible Cause	Solution
Unable to pair with device.	Keyboard not in pairing mode. Bluetooth on device is off. Device is out of range. Interference.	Ensure the keyboard is in pairing mode (indicator blinking). Turn on Bluetooth on your device. Move the keyboard closer to your device (within 10m). Turn off other Bluetooth devices nearby.
Keyboard disconnects frequently.	Low battery. Device is out of range. Interference.	Recharge the keyboard. Move closer to your device. Reduce interference from other wireless devices.
Keys are not responding or typing incorrectly.	Software glitch. Low battery.	Restart the keyboard (fold and unfold). Recharge the keyboard. Re-pair the keyboard with your device.
Touchpad not working.	Touchpad might be disabled (if applicable). Software issue.	Check if there's a function key to enable/disable the touchpad (refer to keyboard layout). Restart the keyboard and device.

SPECIFICATIONS

Feature	Detail
Item Type	Portable BT Folding Keyboard
Material	ABS, PU
Open Size (L x W x H)	Approx. 346.86 x 106.09 x 8.8 mm / 13.65 x 4.18 x 0.35 inches
Folded Size (L x W x H)	Approx. 187 x 106.09 x 17.8 mm / 7.36 x 4.18 x 0.70 inches
Working Distance	Up to 10 meters (33 feet)
Battery Capacity	210mAh (Built-in)
Standby Time	Up to 5 months
Connectivity Technology	Bluetooth
Compatible Operating Systems	Windows, macOS, iOS, Android
Number of Keys	87
Key Switch Type	Scissor Switch
Item Weight	10.8 ounces (approx. 306 grams)
Model Number	Yoidesu46fy85mwqi

WARRANTY AND SUPPORT

Specific warranty details for your Yoidesu Foldable Bluetooth Keyboard may vary by region and retailer. Please refer to the warranty information provided at the time of purchase or contact your retailer for details.

For technical support or inquiries, please contact Yoidesu customer service through the official website or your purchase platform. Ensure you have your product model number (Yoidesu46fy85mwqi) and purchase details ready when contacting

support.

© 2025 Yoidesu. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.