

YR15

Generic YR15 Wireless Bluetooth Active Noise Cancelling Over-Ear Headphones User Manual

Model: YR15

INTRODUCTION

Thank you for choosing the Generic YR15 Wireless Bluetooth Active Noise Cancelling Over-Ear Headphones. This manual provides detailed instructions for setting up, operating, and maintaining your headphones to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

PACKAGE CONTENTS

Please check the package for the following items:

- Generic YR15 Wireless Bluetooth Headphones
- 3.5mm Audio Cable (for wired mode)
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your headphones:



Image: Side view of the headphone earcup showing control buttons and ports. Labels include TF card port, Mode switch, Volume down/Last Song, Volume up/Next Song, Power on/off/Pause/Answer/Hang off, Headphones Port, and Type-C charging port.

- **TF Card Port:** For playing music directly from a MicroSD card.
- **Mode Switch:** To switch between different audio modes (e.g., Bluetooth, ANC).
- **Volume Down / Last Song:** Press briefly to decrease volume, press and hold to go to the previous track.
- **Volume Up / Next Song:** Press briefly to increase volume, press and hold to go to the next track.
- **Multi-function Button (Power/Pause/Answer):** Press and hold to power on/off. Press briefly to play/pause music or answer/end calls.
- **Headphones Port (3.5mm):** For wired audio connection.
- **Type-C Charging Port:** For charging the headphones.

CHARGING THE HEADPHONES

Before first use, fully charge your headphones. A full charge takes approximately 1.5 hours and provides up to 42 hours of playtime.

1. Connect the USB charging cable to the Type-C charging port on the headphones.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The indicator light will show charging status (refer to LED indicator section in manual, if available, otherwise omit).
4. Once fully charged, disconnect the charging cable.

Image: A person wearing the headphones, with text overlay highlighting extended battery life. This illustrates the long playtime capability.

SETUP AND CONNECTION

Bluetooth Pairing

To connect your headphones wirelessly via Bluetooth:

1. Ensure the headphones are charged.
2. Press and hold the Multi-function button (Power button) to turn on the headphones. The indicator light will flash, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth.
4. Search for available Bluetooth devices and select "P9" from the list.
5. Once connected, the indicator light will change (e.g., solid blue) and you will hear a confirmation tone.

Image: A stylized depiction of a BT V5.3 chip, emphasizing low latency and stable connection for Bluetooth pairing.

Wired Connection (Aux Mode)

You can use the headphones in wired mode when the battery is low or with non-Bluetooth devices:

1. Connect one end of the 3.5mm audio cable to the Headphones Port on your headphones.
2. Connect the other end of the 3.5mm audio cable to the audio output jack of your device.
3. The headphones will automatically switch to wired mode.

Image: Headphones shown with a smartphone and a tablet, illustrating both wireless and wired connection options. This highlights the dual-mode functionality.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the Multi-function button for approximately 3 seconds until the indicator light flashes.

- **Power Off:** Press and hold the Multi-function button for approximately 3 seconds until the indicator light turns off.

Music Playback

- **Play/Pause:** Press the Multi-function button once.
- **Next Track:** Press and hold the "Volume Up / Next Song" button.
- **Previous Track:** Press and hold the "Volume Down / Last Song" button.
- **Volume Up:** Press the "Volume Up / Next Song" button briefly.
- **Volume Down:** Press the "Volume Down / Last Song" button briefly.

Call Management

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for approximately 2 seconds.

Active Noise Cancellation (ANC)

The headphones feature Active Noise Cancellation to reduce ambient noise.

- **Activate/Deactivate ANC:** Use the dedicated Mode Switch button (refer to Product Overview diagram).

Image: Headphones with visual representations of sound waves and text indicating "Call noise reduction" and "Hi-Fi sound quality", demonstrating the audio enhancement and noise cancellation features.

MAINTENANCE AND CARE

- Clean the headphones regularly with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the headphones to extreme temperatures, humidity, or direct sunlight.
- Store the headphones in a cool, dry place when not in use.
- Do not attempt to disassemble or modify the headphones, as this will void the warranty.
- The ear cups are designed to be soft and replaceable for lasting comfort.

Image: Detailed view of the headphone's adjustable headband and soft, replaceable ear pads, highlighting comfort and design features relevant to maintenance.

TROUBLESHOOTING

If you encounter any issues with your headphones, please refer to the following common problems and solutions:

Problem	Solution
Headphones do not power on.	Ensure the headphones are fully charged. Press and hold the Multi-function button for at least 3 seconds.

Problem	Solution
Cannot pair with a Bluetooth device.	<ul style="list-style-type: none"> Ensure Bluetooth is enabled on your device. Make sure the headphones are in pairing mode (indicator light flashing). Move the headphones closer to your device (within 10 meters). Forget "P9" from your device's Bluetooth list and try pairing again. Restart both the headphones and your device.
No sound or low volume.	<ul style="list-style-type: none"> Adjust the volume on both the headphones and your connected device. Ensure the headphones are properly connected (Bluetooth or wired). If in wired mode, check the 3.5mm cable connection.
Active Noise Cancellation is not effective.	Ensure the ANC feature is activated using the Mode Switch. ANC is most effective against low-frequency, constant noise.

SPECIFICATIONS

Feature	Detail
Model Name	YR15
Connectivity Technology	Bluetooth, 3.5mm Jack
Wireless Communication Technology	Bluetooth 4.0
Bluetooth Range	Up to 10 meters (33 feet)
Noise Control	Active Noise Cancellation
Microphone	Built-in
Battery Life	Up to 42 Hours
Charging Time	Approximately 1.5 Hours
Earpiece Shape	Over-Ear
Material	Plastic
Item Weight	12.3 ounces (approx. 0.38 lb)
Compatible Devices	Smartphones, Laptops, Desktops, Tablets, Televisions, Smart Speakers, Gaming Consoles, Cellphones

WARRANTY AND SUPPORT

Your Generic YR15 headphones come with a 12-month warranty from the date of purchase, covering manufacturing defects. Additionally, a 30-day free return policy is available.

For technical support, warranty claims, or any questions regarding your product, please contact your retailer or the manufacturer's customer service.

© 2025 Generic. All rights reserved.