

GAOMON GM33A-6-White-LH-USK59

GAOMON 6-Drawer Dresser with Charging Station and LED Lights

Model: GM33A-6-White-LH-USK59

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Anti-Tipping Device:** This dresser includes an anti-tipping device. It is crucial to install this device securely to a wall to prevent serious injury from tipping furniture.
- **Weight Capacity:** Do not exceed the recommended weight capacity for the top surface or drawers. Overloading can compromise stability and cause damage.
- **Electrical Safety:** The built-in charging station contains electrical components. Ensure the power cord is not pinched or damaged. Do not expose the charging station to liquids.
- **Assembly:** Assembly should be performed by at least two adults. Follow all steps carefully.
- **Children:** Keep children away from the assembly area. Do not allow children to climb on or play with the dresser.



Image Description: This image illustrates the importance of the anti-tipping design. It shows a dresser securely anchored to a wall with a child pulling on a drawer, indicating stability. A contrasting image shows a dresser without an anti-tipping device,

tipping over when a child pulls on it, highlighting the hazard.

2. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present and undamaged. If any parts are missing or damaged, contact customer support.

- Dresser panels (top, bottom, sides, back)
- 6 Drawer fronts, sides, and bottoms
- Drawer slides (ball-bearing)
- Gold metal handles
- Built-in charging station with power cord
- RGB LED light strip with controller
- Anti-tipping device
- Assembly hardware (screws, dowels, cam locks, etc.)
- Instruction manual

3. ASSEMBLY INSTRUCTIONS

Follow the step-by-step instructions provided in the included assembly guide. All parts are labeled for easy identification. Two people are recommended for assembly.

3.1 General Assembly

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify each part using the labels and the assembly diagram.
3. Assemble the main frame of the dresser according to the numbered steps in the guide. Ensure all connections are secure.
4. Attach the back panel for structural integrity.

3.2 Drawer Assembly

1. Assemble each of the 6 drawers by connecting the sides, front, and bottom panels.
2. Install the ball-bearing drawer slides onto the drawer sides and the dresser frame. Ensure they are aligned for smooth operation.
3. Attach the gold metal handles to the drawer fronts.
4. Insert the assembled drawers into the dresser frame.

3.3 Anti-Tipping Device Installation

1. Position the dresser in its desired location.
2. Securely attach the anti-tipping bracket to the back of the dresser, near the top.
3. Mark the corresponding spot on the wall. Drill a pilot hole if necessary.
4. Attach the wall bracket to the wall using appropriate hardware for your wall type (e.g., wall anchors for drywall).
5. Connect the dresser bracket to the wall bracket using the provided strap or cable. Ensure it is taut.

3.4 LED Light Strip Installation

1. Carefully adhere the RGB LED light strip to the designated areas within the open display spaces of the dresser.
2. Connect the LED strip to the provided controller.
3. Route the power cable for the LED lights to the charging station's power outlet or another suitable power source.

3.5 Charging Station Integration

1. Place the built-in charging station into its designated cutout on the dresser top.
2. Route the charging station's power cord through the cable management hole and plug it into a wall outlet.



Image Description: This image highlights four key assembly and design features: (1) Spacious Storage Space, (2) Anti-fall Device Included, (3) Easy Pull Out Slide Rail, and (4) Back Panel Closure. These elements are crucial for proper assembly and functionality.

4. OPERATING INSTRUCTIONS

4.1 LED Lights Operation

The integrated RGB LED light strip is controlled by a button located near the lights.

- **Power On/Off:** Press the button once to turn the lights on. Press again to turn them off.
- **Change Color/Mode:** While the lights are on, press the button repeatedly to cycle through various colors and lighting modes.
- **Adjust Brightness:** Some models may allow brightness adjustment by holding the button or through specific button presses. Refer to the detailed LED controller instructions if provided separately.



Image Description: This image displays the adjustable RGB light strips in various colors (red, blue, green, purple, yellow,

cyan) within the dresser's open compartments. It also points out the 'Key Control' button used to turn the lights on and off and change settings.

4.2 Charging Station Usage

The built-in charging station provides convenient power access for your electronic devices.

- **AC Outlets:** Plug standard AC-powered devices into the two 125V/12A AC outlets.
- **USB Ports:** Connect USB-powered devices to the two 5V/2A USB ports for charging.
- **Power Cord:** Ensure the 3.3-foot power cord is securely plugged into a functional wall outlet.



Image Description: A detailed view of the built-in charging station, showing its two AC outlets (125V/12A) and two USB ports (5V/2A). The image also indicates the length of the power cord (3.3 feet) for connection to a wall outlet.

4.3 Drawer Operation

The drawers are equipped with ball-bearing slides for smooth and quiet operation.

- Pull drawers open and push closed gently. Avoid forcing them.
- Do not overload drawers to ensure smooth movement and prevent damage to the slides.



Image Description: This image highlights three design aspects: smooth sliding drawers with ball-bearing mechanisms, a 1-inch thickened tabletop for durability and weight support, and a stable base that enhances the dresser's overall load-bearing capacity.

5. CARE AND MAINTENANCE

- **Cleaning:** Wipe the dresser surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the engineered wood.
- **Dusting:** Regularly dust the dresser with a dry, soft cloth.
- **Drawer Slides:** Periodically check drawer slides for smooth operation. If they become stiff, a small amount of silicone lubricant can be applied.
- **Electrical Components:** Ensure the charging station and LED lights remain dry. Do not attempt to clean them with liquids while plugged in.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser is wobbly or unstable.	Uneven floor; loose assembly hardware; anti-tipping device not installed.	Ensure the dresser is on a level surface. Tighten all assembly screws. Install the anti-tipping device as per instructions.
Drawers do not slide smoothly.	Overloaded drawer; misaligned slides; debris in slides.	Reduce drawer contents. Recheck drawer slide alignment during assembly. Clean slides of any obstructions.
LED lights do not turn on.	Power cable disconnected; faulty controller; LED strip not properly connected.	Check all power connections. Ensure the LED strip is securely plugged into the controller. If issues persist, contact support.
Charging station not working.	Power cord unplugged; wall outlet not functional; device not compatible.	Ensure the charging station's power cord is fully plugged into a working wall outlet. Test the wall outlet with another device. Verify your device is compatible with the charging station's output.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	GAOMON
Model Number	GM33A-6-White-LH-USK59
Product Dimensions (L x W x H)	47.24" x 15.35" x 31.49"
Number of Drawers	6
Material	Engineered Wood
Finish Type	Polished

Feature	Detail
Item Weight	112.6 pounds
Charging Station	2 AC Outlets (125V/12A), 2 USB Ports (5V/2A)
LED Lights	RGB, Button Controlled
Assembly Required	Yes



Image Description: This diagram provides precise measurements of the dresser: 47.24 inches wide, 15.35 inches deep, and 31.49 inches high. It also shows the dimensions of the top open compartment (5.31 inches high) and a drawer (21.65 inches wide, 11.81 inches deep, 2.75 inches high).

8. WARRANTY AND SUPPORT

8.1 Returns Policy

This product is eligible for a 30-day easy return policy. Please refer to your retailer's specific return guidelines for detailed information on initiating a return or exchange.

8.2 Customer Support

For any questions, missing parts, or assistance with assembly or operation, please contact GAOMON customer support. Contact information can typically be found on the product packaging or the retailer's website.