

Tiksounds M17

Tiksounds M17 Bluetooth 5.4 Speaker User Manual

Model: M17

1. INTRODUCTION

Thank you for choosing the Tiksounds M17 Bluetooth 5.4 Speaker. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read it carefully before use to ensure optimal performance and longevity of your speaker.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from medical devices, as it may interfere with their operation.
- Do not attempt to disassemble, repair, or modify the speaker yourself. Contact qualified service personnel if needed.
- Ensure the charging port is dry before connecting the USB-C cable.
- Dispose of the battery and speaker according to local regulations.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Tiksounds M17 Bluetooth Speaker
- USB-A to USB-C Charging Cable (45cm)
- User Manual

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. The speaker features a 4000 mAh battery and charges via a USB-C port. A full charge takes approximately 4 hours.

1. Connect the provided USB-A to USB-C charging cable to the speaker's USB-C port.
2. Connect the other end of the cable to a compatible USB power adapter (not included).
3. The charging indicator will show the charging status. Once fully charged, the charging process will automatically stop.

4.2 Power On/Off

- To power on, press and hold the power button for 2 seconds.
- To power off, press and hold the power button for 2 seconds.
- The speaker will automatically power off after 10 minutes of inactivity (no Bluetooth connection) to conserve energy.

4.3 Bluetooth Pairing

The M17 speaker uses Bluetooth 5.4 for a fast and stable connection up to 15 meters.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Tiksounds M17" from the list of devices.
4. Once connected, the LED indicator will stop flashing and remain solid.

4.4 True Wireless Stereo (TWS) Pairing

You can connect two M17 speakers for an immersive stereo sound experience.

1. Ensure both M17 speakers are powered on and not connected to any other Bluetooth device.
2. On one of the speakers, press and hold the pause/play button for 2 seconds to activate TWS pairing mode.
3. The speakers will automatically connect to each other. Once paired, one speaker will act as the left channel and the other as the right channel.
4. Connect your device to one of the paired speakers via Bluetooth as described in section 4.3.

4.5 Alternative Playback Modes (AUX/TF Card)

The speaker supports playback via AUX input and TF (Micro SD) card.

- **AUX Mode:** Connect an audio device using a 3.5mm AUX cable (not included) to the speaker's AUX port. The speaker will automatically switch to AUX mode.
- **TF Card Mode:** Insert a TF (Micro SD) card with audio files into the designated slot. The speaker will automatically detect and play music from the card.

5. OPERATING INSTRUCTIONS

5.1 Button Functions

The speaker features intuitive controls for various functions:

- **Power Button:** Press and hold for 2 seconds to power on/off. Short press to answer/end calls, or reject calls.
- **Volume Up (+):** Short press to increase volume. Long press to skip to the next track.
- **Volume Down (-):** Short press to decrease volume. Long press to go to the previous track.
- **Play/Pause Button:** Short press to play/pause music. Press and hold for 2 seconds to activate TWS pairing.
- **EQ Button:** Short press to cycle through EQ modes (Deep Bass, Clear Vocal).
- **Light Button:** Short press to cycle through 5 different RGB lighting effects.

5.2 EQ Modes

The speaker offers two professional equalizer modes:

- **Deep Bass Mode:** Provides powerful and dynamic bass, suitable for genres like electronic music or hip-hop.
- **Clear Vocal Mode:** Enhances vocal clarity, ideal for podcasts, audiobooks, or outdoor listening.

5.3 RGB Lighting

The speaker includes integrated multi-color gradient RGB lights with 5 different effects. Press the light button to change the lighting mode and create an immersive atmosphere.

5.4 Hands-Free Calling

With its built-in microphone, the speaker allows for hands-free calls when connected via Bluetooth to your smartphone. Press the power button to answer or end a call.

6. MAINTENANCE

6.1 Cleaning

To clean the speaker, use a soft, dry cloth. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.

6.2 Water Resistance (IPX7)

The Tiksounds M17 speaker is IPX7 certified, meaning it can withstand brief immersion in water. It is resistant to rain, splashes, and accidental drops into water. However, it is recommended to avoid prolonged immersion and ensure the charging port cover is securely closed before exposure to water.

IPX7 Waterproof

The music plays on through any adventure
even spills, rain, or splashes



Image: The Tiksounds M17 speaker is shown partially submerged in water, highlighting its IPX7 waterproof capability. This feature allows it to be used confidently near water sources like pools or rivers, and withstands rain or splashes.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the provided USB-C cable.
No sound.	Volume too low; Device not connected; Incorrect input mode.	Increase speaker and device volume. Ensure Bluetooth is connected or AUX/TF card is properly inserted.

Problem	Possible Cause	Solution
Bluetooth connection unstable or fails.	Device too far; Interference; Speaker not in pairing mode.	Move device closer to speaker (within 15m). Avoid obstacles. Re-enter Bluetooth pairing mode on speaker and device.
TWS pairing fails.	Speakers already connected to other devices.	Ensure both speakers are disconnected from other devices before initiating TWS pairing.
Low battery warning.	Battery level is low.	A sound signal will indicate low battery. Charge the speaker promptly. If the level is too low, the speaker will automatically shut down.

8. SPECIFICATIONS

25W Powerful Audio

Crisp highs, strong midranges, punchy bass





25W
Power



5.4
Bluetooth

Image: An internal diagram of the Tiksounds M17 speaker, illustrating its dual 52mm full-range speakers and 25W power output for clear

HIFI stereo sound.

- **Brand:** Tiksounds
- **Model Number:** M17
- **Connectivity Technology:** Bluetooth 5.4
- **Speaker Output Power:** 25 Watts
- **Speaker Type:** Surround Sound
- **Battery Capacity:** 4000 mAh
- **Playtime:** Up to 24 hours (at low volume, lights off)
- **Charging Time:** Approximately 4 hours (via USB-C)
- **Waterproof Rating:** IPX7
- **Bluetooth Range:** Up to 15 meters
- **Dimensions (L x W x H):** 8.1 x 8.1 x 19.5 cm
- **Compatible Devices:** Smartphone, Tablet, Television
- **Additional Features:** RGB Lighting, TWS Stereo Pairing, AUX Input, TF Card Slot, Built-in Microphone



Image: The Tiksounds M17 speaker is shown alongside a tablet, smartphone, and PC, with icons indicating support for Pad, TF-Card, PC, and TV connections, highlighting its versatility.

9. WARRANTY INFORMATION

The Tiksounds M17 speaker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact customer support for detailed information regarding warranty terms and conditions.

10. CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact Tiksounds customer support through the retailer's platform or the official Tiksounds website. Please have your model number (M17) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question