

MOICO GL-568

MOICO GL-568 Rechargeable Kids Walkie Talkies User Manual

INTRODUCTION

Thank you for choosing MOICO Rechargeable Kids Walkie Talkies, Model GL-568. This manual provides essential information for the safe and effective use of your new walkie talkies. Please read it thoroughly before operation and retain it for future reference.

What's in the Box

Your package should contain the following items:

- 3 x MOICO Kids Walkie Talkies
- 3 x USB-C Charging Cables
- 3 x Lanyards
- 1 x User Manual



Image: Contents of the MOICO Walkie Talkies package.

PRODUCT FEATURES

- **Rechargeable Battery:** Equipped with a 1000mAh lithium battery, offering up to 48 hours of standby time on a 2-hour charge.
- **Extended Range:** Provides clear communication up to 3 kilometers (approximately 1.86 miles) in open areas.
- **Clear Sound:** Features noise reduction technology for crystal-clear audio transmission.
- **User-Friendly Design:** Lightweight (80g), compact, and designed with rounded corners for small hands.
- **Multiple Channels & Privacy Codes:** 22 channels and 99 privacy codes ensure secure communication.
- **VOX Hands-Free Mode:** Allows for voice-activated transmission without pressing the PTT button.
- **Built-in Flashlight:** Integrated flashlight for convenience in low-light conditions.
- **10 Call Tones:** Customizable call alert tones.
- **Durable Construction:** Drop-resistant design for outdoor adventures.

**Easy to
Operate**

3.85inch

1.85inch

MADE FOR LITTLE HANDS

Lightweight and portable, fits comfortably in small hands.

Image: MOICO walkie talkie designed for small hands.



Image: Key features including shockproof design and clear sound.

Charging the Battery

1. Locate the USB-C charging port on the walkie talkie.
2. Connect one end of the provided USB-C charging cable to the walkie talkie.
3. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a computer USB port.
4. The battery indicator on the LCD screen will show charging status. A full charge typically takes about 2 hours.
5. Once fully charged, disconnect the charging cable.



Image: Walkie talkie connected for USB-C charging.

Attaching the Lanyard

Thread the lanyard through the designated loop on the walkie talkie for easy carrying and to prevent loss.

Power On/Off

Press and hold the **Power/Menu** button for a few seconds to turn the walkie talkie on or off.

Adjusting Volume

Use the **Up** and **Down** arrow buttons to adjust the listening volume.

Selecting a Channel

1. With the walkie talkie on, press the **Menu** button once. The channel number will flash on the LCD screen.
2. Use the **Up** or **Down** arrow buttons to select your desired channel (1-22).
3. Press the **Menu** button again to confirm the channel selection.

Setting Privacy Codes (CTCSS/DCS)

To ensure private communication and avoid interference, you can set a privacy code:

1. After selecting a channel, press the **Menu** button twice. The privacy code number will flash.
2. Use the **Up** or **Down** arrow buttons to select your desired privacy code (1-99).
3. Press the **Menu** button again to confirm. All walkie talkies in your group must be on the same channel and privacy code to communicate.

Transmitting and Receiving

1. To transmit, press and hold the **Push-to-Talk (PTT)** button located on the side of the walkie talkie. Speak clearly into the microphone.
2. Release the **PTT** button to stop transmitting and listen for a response.
3. Ensure all walkie talkies are on the same channel and privacy code for successful communication.



Image: Children using walkie talkies for communication.

VOX (Voice Operated Exchange) Mode

VOX mode allows you to transmit without pressing the PTT button. When VOX is enabled, the walkie talkie will automatically transmit when it detects your voice.

1. Press the **Menu** button three times until the VOX icon appears on the screen.
2. Use the **Up** or **Down** arrow buttons to select a VOX sensitivity level (e.g., 1 for low sensitivity, 3 for high sensitivity).
3. Press the **Menu** button to confirm.

Using the Flashlight

Press the **LAMP** button to turn the built-in flashlight on or off.

Call Tone

To send a call tone to other walkie talkies on the same channel, briefly press the **Call** button.

MAINTENANCE

Cleaning

Wipe the walkie talkies with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the charging port is dry before charging.

Storage

Store the walkie talkies in a cool, dry place away from direct sunlight and extreme temperatures when not in use. For long-term storage, ensure the batteries are partially charged.

Durability

The MOICO walkie talkies are designed to be drop-resistant. However, avoid excessive drops or impacts to prolong their lifespan.

BUILT TO SURVIVE KIDS

Drop-proof, Durable, and Designed for
Endless Adventure



Image: Walkie talkies demonstrating drop resistance.

TROUBLESHOOTING

No Power

Ensure the walkie talkie is fully charged. Press and hold the Power/Menu button for a few seconds to turn it on.

Cannot Communicate with Other Walkie Talkies

Verify that all walkie talkies are set to the same channel and privacy code. Check that the volume is not set to minimum.

Poor Sound Quality or Static

Move closer to the other user. Ensure there are no major obstructions (buildings, hills) between the walkie talkies. Check for sources of interference. The range can vary significantly based on terrain and obstacles.

Battery Drains Quickly

Ensure the walkie talkie is fully charged before use. Reduce transmission time. VOX mode, if constantly active in noisy environments, can also consume more power.

Flashlight Not Working

Ensure the walkie talkie is powered on and the battery has sufficient charge. Press the LAMP button to activate.

SPECIFICATIONS

Feature	Detail
Model Number	GL-568
Brand	MOICO
Number of Channels	22
Frequency Range	462.5625 - 462.7125 MHz
Maximum Talking Range	3 Kilometers (approx. 1.86 miles) in open areas
Battery Type	1 x 1000mAh Lithium Polymer (included)
Charging Time	Approximately 2 hours
Average Battery Life	Up to 48 hours (standby)
Voltage	3.7 Volts
Product Dimensions (D x W x H)	1.25" x 1.85" x 5.8"
Water Resistance Level	Not Water Resistant
Manufacturer	Shenzhen Geling Technology co., Ltd



Image: Illustration of walkie talkie range variation by environment.

WARRANTY AND SUPPORT

Warranty Information

MOICO provides a **2-year warranty** for this product, covering manufacturing defects from the date of purchase.

Return and Exchange Policy

You are eligible for an exchange or return within **30 days** of purchase.

After-Sales Service

We offer **365 days** of after-sales support to ensure your satisfaction.

Customer Support

For any questions, technical assistance, or warranty claims, please contact our 24/7 customer service team via email:
moico.service@gmail.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question