

Furmax WD0912

Furmax 6-Drawer Wood Dresser (Model WD0912) Instruction Manual

Brand: Furmax | Model: WD0912

1. INTRODUCTION


This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Furmax 6-Drawer Wood Dresser, Model WD0912. This versatile furniture piece is designed for use in bedrooms, living rooms, or entryways, and can support a TV up to 65 inches. Please read this manual thoroughly before assembly and use to ensure safe and proper operation.

2. SAFETY INFORMATION

To prevent serious injury or property damage, always follow these safety precautions:

- **Anti-Tipping Device:** It is crucial to install the included anti-tipping device. Furniture tip-over can cause severe or fatal crushing injuries. Always secure the dresser to the wall using the provided hardware.
- Do not allow children to climb on or play with the dresser.
- Place the dresser on a flat, stable, and level surface.
- Do not overload drawers. Distribute weight evenly.
- Keep small parts and packaging materials away from children during assembly.

ANTI-TIPPING DEVICE

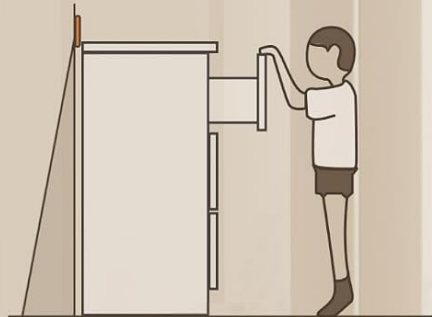

Installed



Not installed



Figure 2.1: Anti-Tipping Device Installation. This diagram illustrates the importance of correctly installing the anti-tipping device to prevent the dresser from falling over. The top image shows the device properly installed, securing the dresser to the wall. The bottom image shows an uninstalled device, demonstrating how the dresser can tip forward, posing a safety hazard.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present and undamaged. Refer to the separate parts list included in your packaging. If any items are missing or damaged, contact Furmax customer support immediately.

4. ASSEMBLY INSTRUCTIONS

Assembly of the Furmax 6-Drawer Wood Dresser requires basic tools and can be completed by following the step-by-step instructions provided in the separate assembly manual. It is recommended to have two people for assembly to ensure stability and ease of handling larger components.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.

2. Identify each part using the provided parts list.
3. Follow the numerical sequence of steps in the assembly manual.
4. Ensure all screws and fasteners are tightened securely, but do not overtighten.
5. Install the anti-tipping device as instructed in Section 2 and the assembly manual.

5. OPERATING INSTRUCTIONS (USAGE)

Your Furmax dresser is designed for efficient storage and can also serve as a TV stand. Observe the following guidelines for optimal use:

- **Drawer Operation:** The drawers are equipped with smooth sliding rails for effortless opening and closing. Use the metal handles to operate the drawers.
- **Weight Capacity:** The dresser top has a weight capacity of 250 lbs, suitable for most TVs up to 65 inches. Each drawer has a weight capacity of 20 lbs. Do not exceed these limits.
- **Storage:** Utilize the six spacious drawers for organizing clothing, linens, accessories, or other household items.

PRODUCT DIMENSIONS



DRESSER TOP
Weight Capacity



DRAWER
Weight Capacity



Figure 5.1: Product Dimensions and Weight Capacities. This image details the overall dimensions of the dresser (approximately 30.2"H, 15.6"D, 47.2"W) and the internal dimensions of a single drawer (4.3"H x 11.9"D x 20.3"W). It also specifies a dresser top weight capacity of 250 lbs and a drawer weight capacity of 20 lbs.



Figure 5.2: Drawer Storage Capacity. This image demonstrates the ample storage space provided by the six drawers, illustrating how various items such as clothing, books, and small accessories can be organized within them.



Figure 5.3: Smooth Drawer Operation. This image focuses on the metal handles and the smooth sliding mechanism of the drawers, indicating ease of use.



Figure 5.4: Multi-functional Use as TV Stand. This image shows the dresser supporting a television, emphasizing its robust top surface with a 250 lbs weight capacity, making it suitable for TVs up to 65 inches.

6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your dresser:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that can damage the finish.
- **Spills:** Clean spills immediately to prevent staining or damage to the wood.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading.
- **Humidity:** Maintain a stable humidity level to prevent wood warping or cracking.
- **Hardware:** Periodically check and tighten all hardware to ensure stability.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers stick or do not slide smoothly.	Loose drawer slides or hardware. Drawer overloaded. Obstruction in the slide mechanism.	Check and tighten all screws on drawer slides and drawer boxes. Reduce the weight in the drawer. Inspect slides for debris and clear any obstructions.
Dresser feels unstable or wobbly.	Loose assembly hardware. Uneven floor surface. Anti-tipping device not installed.	Tighten all assembly screws. Relocate the dresser to a level surface or use shims if necessary. Install the anti-tipping device securely to a wall stud.

8. SPECIFICATIONS

Brand	Furmax
Model Number	WD0912
Material	Wood
Finish Type	Painted
Product Dimensions (D x W x H)	15.7" x 47.2" x 26"
Number of Drawers	6
Item Weight	88 Pounds
Dresser Top Weight Capacity	250 lbs
Drawer Weight Capacity	20 lbs
Required Assembly	Yes

Room Type	Bedroom, Closet, Dressing Room, Living Room
-----------	---

9. WARRANTY AND SUPPORT

Furmax is committed to providing quality products and customer satisfaction. This product comes with a standard manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included with your product or contact Furmax customer service directly through their official website or the retailer where the product was purchased. Our team is available to assist you with any questions or issues you may encounter.

© 2026 Furmax. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question