

Blitzshark TRN00405H

Blitzshark 24V Kids Go Kart Instruction Manual

Model: TRN00405H

[Instructions](#) [Maintenance](#) [Safety Information](#) [Troubleshooting](#) [Setup](#) [Operating](#) [Specifications](#) [Warranty](#) [Support](#)

1. SAFETY INFORMATION

This section outlines important safety guidelines for the Blitzshark 24V Kids Go Kart. Always ensure adult supervision during operation.

General Safety Warnings:

- **Choking Hazard:** Contains small parts. Not suitable for children under 3 years.
- Always wear appropriate safety gear, including a helmet and protective pads.
- Ensure the go-kart is used in a safe, open area away from traffic, pedestrians, and obstacles.
- Do not operate near swimming pools or other bodies of water.
- Keep hands, feet, hair, and clothing away from moving parts.
- Only one rider at a time.
- Maximum load capacity is 110 LBS. Do not exceed this limit.
- Regularly inspect the go-kart for damage or loose parts before each use.

2. SETUP AND ASSEMBLY

Follow these steps for initial setup and assembly of your Blitzshark 24V Kids Go Kart.

Assembly Instructions:

1. Unpack all components and verify against the parts list in your included manual.
2. **Steering Wheel Connection:** Plug the connector from the steering wheel into the terminal on the faceguard. Tighten the steering wheel with the provided screw and nut.

Your browser does not support the video tag.

Video: Demonstrates how to connect the steering wheel and secure it during assembly.

3. **Length Adjustment:** Adjust the length of the go-kart according to the child's height using the length adjustment button. There are 3 levels of adjustment.



Image: Close-up of the length adjustment mechanism, highlighting the red buttons used to extend or retract the kart's frame.

4. **Battery Connection:** Ensure the battery is properly connected. Refer to the detailed manual for specific battery connection steps.

5. **Charging:** Fully charge the battery before first use. The multi-functional central control displays remaining power.

3. OPERATING INSTRUCTIONS

Learn how to safely operate your Blitzshark 24V Kids Go Kart.

Controls and Functions:

- **Power On/Off:** Use the main power button to turn the go-kart on or off.
- **Steering Wheel:** Controls the direction of the go-kart.
- **Gas Pedal:** Press to accelerate.
- **Brake Pedal:** Press to stop the go-kart immediately.
- **Speed Modes:** Switch between high and low speed settings using the control panel.
- **Driving Modes:** Select between Sports mode for regular driving and Drift mode for controlled sliding maneuvers.

Your browser does not support the video tag.

Video: Introduction to the go-kart's features, including speed and drift modes.

Your browser does not support the video tag.

Video: Demonstrates the drift capabilities of the 24V Kids Drift Kart.

- **Wireless Music Player:** The central control unit includes a wireless music player for entertainment.

Driving Environment:

The go-kart is designed to handle various surfaces, including asphalt roads, synthetic racetracks, and concrete floors.

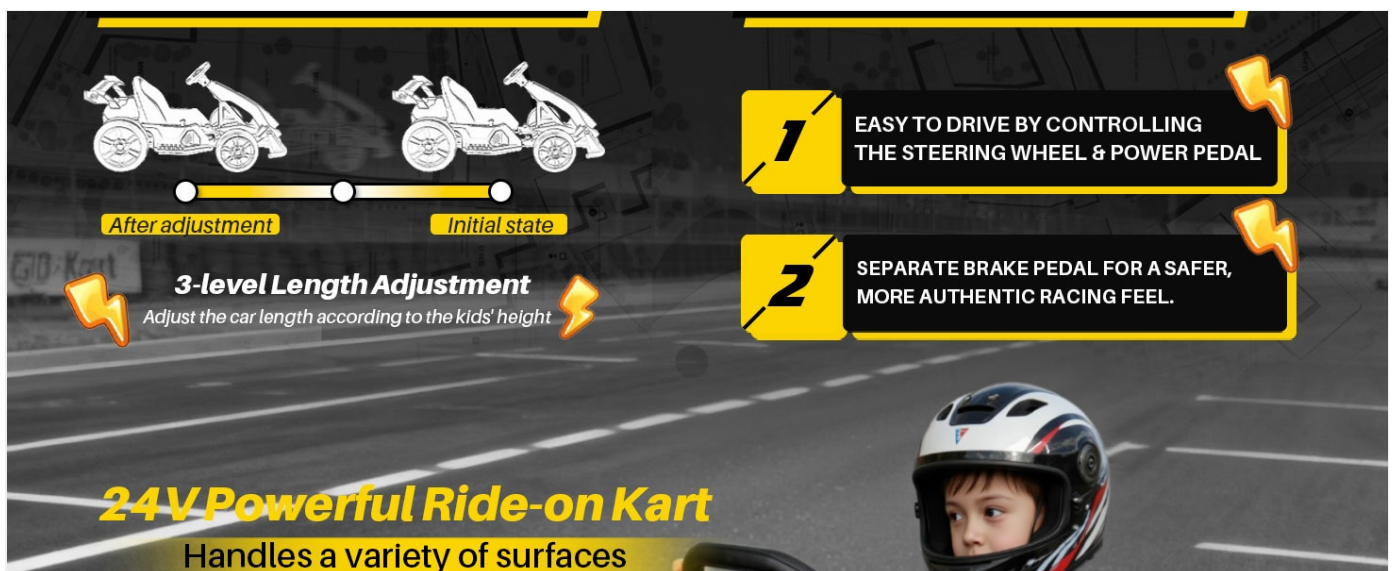


Image: Illustration of suitable driving surfaces for the go-kart.

4. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your go-kart.

- **Cleaning:** Wipe the go-kart with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Avoid spraying water directly onto electrical components.
- **Battery Care:**

- Charge the battery fully after each use.
- If storing for extended periods, charge the battery every 30 days to maintain its life.
- Do not overcharge the battery.
- **Inspection:** Regularly check for loose screws, nuts, or damaged parts. Tighten or replace as necessary.
- **Tires:** Inspect EVA tires for wear and tear.
- **Storage:** Store the go-kart in a dry, cool place away from direct sunlight and moisture.

5. TROUBLESHOOTING

This section provides solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Go-kart does not move.	Battery is low or not connected. Power switch is off. Motor issue.	Charge the battery and ensure it's connected. Turn on the power switch. Contact customer support if motor issue is suspected.
Go-kart moves slowly.	Low battery. Overload (exceeding 110 LBS). Operating on an unsuitable surface.	Recharge the battery. Ensure rider weight is within limits. Move to a smoother, harder surface.
Go-kart stops suddenly.	Loose battery connection. Overload protection activated.	Check battery connections. Reduce load. Allow motor to cool down if it was overloaded.

If the problem persists after attempting these solutions, please contact Blitzshark customer support.

6. SPECIFICATIONS

Detailed technical specifications for the Blitzshark 24V Kids Go Kart.

- **Model:** TRN00405H
- **Overall Size:** 46 x 30 x 21 inches (L x W x H)
- **Motor:** 2 x 150W / 24V (Total 300W)
- **Battery:** 7AH / 24V
- **Maximum Speed:** 4-7.5 MPH (6.5-12 KM/H)
- **Maximum Load Capacity:** 110 LBS
- **Recommended Age:** 6-12 years (Manufacturer Minimum Age: 72 months, Maximum Age: 144 months)
- **Play Time:** Approximately 1-2 hours (varies based on load, speed, surface, and temperature)
- **Tire Type:** EVA Tires
- **Material:** Durable Plastic and Steel Structure
- **Included Components:** Car

SPECIFICATION



1 KID
SUITABLE FOR AGES 6+



15.7" WIDE SEAT



DETAILED DATA

A 30 INCH / 76 CM

C 21 INCH / 53 CM

D₂ 11 INCH / 28 CM

B 46 INCH / 117 CM

D₁ 8.7 INCH / 22 CM

Image: Detailed dimensions of the go-kart, including length, width, and height measurements.

7. WARRANTY INFORMATION

Blitzshark products are manufactured to high-quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official Blitzshark website. Keep your purchase receipt as proof of purchase for any warranty claims.

8. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Blitzshark 24V Kids Go Kart, please contact our customer service team.

- **Online Support:** Visit the official Blitzshark store for FAQs and contact options. [Blitzshark Store](#)
- **Email:** Refer to your product packaging or included manual for direct email support.
- **Phone:** Refer to your product packaging or included manual for phone support numbers.

When contacting support, please have your product model number (TRN00405H) and purchase date ready.

