

Dnil 3555-YX

Dnil Portable Wireless Speaker Model 3555-YX User Manual

Model: 3555-YX

INTRODUCTION

Thank you for purchasing the Dnil Portable Wireless Speaker. This speaker is designed to provide high-definition sound quality with versatile connectivity options and dynamic RGB lighting, suitable for both indoor and outdoor environments. Please read this manual carefully to ensure proper use and optimal performance of your device.

PRODUCT FEATURES

- **TWS Mode:** Connect two identical Dnil speakers wirelessly via Bluetooth to form a dual speaker system with powerful stereo synchronization, allowing you to feel surrounded by two channels.
- **Colorful Light Mode:** Features voice-activated RGB multi-color rhythm lights, allowing you to switch between different colored lights at will. The lighting changes with the rhythm of the music, enhancing the atmosphere for parties and events.
- **Long Battery Life:** Equipped with a rechargeable Li-ion battery, providing up to 8 hours of continuous music playback time. Actual playtime may vary depending on volume level, audio content, and usage.
- **3D HD Stereo Sound:** Delivers 360° surround high-definition sound with rich bass, without noticeable distortion even at maximum volume. Creates an immersive stereo experience.
- **Multi-function Connectivity:** Built-in Bluetooth 5.0 chip for stable and long-distance transmission. Supports Micro TF card, USB Flash Drive, and AUX connections, compatible with various devices including Android phones, iPhones, iPads, TVs, and PCs.

PACKAGE CONTENTS

Please check the package for the following items:

- Dnil Portable Wireless Speaker
- Micro-USB Charging Cable
- Quick Start Guide
- Wired Microphone (if included with your specific model)



This image displays the Dnil Portable Wireless Speaker along with its accessories: a wired microphone and a Micro-USB charging cable, illustrating what is included in the package.

SETUP

1. Charging the Speaker

1. Connect the Micro-USB charging cable to the speaker's charging port (DC 5V).
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate, typically red, during charging. It will turn off or change color when fully charged.
4. Allow approximately 3-4 hours for a full charge before first use.

2. Powering On/Off

- To power on, locate the ON/OFF switch on the speaker and slide it to the "ON" position. You will hear an audible prompt.
- To power off, slide the ON/OFF switch to the "OFF" position.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. The speaker will typically enter pairing mode automatically upon power-on, indicated by a flashing LED light.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Dnil Speaker" (or similar name) from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the LED light will stop flashing.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.



This image illustrates the seamless Bluetooth 5.0 connection of the Dnii speaker, showing a user pairing their device from up to 10 meters away.

2. TWS (True Wireless Stereo) Pairing

To achieve a dual-speaker stereo experience, you can pair two identical Dnii speakers together.

1. Ensure both Dnii speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), press and hold the TWS pairing button (often labeled 'M' or a dedicated TWS icon) for a few seconds until you hear a pairing tone.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation tone, and their LED indicators will synchronize.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section. Both speakers will play audio in stereo.



This image demonstrates two Dnii speakers connected in TWS mode, providing an immersive stereo sound experience for a group activity.



WIRELESS STEREO PAIRING

This image shows two Dnii speakers set up for wireless stereo pairing, connected to a tablet for synchronized audio playback.

3. RGB Light Modes

The speaker features dynamic RGB multi-color rhythm lights. These lights can change with the volume and rhythm of the music.


- To change the RGB light mode, double-click the 'M' (Mode) key.
- Cycle through available light patterns and colors with each double-click.

PRODUCT DETAILS

Quickly understand every detail of the product



Back face details

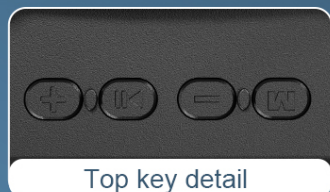


Top key detail



This image captures the Dnll speaker's dynamic colorful light show, illustrating how lighting changes with music to create a cheerful atmosphere at an outdoor event.

Color breathing RGB light

Can change with the volume of the sound Double click the M key to change the RGB light mode

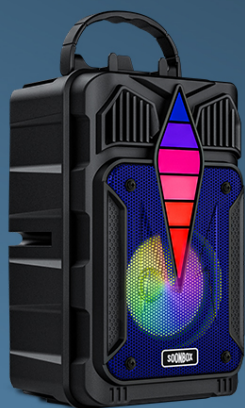

Double Click



This image provides a detailed view of the speaker's top control panel, showing the function keys including the 'M' button used to change RGB light modes.

4. Volume Control

- **Increase Volume:** Long press the "+" button. The volume will adjust according to the duration of the press.
- **Decrease Volume:** Long press the "-" button. The volume will adjust according to the duration of the press.
- **Next Track:** Short press the "+" button.
- **Previous Track:** Short press the "-" button.
- **Play/Pause:** Short press the Play/Pause button.

5. Other Input Modes (Micro TF Card, USB Flash Drive, AUX)

The speaker supports multiple audio input sources.

1. **Micro TF Card:** Insert a Micro TF card into the designated slot. The speaker will automatically switch to TF card mode and begin playing audio files.
2. **USB Flash Drive:** Insert a USB flash drive into the USB port. The speaker will automatically switch to USB mode and play audio files.

3. **AUX Connection:** Connect an audio device using a 3.5mm AUX cable to the AUX input port. The speaker will switch to AUX mode.
4. **Switching Modes:** Press the 'M' (Mode) button to cycle through Bluetooth, TF Card, USB, and AUX modes.



This image highlights the various wireless music streaming options available on the Dnll speaker, including Bluetooth, TF card, USB, AUX, and microphone inputs.



This image provides a detailed view of the speaker's back and top panels, showing the various input ports for AUX, TF card, USB, and the power switch.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, alcohol, or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** While suitable for outdoor use, avoid submerging the speaker in water or exposing it to heavy rain.
- **Battery Care:** To prolong battery life, charge the speaker regularly, even if not in frequent use. Avoid fully discharging the battery for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery or no charge.	Charge the speaker using the provided Micro-USB cable.
No sound from the speaker.	Volume too low, incorrect mode, or device not connected.	Increase speaker and device volume. Ensure the correct input mode (Bluetooth, AUX, TF, USB) is selected. Re-pair Bluetooth device.
Bluetooth pairing fails.	Speaker not in pairing mode, device too far, or interference.	Ensure speaker is in pairing mode (flashing LED). Move device closer to speaker. Turn off other Bluetooth devices. Try restarting both speaker and device.
TWS pairing fails.	Speakers not identical, too far apart, or already paired to another device.	Ensure both speakers are the same model. Place speakers close together. Disconnect both speakers from any other Bluetooth devices before attempting TWS pairing.
RGB lights not working or stuck.	Software glitch or specific mode selected.	Double-click the 'M' button to cycle through light modes. Try powering the speaker off and on again.

SPECIFICATIONS

Feature	Detail
Brand	Dnil
Model Number	3555-YX
Product Dimensions	0.46 x 0.28 x 1.35 inches
Item Weight	2.44 pounds
Batteries	1 12V battery (included)
Connectivity Technology	Bluetooth 5.0
Color	Blue (for this specific model)
Mounting Type	Tabletop
Playback Time	Up to 8 hours (varies with volume and content)

WARRANTY AND SUPPORT

Dnil products are manufactured to the highest quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Dnil website. Please retain your proof of purchase for warranty claims.

For further assistance, please contact Dnil customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question