

[Manuals.plus](#) /

› [HCDZ](#) /

› HCDZ Replacement Remote Control User Manual for Toyota Land Cruiser Rear Video DVD Entertainment System (Models 86170-60070, CY-KT4960AJ)

HCDZ 86170-60070, CY-KT4960AJ

HCDZ Replacement Remote Control User Manual

For Toyota Land Cruiser Rear Video DVD Entertainment System (Models 86170-60070, CY-KT4960AJ)

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your HCDZ Replacement Remote Control. This remote is designed to function with the 2009-2013 Toyota Land Cruiser Rear Video DVD Entertainment System, specifically replacing original remotes with model numbers 86170-60070 and CY-KT4960AJ. Please read this manual thoroughly before use.

SETUP

1. Battery Installation

The HCDZ Replacement Remote Control requires **one (1) AAA alkaline battery** for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert one AAA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

***Important:** Do not mix new batteries with old ones. Do not mix different types of batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage and corrosion.*

2. Initial Use


This replacement remote control requires **no programming**. Once fresh batteries are correctly installed, the remote is ready for immediate use with your compatible Toyota Land Cruiser Rear Video DVD Entertainment System.

Yours

We sell



Replace

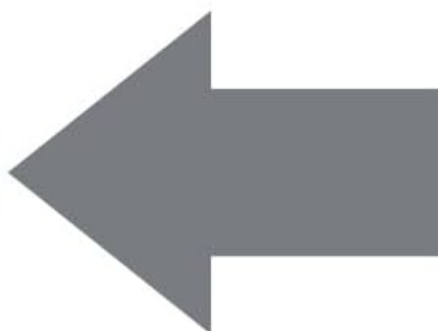

This image illustrates the difference between your original remote control and the HCDZ replacement remote. The arrow indicates that the HCDZ remote is designed to replace your existing unit.

OPERATING INSTRUCTIONS

The HCDZ Replacement Remote Control provides full functionality for your Toyota Land Cruiser Rear Video DVD Entertainment System. Familiarize yourself with the button layout and their corresponding functions.



A detailed view of the HCDZ replacement remote control, highlighting the layout and labeling of all functional buttons.

Button Functions:

- **DVD:** Selects the DVD source.
- **OFF / ON:** Powers the entertainment system off or on.
- **SPLIT:** Activates or deactivates the split-screen function.
- **VIDEO:** Selects the video input source.
- **OPTION:** Accesses additional options or settings.
- **ENT (Enter):** Confirms selections or enters menus.
- **TRACK (◀◀ / ▶▶):** Skips to the previous or next track/chapter.
- **FOLDER (▲ / ▼):** Navigates through folders.
- **VOL+ / VOL-:** Increases or decreases the volume.
- **SOURCE:** Cycles through available input sources.
- **MAP:** Accesses mapping functions (if available on your system).
- **DISC CH+ / DISC CH-:** Changes DVD discs or channels.

- **SIZE:** Adjusts the display size or aspect ratio.
- **DISPLAY:** Toggles display information on/off.
- **SUB TITLE:** Selects subtitle options.
- **AUDIO:** Changes audio tracks or languages.
- **MENU:** Accesses the main menu of the DVD or system.
- **TOP MENU:** Returns to the top menu of the DVD.
- **OPEN / CLOSE:** Opens or closes the DVD tray.
- **TITL (Title):** Accesses the DVD title menu.
- **Navigation Arrows (▲ ▼ ◀ ▶):** Navigate through menus and selections.

MAINTENANCE

Battery Replacement

When the remote control's range decreases or it becomes unresponsive, it is time to replace the battery. Follow the battery installation steps outlined in the Setup section. Always use a fresh AAA alkaline battery.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme heat, or high humidity. Prolonged exposure to such conditions can cause malfunction or damage. If storing for an extended period, remove the battery.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the battery is inserted correctly with the correct polarity.
 - Replace the battery with a fresh AAA alkaline battery.
 - Ensure there are no obstructions between the remote control and the entertainment system's infrared (IR) receiver.
 - Verify that the remote sensor is not exposed to direct sunlight or strong artificial lighting, which can interfere with the IR signal.
- **Limited range:**
 - Replace the battery. A weak battery can reduce the remote's effective range.
 - Ensure you are within the maximum operating range of 8 meters (approximately 26 feet).

SPECIFICATIONS

Brand	HCDZ
Compatible Devices	DVD system (Toyota Land Cruiser Rear Video DVD Entertainment System)
Connectivity Technology	Infrared (IR)

Maximum Range	8 Meters
Battery Type	Alkaline
Number of Batteries Required	1 AAA
Programming Required	No

WARRANTY INFORMATION

This HCDZ Replacement Remote Control comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance or if you encounter issues not covered in this manual, please refer to the seller's support channels or the HCDZ brand's official website. Ensure you have your product model number (86170-60070, CY-KT4960AJ) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question