



Manuals.plus /

› KLARSTEIN /

› Klarstein Velaire Slim Induction Hob XFC803I-B2S User Manual

KLARSTEIN XFC803I-B2S

Klarstein Velaire Slim Induction Hob XFC803I-B2S User Manual

Model: XFC803I-B2S

INTRODUCTION

Thank you for choosing the Klarstein Velaire Slim Induction Hob. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new appliance. Please read these instructions thoroughly before use and keep them for future reference.

SAFETY INSTRUCTIONS

Important: Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, burns, or injury.

- Read all instructions before using the appliance.
- Ensure the appliance is properly installed and grounded by a qualified technician.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Only use cookware suitable for induction hobs.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- Do not place aluminum foil or plastic containers on the hob.
- Keep magnetic objects away from the hob.

SETUP AND INSTALLATION

This induction hob is designed for built-in installation. Professional installation by a qualified electrician is highly recommended to ensure safety and compliance with local regulations.

Unpacking

- Carefully remove the hob from its packaging.
- Inspect the appliance for any damage during transit. Do not install if damaged.
- Retain packaging materials for future transport or disposal.

Countertop Preparation

- Ensure the countertop material is heat-resistant.
- Cut an opening in the countertop according to the dimensions provided in the specifications section of this manual. Ensure adequate ventilation space around the hob.

Electrical Connection

- The hob requires a dedicated electrical circuit. Refer to the specifications for voltage and wattage requirements.
- All electrical connections must comply with local wiring rules and regulations.
- Connect the hob to the mains power supply using appropriate wiring and a circuit breaker.

Securing the Hob

- Carefully lower the hob into the prepared countertop opening.
- Secure the hob using the provided mounting clips or brackets, ensuring it is flush with the countertop surface.

OPERATING INSTRUCTIONS

The Klarstein Velaire Slim Induction Hob features intuitive touch controls for easy operation.



Image: Overview of the Klarstein Velaire Slim Induction Hob's control panel and cooking zones. This image shows the sleek black glass surface with three distinct cooking zones and the touch slider interface located at the front.

Powering On/Off

- **To Power On:** Touch the **Power** symbol (usually a circle with a vertical line). The display will show "0" for each cooking zone.
- **To Power Off:** Touch the **Power** symbol again. The hob will turn off, and if any zone is still hot, the residual heat indicator "H" will appear.

Zone Selection and Power Adjustment

- **Select a Zone:** Place an induction-compatible pot on the desired cooking zone. Touch the corresponding zone selection

button (e.g., **Zone 1**, **Zone 2**, **Zone 3**). The display for that zone will flash.

- **Adjust Power:** Use the **Touch Slider** to increase or decrease the power level (from 1 to 9). Slide your finger along the slider or tap directly on the desired level.

Boost Function (5500W)

- The Boost function provides maximum power for rapid heating.
- **Activate Boost:** Select a cooking zone and then touch the **Boost** symbol (often a 'P' or a specific icon). The display will show "P".
- The Boost function operates for a limited time (e.g., 5-10 minutes) and then automatically reduces to a high power level to prevent overheating.

Timer Function

- The timer can be used as a minute minder or to automatically turn off a cooking zone.
- **Minute Minder:** With the hob on but no zone selected, touch the **Timer** symbol. Use the +/- buttons or slider to set the desired time.
- **Zone Timer:** Select a cooking zone and set its power level. Then touch the **Timer** symbol and set the desired cooking duration. The zone will turn off automatically when the time expires.

Child Safety Lock

- The child lock prevents accidental operation of the hob.
- **Activate Lock:** With the hob off or on standby, touch and hold the **Lock** symbol (often a key or padlock icon) for a few seconds. The display will show "Lo" or a lock icon.
- **Deactivate Lock:** Touch and hold the **Lock** symbol again for a few seconds.

Residual Heat Indicator ("H")

- After a cooking zone is turned off, if its surface is still hot, an "H" will appear in the zone's display.
- Do not touch the zone while "H" is displayed. The "H" will disappear when the zone has cooled to a safe temperature.

ThermoRecall Function

- If the hob is accidentally turned off during cooking, the ThermoRecall function can restore the last power settings.
- **To Use:** Within a short period (e.g., 30 seconds) after accidental shutdown, turn the hob back on. A **Recall** symbol or flashing "0" might appear. Touch the **Recall** symbol or the flashing "0" to restore the previous settings.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction hob.

- **Before Cleaning:** Always ensure the hob is turned off and has completely cooled down (the "H" indicator is off).
- **Daily Cleaning:** Wipe the glass surface with a soft cloth and warm soapy water. For stubborn stains, use a ceramic hob cleaner. Rinse thoroughly and dry with a clean cloth to prevent water marks.
- **Spills:** Clean spills immediately, especially sugary liquids, to prevent them from burning onto the surface and causing permanent damage.
- **Avoid:** Do not use abrasive cleaners, scouring pads, harsh chemicals, or steam cleaners, as these can scratch or damage the glass surface.
- **Control Panel:** Wipe the touch control panel with a soft, damp cloth. Ensure it is dry before operating the hob.

TROUBLESHOOTING

If you encounter issues with your induction hob, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Child lock activated.	Check circuit breaker; Deactivate child lock.
Cooking zone not heating.	Incorrect cookware; Cookware not centered; Zone not selected.	Use induction-compatible cookware; Center cookware; Select the desired zone.
"E" error code displayed.	Overheating; Internal fault.	Turn off hob, let it cool; If problem persists, contact service.
Hob makes clicking/humming noise.	Normal operation of induction technology or cooling fan.	This is normal and not a fault.
Touch controls unresponsive.	Surface is wet; Finger not covering sensor; Child lock active.	Dry the surface; Ensure full finger contact; Deactivate child lock.

For issues not listed here or if problems persist, please contact Klarstein customer support.

SPECIFICATIONS

The following are the technical specifications for the Klarstein Velaire Slim Induction Hob XFC803I-B2S:

Brand: KLARSTEIN

Model Number: XFC803I-B2S

Color: Black

Product Dimensions (D x W x H): 15.87" x 31.61" x 2.44" (40.3 cm x 80.3 cm x 6.2 cm)

Item Weight: 9.2 Kilograms

Voltage: 230 Volts

Wattage: 5500 Watts (Boost Mode)

Number of Cooking Zones: 3

Control Type: Touch Slider

Features: Timer, Child Safety Lock, Residual Heat Indicator, ThermoRecall Function

WARRANTY AND SUPPORT

Klarstein products are manufactured with care and undergo strict quality control. This product is covered by a manufacturer's warranty, details of which can be found on the official Klarstein website or by contacting their customer service.

For technical support, spare parts, or warranty claims, please contact Klarstein customer service. Have your model number (XFC803I-B2S) and purchase date ready when contacting support.

You can find more information and contact details on the official Klarstein website: www.klarstein.com