

Ejoyous Ejoyousw1psczo0vm-11

Ejoyous 4K Digital Camera User Manual

Model: Ejoyousw1psczo0vm-11

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Ejoyous 4K Digital Camera. Please read it thoroughly before operating the camera and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the camera to water or moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from direct sunlight and high temperatures.
- Use only the specified charging cable and power source.
- Do not attempt to disassemble or repair the camera yourself. Contact customer support if service is required.
- Keep out of reach of small children.

3. PACKAGE CONTENTS

Verify that all items are present in your camera package:

- 1 x Ejoyous 4K Digital Camera
- 1 x USB Charging Cable
- 1 x User Instructions (this manual)
- 1 x Storage Bag
- 1 x Hand Strap

Note: A memory card is not included and must be purchased separately.



Image: Ejoyous 4K Digital Camera, USB cable, storage bag, and hand strap.

4. PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.



Image: Front and top view of the Ejoyous 4K Digital Camera, showing the lens, flash, and power button.



Image: Back and side view of the Ejoyous 4K Digital Camera, highlighting the LCD screen and control buttons.

Key Components:

- **Lens:** Captures images and video.
- **Flash:** Provides illumination in low-light conditions.
- **LCD Screen (2.7 inches):** Displays live view, menus, and playback.
- **Power Button:** Turns the camera on or off.
- **Shutter Button:** Captures photos or starts/stops video recording.
- **Zoom Buttons (T/W):** Adjusts digital zoom (Telephoto/Wide-angle).
- **Menu Button:** Accesses camera settings.
- **Mode Button:** Switches between photo and video modes.
- **USB Port:** For charging and data transfer.
- **Memory Card Slot:** For inserting a MicroSD card (up to 128GB).

5. SETUP

5.1 Charging the Battery

The camera has a built-in 550mAh lithium battery. Before first use, fully charge the camera.

1. Connect the small end of the USB cable to the camera's USB port.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.

3. The charging indicator light will illuminate. Once charging is complete, the light will change or turn off.

5.2 Inserting a Memory Card

A memory card (MicroSD, up to 128GB) is required to save photos and videos.

1. Locate the memory card slot on the camera.
2. Insert the MicroSD card into the slot with the metal contacts facing the correct direction (refer to the diagram near the slot, if available).
3. Push the card gently until it clicks into place. To remove, push it again until it springs out.

5.3 Attaching the Hand Strap

Attach the hand strap to the designated loop on the camera to prevent accidental drops.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

Press and hold the **Power Button** to turn the camera on or off.

6.2 Taking Still Photos

1. Turn on the camera. Ensure it is in photo mode (indicated on the screen).
2. Hold the camera steady and frame your subject on the 2.7-inch LCD screen.
3. Use the **Zoom Buttons (T/W)** to adjust the digital zoom: 'T' for telephoto (zoom in) and 'W' for wide-angle (zoom out). The camera features 8x digital zoom.
4. Press the **'A' button** (Flash) to cycle through flash modes (e.g., Auto, On, Off).
5. Press the **'Scene' button** to select different scene modes for optimized shooting conditions.
6. Press the **Shutter Button** firmly to capture the image.

6.3 Recording Videos

1. Turn on the camera and switch to video recording mode using the **Mode Button**.
2. Frame your subject on the LCD screen.
3. Press the **Shutter Button** once to start recording. A recording indicator will appear on the screen.
4. Press the **Shutter Button** again to stop recording.

6.4 Menu Settings

Press the **Menu Button** to access various camera settings, including:

- Image Resolution (up to 48MP)
- Video Resolution (up to 4K)
- Self-Timer (e.g., 2s, 5s, 10s)
- Continuous Shooting Mode
- Exposure Compensation
- White Balance
- Date/Time Stamp

- Format Memory Card

Use the navigation buttons to scroll through options and the Shutter Button (or a dedicated OK button) to confirm selections.

6.5 Data Transfer

To transfer photos and videos to a computer:

1. Connect the camera to your computer using the USB cable.
2. The camera should appear as a removable disk or device on your computer.
3. Open the camera's folder to access and copy your files.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution.
- **Storage:** When not in use for extended periods, store the camera in its storage bag in a cool, dry place.
- **Battery Care:** Recharge the battery regularly, even if not in use, to maintain its lifespan. Avoid fully discharging the battery frequently.
- **Memory Card:** Periodically back up your data and format the memory card in the camera to ensure optimal performance.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on	Battery is depleted or not charged.	Charge the camera battery fully.
Cannot take photos/videos	Memory card is full, not inserted correctly, or corrupted.	Insert a new memory card, reinsert the existing card, or format the card (after backing up data).
Images are blurry	Camera shake, dirty lens, or incorrect focus.	Hold the camera steady, clean the lens, or ensure adequate lighting. The camera has an anti-shake feature.
Flash not working	Flash mode is set to 'Off' or battery is low.	Check flash settings in the menu. Ensure battery is charged.
Computer does not recognize camera	USB cable issue or driver problem.	Try a different USB port or cable. Restart both camera and computer.

9. SPECIFICATIONS

Feature	Specification
Product Type	Digital Camera

Feature	Specification
Material	Plastic and Metal
Weight	167g / 5.9oz
Photosensitive Component	CMOS 5 Megapixel Processor
Image Resolution	Up to 48MP (8000x6000)
Image Format	JPEG
Video Resolution	Up to 4K (3840x2160), 2.7K (2688x1520), FHD (1920x1080), HD (1280x720)
Video Format	AVI
Screen Size	2.7 inches
Digital Zoom	8x
Shutter Type	Electronic
Storage	Supports MicroSD card up to 128GB (not included)
Battery	Built-in 550mAh Lithium Battery
Special Features	Built-in fill light, Self-timer, Continuous shooting, Anti-shake

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.