

Energizer PRO-360

ENERGIZER WeatheReady LED Camping Lantern PRO-360 Instruction Manual

Model: PRO-360 | Brand: Energizer

1. INTRODUCTION

The Energizer WeatheReady LED Camping Lantern PRO-360 is designed to provide reliable illumination in various outdoor and emergency situations. Featuring PowerSwitch technology, it operates on either D or AA batteries, offering flexibility and extended runtime. Its robust, water-resistant design ensures dependable performance when you need it most.

2. SAFETY INFORMATION

- Always insert batteries correctly, observing polarity (+/-) markings.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the lantern will not be used for an extended period to prevent leakage.
- Keep out of reach of children.
- Do not stare directly into the LED light to avoid eye strain.

3. PACKAGE CONTENTS

- Energizer WeatheReady LED Camping Lantern PRO-360 Unit
- USB Charging Cable (for power bank function)

4. SETUP

4.1 Battery Installation

The Energizer WeatheReady LED Camping Lantern PRO-360 is designed for versatile power options. It can operate using either three D batteries for maximum performance or three AA batteries for convenience. Do not mix D and AA batteries at the same time.

1. Locate the battery compartment cover at the bottom of the lantern.
2. Twist the cover counter-clockwise to open.

3. Insert three D batteries or three AA batteries into their respective slots, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and twist clockwise until securely closed.

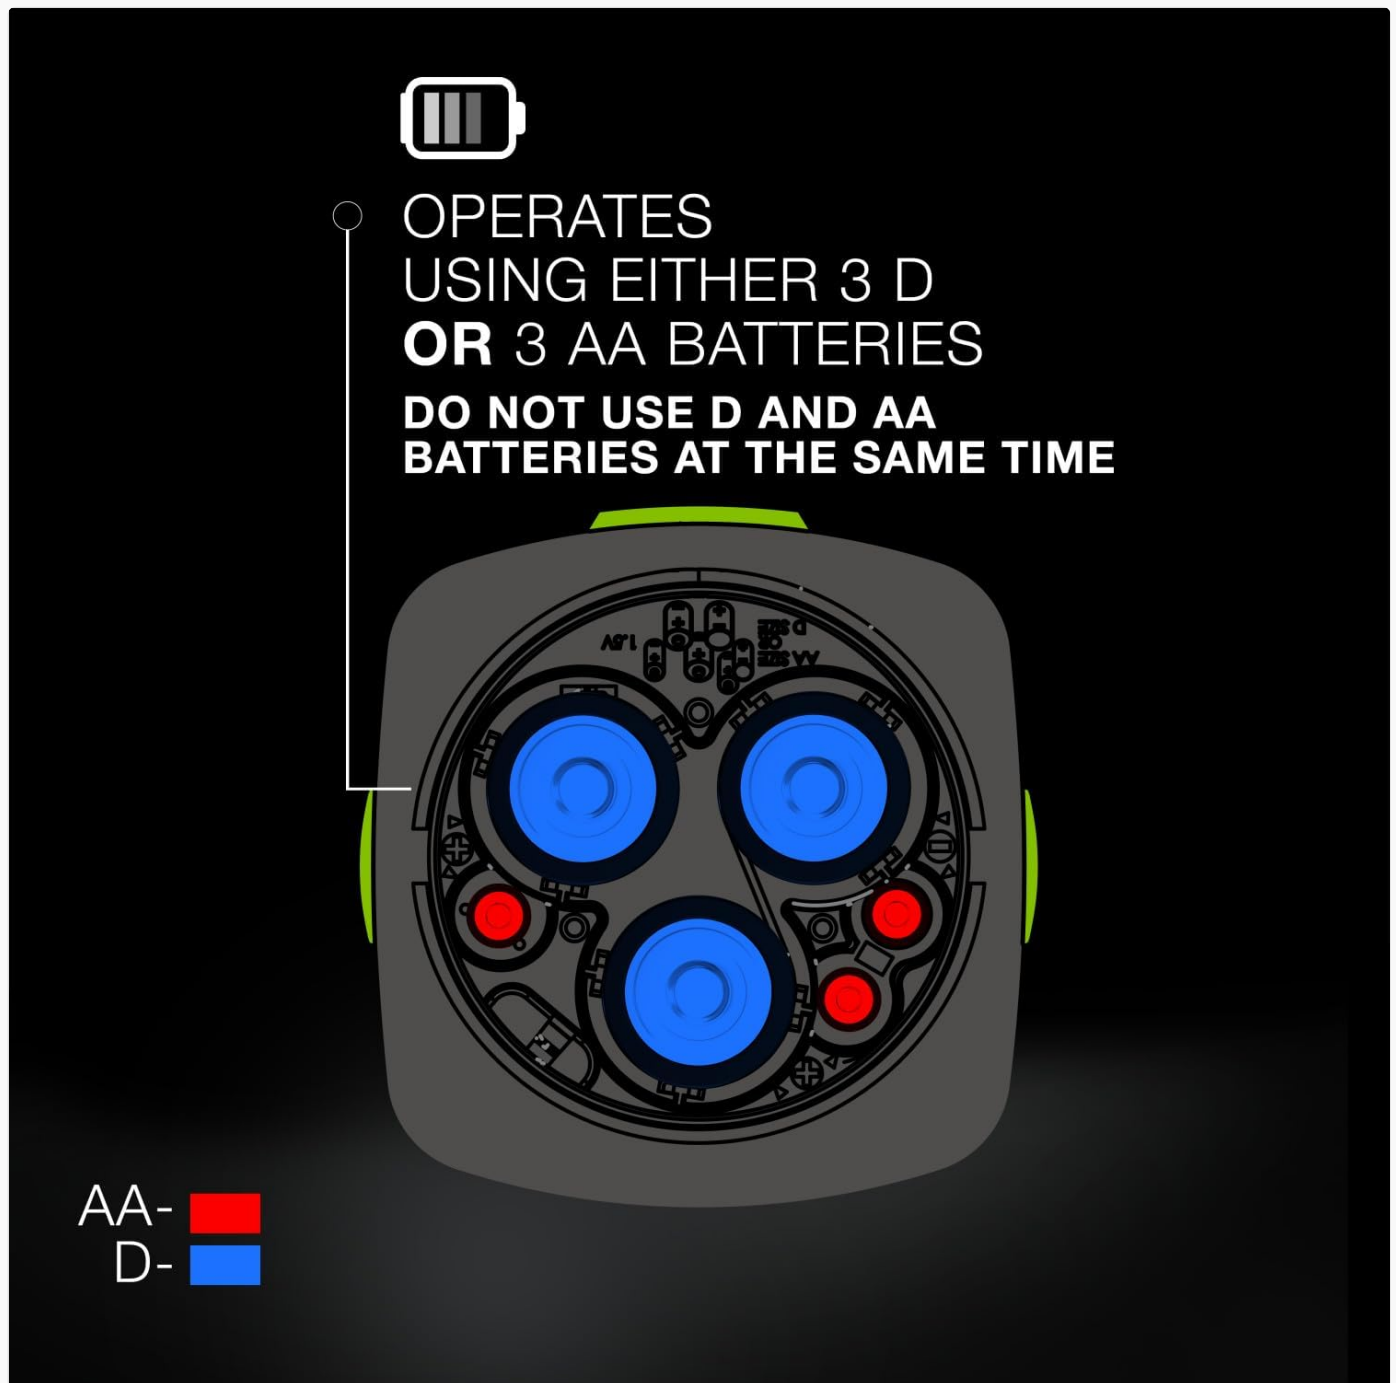


Figure 1: Battery installation diagram. The lantern supports both D and AA battery types, but not simultaneously.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Light Modes

The lantern features a glow-in-the-dark switch for easy operation in low light conditions. Press the power button to cycle through different light modes:

- **High Mode:** Provides maximum brightness (500 lumens) for illuminating large areas.
- **Low Mode:** Offers extended runtime (up to 650 hours) for prolonged use and softer illumination.
- **Night Light Mode:** Emits a diffused, warm light for soft illumination, ideal for sleeping or subtle ambient lighting.

VIVID, BRIGHT
500
LUMENS*
IN HIGH MODE



** With D batteries. Light output measured from LED. Value is only applicable to the LED. Actual device light output may vary.*

Figure 2: Visual representation of the lantern's various light modes and the glow-in-the-dark switch.

5.2 USB Charging Functionality (Power Bank)

The lantern is equipped with a USB port, allowing you to use its batteries to charge other devices such as smartphones or tablets. This feature is particularly useful during power outages or when away from traditional power sources.



Figure 3: The USB port allows the lantern to function as a power bank for external devices.

5.3 Water Resistance

The Energizer WeatheReady LED Camping Lantern PRO-360 is IPX4 water-resistant, meaning it can withstand splashing water from any direction. This makes it suitable for outdoor use in various weather conditions. It is also impact-resistant up to 1 meter.

IPX4 WATER RESISTANCE

WITHSTANDS SPLASHING



Figure 4: The lantern's IPX4 rating ensures protection against splashing water.

5.4 Versatile Design

The lantern features a 360-degree light output, providing comprehensive illumination. Its design includes a sturdy handle for carrying or hanging, and a stable base for tabletop use.



Figure 5: The lantern provides 360-degree light, suitable for various environments.

6. MAINTENANCE

6.1 Battery Replacement

When the light output diminishes, it is time to replace the batteries. Follow the battery installation steps in Section 4.1.

6.2 Cleaning

Wipe the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.3 Storage

Store the lantern in a cool, dry place. Remove batteries if storing for extended periods to prevent corrosion.

7. TROUBLESHOOTING

- **No Light:** Check battery orientation and ensure batteries are fresh.

- **Dim Light:** Batteries may be low; replace them.
- **Device Not Charging via USB:** Ensure the lantern has sufficient battery power. Try a different USB cable or device.

8. SPECIFICATIONS

- **Brand:** Energizer
- **Model:** PRO-360 (Item model number: 039800138958)
- **Light Source Type:** Light Emitting Diode (LED)
- **Brightness:** 500 Lumens (High Mode)
- **Power Source:** Battery Powered (Uses 3 D or 3 AA Energizer batteries)
- **Battery Life:** Up to 150 Hours (High Mode with D batteries), Up to 650 Hours (Low Mode with D batteries)
- **Water Resistance Level:** IPX4 (Water Resistant)
- **Impact Resistance:** Up to 1 meter
- **Material:** Plastic
- **Product Dimensions:** 3.94"L x 4.17"W x 9.45"H
- **Item Weight:** 1.21 pounds (0.55 Kilograms)
- **UPC:** 039800138958

9. OFFICIAL PRODUCT VIDEOS

Energizer Weatheready 360 LED Lantern, 500 Lumens

This video from Energizer Batteries- Consumables provides an overview of the Energizer WeatheReady 360 LED Lantern, highlighting its 500 lumens brightness and features.

Product Demonstration Video

This product demonstration video from Amazon Product Imaging showcases the functionality and features of the Energizer WeatheReady LED Camping Lantern PRO-360.

10. WARRANTY & SUPPORT

Warranty information for this product is not explicitly provided as applicable. For product support or inquiries, please contact Energizer customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question