

Ninja FO101

Ninja French Door Premier Air Fryer, Convection Oven, Toaster FO101 Instruction Manual

Model: FO101

INTRODUCTION

Welcome to the comprehensive instruction manual for your Ninja French Door Premier 3-in-1 Air Fryer, Convection Oven, and Toaster (Model FO101). This appliance is designed to offer versatile cooking solutions, combining the functionalities of an air fryer, convection oven, and toaster in a single unit. This manual provides essential information for safe operation, setup, usage, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.



Figure 1: The Ninja French Door Premier Air Fryer, Convection Oven, Toaster FO101.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury, or damage. Read all instructions before using this appliance.

- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts when handling hot materials.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer; this may cause injuries.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.

- A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar products.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.

WHAT'S INCLUDED

Your Ninja French Door Premier comes with the following components:

- Ninja French Door Premier Air Fryer, Convection Oven & Toaster (Main Unit)
- 5-qt Air Fry Basket
- Sheet Pan
- Broil Rack
- Wire Rack
- Removable Crumb Tray
- Chef-created Recipe Book with 15 recipes

 
WHAT'S IN THE BOX



1800-WATT NINJA® FRENCH DOOR PREMIER AIR FRYER, CONVECTION OVEN & TOASTER

with **SMART SURROUND AIR TECHNOLOGY**

*Depth measurement includes handles on the front and cord wrap on the back.

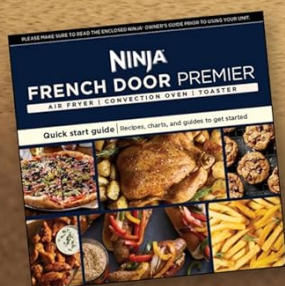


CHEF-CREATED
RECIPE BOOK



SHEET
PAN



 
5-QT AIR
FRY BASKET

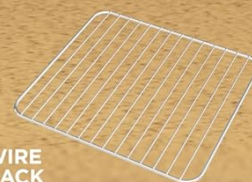

WIRE
RACK



 REMOVABLE
CRUMB TRAY

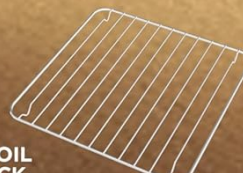

BROIL
RACK



Figure 2: All components included with your Ninja French Door Premier.

PRODUCT FEATURES

The Ninja French Door Premier is engineered with advanced features for superior cooking performance:

- **Largest Air Frying Capacity:** Cook family-sized meals with ease in the included 5-qt air fry basket that fits up to 5 lbs of French fries.
- **10-in-1 Versatility:** Choose from Air Fry, Air Roast, Whole Roast, Bake, Pizza, Broil, Reheat, Dehydrate, Toast, and Bagel—all in one appliance.
- **Faster Cooking:** Up to 60% faster cooking compared to other conventional ovens with quick 90-second preheat.
- **450°F Cyclonic Air Technology:** Achieve fast, even cooking with no rotating required for Bake, Pizza, and Whole Roast functions.
- **Healthier Frying Results:** Enjoy the same crispy textures with up to 75% less fat than traditional frying methods.
- **Premier French Door Design:** One-handed pull doors open simultaneously for a sleek, convenient cooking experience.

- **Non-Toxic Cooking:** All cooking surfaces are made without PFAS for meal prep and peace of mind.
- **Easy to Clean:** Dishwasher-safe air fry basket, sheet pan, wire rack, broil rack, and removable crumb tray make cleanup effortless.

AIR FRY	AIR ROAST	WHOLE ROAST	BAKE	PIZZA
				

10-IN-1 FUNCTIONALITY

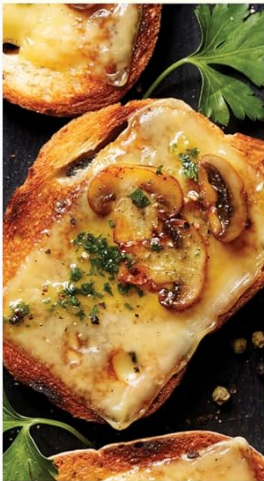 
				
BROIL	REHEAT	DEHYDRATE	TOAST	BAGEL

Figure 3: Visual representation of the 10-in-1 cooking functions.

SETUP

1. **Unpack:** Carefully remove the appliance and all accessories from the packaging. Remove any packing materials, promotional labels, and tape from the unit.
2. **Placement:** Place the main unit on a clean, dry, level surface, ensuring adequate clearance (at least 6 inches) from walls or other appliances for proper ventilation.
3. **Initial Cleaning:** Before first use, wipe down the exterior of the unit with a damp cloth. Wash all accessories (air fry basket, sheet pan, broil rack, wire rack, removable crumb tray) in warm, soapy water or in the dishwasher. Rinse thoroughly and dry completely.
4. **First Run (Optional but Recommended):** To eliminate any manufacturing odors, run the appliance empty on

the 'Air Fry' function at 400°F for 15 minutes. A slight odor is normal during this initial use.

Your browser does not support the video tag.

Video 1: Unboxing and initial overview of the Ninja French Door Premier oven.

OPERATING INSTRUCTIONS

The Ninja French Door Premier offers 10 versatile cooking functions. Always refer to the included recipe book for specific cooking times and temperatures for various foods.

General Operation:

1. Plug the appliance into a grounded electrical outlet.
2. Press the Power button to turn the unit on.
3. Use the Mode button or the selection dial to choose your desired cooking function (e.g., Air Fry, Bake, Toast).
4. Adjust the temperature and time using the dedicated buttons or the selection dial. The temperature range is 100°F to 450°F.
5. Place food on the appropriate accessory (air fry basket, sheet pan, wire rack, broil rack) and insert into the oven at the recommended rack level.
6. Close the French doors.
7. Press the Start/Stop button to begin cooking.
8. The oven will preheat quickly (approx. 90 seconds) before starting the cooking cycle.
9. Monitor food through the glass doors or use the internal light button.
10. Once cooking is complete, the unit will beep. Carefully remove food using oven mitts.

Specific Functions:

- **Air Fry:** Ideal for crispy foods with little to no oil. Use the 5-qt Air Fry Basket.
- **Air Roast:** For roasting meats and vegetables with a crispy exterior. Use the Sheet Pan or Wire Rack.
- **Whole Roast:** Perfect for larger cuts of meat or whole poultry. Use the Sheet Pan.
- **Bake:** For traditional baking of cakes, cookies, and casseroles. Use the Sheet Pan.
- **Pizza:** Optimized for cooking fresh or frozen pizzas. Use the Sheet Pan.
- **Broil:** For quick cooking and browning. Use the Broil Rack on the Sheet Pan.
- **Reheat:** To warm up leftovers while maintaining texture.
- **Dehydrate:** For making dried fruits, vegetables, or jerky. Use the Wire Rack.
- **Toast:** For bread and pastries. Adjust shade level as desired.
- **Bagel:** Specifically designed for bagels. Adjust shade level.

Your browser does not support the video tag.

Video 2: A detailed review of the Ninja French Door Premier Air Fryer, Convection Oven, and Toaster, demonstrating its features and cooking capabilities.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your appliance. Always unplug the unit and allow it to cool completely before cleaning.

- **Exterior:** Wipe the exterior with a clean, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior:** Wipe the interior walls with a damp cloth or sponge. For stubborn stains, use a mild liquid soap and a non-abrasive sponge. Ensure the interior is completely dry before next use.
- **Accessories:** The air fry basket, sheet pan, wire rack, broil rack, and removable crumb tray are all dishwasher-safe. For best results, hand wash with warm, soapy water.
- **Removable Crumb Tray:** Pull out the crumb tray from the bottom front of the unit. Empty crumbs and wash the tray after each use to prevent buildup.

EASY TO CLEAN

Dishwasher-safe accessories
make cleanup effortless.



Figure 4: Dishwasher-safe accessories simplify the cleaning process.

TROUBLESHOOTING

If you encounter any issues with your Ninja French Door Premier, refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check your circuit breaker.
- **Food is not cooking evenly:** Ensure food is arranged in a single layer in the basket/pan. Avoid overcrowding. For some functions, flipping or rotating food halfway through cooking may be necessary.

- **Excessive smoke:** This can be caused by fat drippings burning on the heating elements or crumb tray. Ensure the crumb tray is clean. Use a small amount of water in the drip tray for very fatty foods if recommended in the recipe book.
- **Appliance emits an unusual odor during first use:** This is normal for new appliances and should dissipate after initial use.
- **Digital display not working:** Unplug the unit, wait a few minutes, and plug it back in to reset. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	Ninja
Model Name	FO101
Color	Stainless Steel
Product Dimensions	15.8"D x 16.53"W x 13.48"H
Item Weight	22.8 pounds
Capacity	5 Quarts (Air Fry Basket)
Special Feature	Timer
Control Type	Button Control
Door Style	French Door
Power Source	AC/DC
Temperature Range	100°F - 450°F
Manufacturer	SharkNinja

WARRANTY AND SUPPORT

The Ninja French Door Premier Air Fryer, Convection Oven, Toaster (Model FO101) typically comes with a **1-year limited warranty** from the date of purchase, covering defects in material and workmanship under normal household use. Please refer to the warranty card included with your product for specific terms and conditions, including how to register your product and make a claim.

For customer support, troubleshooting assistance, or to order replacement parts, please visit the official Ninja website or contact their customer service line. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where can I find the instruction manual for the Ninja French Door Premier Air Fryer (Model FO101) in Spanish?

Currently, the manual available on this page for the Ninja French Door Premier Air Fryer (Model FO101) is in English. While a full Spanish PDF is not directly hosted here, you can follow these...

[Read full answer](#)