

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [OYLUS](#) /
- › [OYLUS Infrared Space Heater GD9315BCW-4J Instruction Manual](#)

## OYLUS GD9315BCW-4J

# OYLUS Infrared Space Heater

## INSTRUCTION MANUAL - MODEL GD9315BCW-4J

### INTRODUCTION

Thank you for choosing the OYLUS Infrared Space Heater. This manual provides essential information for the safe and efficient operation of your new heater. Please read all instructions carefully before use and retain this manual for future reference.

### PRODUCT OVERVIEW



Image: The OYLUS Infrared Space Heater efficiently warming a living room, illustrating its powerful 1500W heating capability and wide heat distribution.

## Powerful Infrared Heating

Warmth Throughout Your Home



Image: The OYLUSS Infrared Space Heater positioned in a bedroom, highlighting its quiet operation for a peaceful night's sleep. The heater's warm glow is visible, complementing the cozy bedroom ambiance.

## ECO Mode

Automatically Maintains Your Desired Temperature for Energy Savings

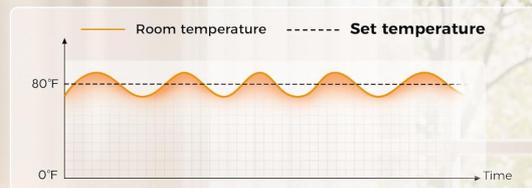


Image: A graphic illustrating the ECO mode of the OYLUSS Infrared Space Heater, showing how it automatically adjusts power to maintain a consistent desired temperature for energy efficiency.



Image: The OYLUS Infrared Space Heater highlighting its multiple safety features, including overheat protection, tip-over shut-off, and child lock, ensuring worry-free operation.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces,

like a bed, where openings may become blocked.

- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes an **Overheat Protection** feature that automatically shuts off the unit if it gets too hot.
- The **Tip-Over Shut-Off** feature automatically powers down the unit if it is accidentally knocked over.
- A **Child Lock** function prevents accidental operation by children.

## SAVE THESE INSTRUCTIONS

## PRODUCT FEATURES

- **Dual Heat Levels & ECO Smart Control:** Choose between 1500W (High) for rapid heating, 750W (Low) for energy efficiency, or ECO smart mode which maintains a consistent 68°F (20°C) automatically.
- **Smart Temperature Control:** Adjustable temperature range from 59°F (15°C) to 86°F (30°C). The system monitors room temperature and cycles on/off to maintain desired warmth.
- **Quiet Operation & 12-Hour Timer:** Operates at a low 35 dB for a peaceful environment. Features a 12-hour auto shut-off timer for safety and energy saving.
- **Safety First:** Equipped with overheat protection, tip-over shut-off, and a child lock. The fan continues running for 3 minutes after shutdown to safely disperse heat.
- **Panel & Remote Dual Control:** Easily adjust settings using either the integrated control panel or the included remote control. Switch between °C/°F with a single touch.
- **Portable Design & Vintage Style:** Features rolling wheels for easy mobility and a vintage walnut cabinet design that complements home décor.

## SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging for off-season storage.
2. **Placement:** Place the heater on a firm, level surface. Ensure it is at least 3 feet (0.9 m) away from walls, furniture, and any combustible materials.
3. **Power Connection:** Plug the heater into a grounded 120V 60Hz power outlet. Ensure the power switch on the rear of the unit is in the ON position. Only operate the heater in an upright position with caster wheels attached.
4. **Remote Control Setup:** Insert 2 AAA batteries into the remote control before using (batteries not included).

## Instant Warmth for Cozy Winters



Image: OYLUS Infrared Space Heater in a living room. The heater features a dark wood cabinet and a control panel on the front. It is positioned on a light-colored wooden floor next to a sofa, demonstrating its aesthetic integration into a home environment.

## OPERATING INSTRUCTIONS

### Control Panel Overview:

The heater can be operated using the control panel on the front of the unit or the remote control.

- **ON/OFF Button:** Powers the heater on or off.
- **Mode Button:** Cycles through High (1500W), Low (750W), and ECO modes.
- **Temperature Up/Down Buttons:** Adjusts the desired temperature.
- **Timer Button:** Sets the auto shut-off timer (1-12 hours).
- **°C/°F Button:** Toggles between Celsius and Fahrenheit display.

### Initial Operation:

1. Ensure the heater is plugged in and the rear power switch is ON.
2. Press the **ON/OFF** button on the control panel or remote to turn on the heater. The digital display will show the current room temperature.
3. Use the **Mode** button to select your desired heating mode (High, Low, or ECO).
4. Adjust the desired temperature using the **Temperature Up/Down** buttons.
5. To set the timer, press the **Timer** button and use the Temperature Up/Down buttons to select the desired duration (1-12 hours). The heater will automatically turn off after the set time.

## Enjoy Every Warm Moment



Image: A close-up view of the OYLUS Infrared Space Heater's control panel, showing the digital temperature display and various buttons for timer, heat levels (High, Low, ECO), mode, and power. A remote control is also visible, pointing towards the heater, illustrating the dual control options.

Your browser does not support the video tag.

Video: This video demonstrates the OYLUS Infrared Space Heater in operation, highlighting its features and ease of use. It shows the heater warming a room and the various control options.

## MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Air Filter:** The air inlet has a filter that can be easily cleaned. Regularly check and clean the filter to maintain airflow and efficiency.
- **Storage:** When not in use, store the heater in a cool, dry place, preferably in its original packaging.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; Rear power switch OFF; Overheat protection activated; Tip-over switch activated.	Ensure plug is firmly in outlet; Turn rear power switch ON; Allow unit to cool down; Place heater on a stable, level surface.

Problem	Possible Cause	Solution
Heater blows cold air.	Temperature setting too low; ECO mode active and room temperature is above set point.	Increase desired temperature; Adjust mode or increase set temperature.
Heater is noisy.	Normal fan operation; Obstruction in fan.	This is normal for fan-forced heaters; Unplug and check for obstructions, clean if necessary.

## SPECIFICATIONS

<b>Brand</b>	OYLUS
<b>Model Number</b>	GD9315BCW-4J
<b>Power Output</b>	1500W (High), 750W (Low)
<b>Voltage</b>	120 Volts (AC)
<b>Temperature Range</b>	59°F (15°C) - 86°F (30°C)
<b>Timer</b>	1-12 Hours
<b>Dimensions (D x W x H)</b>	10.63" x 12.01" x 15.55"
<b>Item Weight</b>	15.65 pounds
<b>Special Features</b>	Adjustable Temperature, Child Lock, Cool Touch Exterior, Tip-Over Protection, Wheels
<b>Indoor/Outdoor Usage</b>	Indoor
<b>UPC</b>	607609477617

## WARRANTY AND SUPPORT

This OYLUS Infrared Space Heater comes with a 12-month warranty. For warranty claims or technical support, please contact OYLUS customer service. Keep your purchase receipt as proof of purchase. For additional support or inquiries, please visit the [OYLUS Store on Amazon](#).