

[Manuals.plus](#) /

› [XINFUTE](#) /

› XINFUTE A-TV18+ Universal TV Remote Control Instruction Manual

XINFUTE A-TV18+

XINFUTE A-TV18+ Universal TV Remote Control Instruction Manual

Model: A-TV18+

INTRODUCTION

The XINFUTE A-TV18+ is a universal learning TV remote control designed for ease of use and versatility. It features large, color-coded buttons for improved visibility and a durable, waterproof design. This remote is capable of learning commands from multiple devices, allowing seamless switching between up to two different devices for a unified control solution. It requires 2 AAA batteries (not included) and is made from ABS material.

SETUP

1. Battery Installation

To install batteries, slide open the battery compartment cover located on the back of the remote control. Insert two AAA batteries, ensuring correct polarity (+/-). Close the battery compartment cover securely.



Image: Back of the remote control with the battery compartment open, revealing the slots for two AAA batteries.

2. Remote Control Brand Switching (Quick Search)

This remote features a quick search function to switch between various TV brands. Press and hold both buttons together for 2 seconds to switch to the desired brand. The LED indicator will flash to confirm.



Image: The back of the remote control, displaying a label with instructions for quick brand search, listing various TV brands and their respective button combinations.

To switch brands, press and hold the Power button + the Switching button for your brand (refer to the list below) at the same time until the LED flashes and turns off, about 2 seconds.

Brand Switching Buttons:

- **SAMSUNG:** Power + CH- (hold for 3 seconds)
- **LG:** Power + CH+ (hold for 3 seconds)
- **SONY:** Power + VOL- (hold for 3 seconds)
- **PHILIPS:** Power + VOL+ (hold for 3 seconds)
- **SHARP:** Power + MUTE (hold for 3 seconds)
- **TOSHIBA:** Power + 0 (hold for 3 seconds)
- **PANASONIC:** Power + 1 (hold for 3 seconds)

- **HITACHI:** Power + 2 (hold for 3 seconds)
- **SANYO:** Power + 3 (hold for 3 seconds)
- **RCA:** Power + 4 (hold for 3 seconds)
- **WESTINGHOUSE:** Power + 5 (hold for 3 seconds)
- **ELEMENT:** Power + 6 (hold for 3 seconds)
- **MAGNAVOX:** Power + 7 (hold for 3 seconds)

If you switch to HISENSE or TOSHIBA and the main buttons on the remote don't work properly with your TV:

- Press and hold the Brand Switching Buttons again for 2 seconds (until the LED light blinks twice and turns off).
- Each time you do this, the remote switches to the next TV model. Test the button function after switching.
- Try this up to 5 times. If you try 5 times and the buttons still don't work, the remote might not support your exact TV model.

3. Manual Code Search Setup


This method allows you to manually search for the correct code for your TV.

1. **Enter Setup Mode:** Press and hold the [SET] + [POWER] buttons simultaneously for 3 seconds until the LED indicator remains steadily lit. Release the buttons.
2. **Code Search:** Aim the remote at the TV and press the [CH+] button one time per code group. Stop pressing when the TV screen displays volume indicators.
3. **Verification and Save:** Press [VOL+] or [VOL-] to verify the code. If the TV responds correctly, press [SET] to save the code and exit. If not, repeat step [2] to search for the next code group.

4. Automatic Code Search Setup

This method automatically searches for the correct code for your TV.

1. **Preparation:** Point the remote control's IR emitter toward the TV.
2. **Initiate Search:** Press and hold the [SET] + [VOL+] buttons simultaneously for 3 seconds. Release the buttons once the LED indicator lights up. The remote will begin automatically searching for compatible TV codes.
3. **Save and Exit:** When the TV screen displays volume adjustment indicators, immediately press the [SET] button to save the current code and exit search mode.

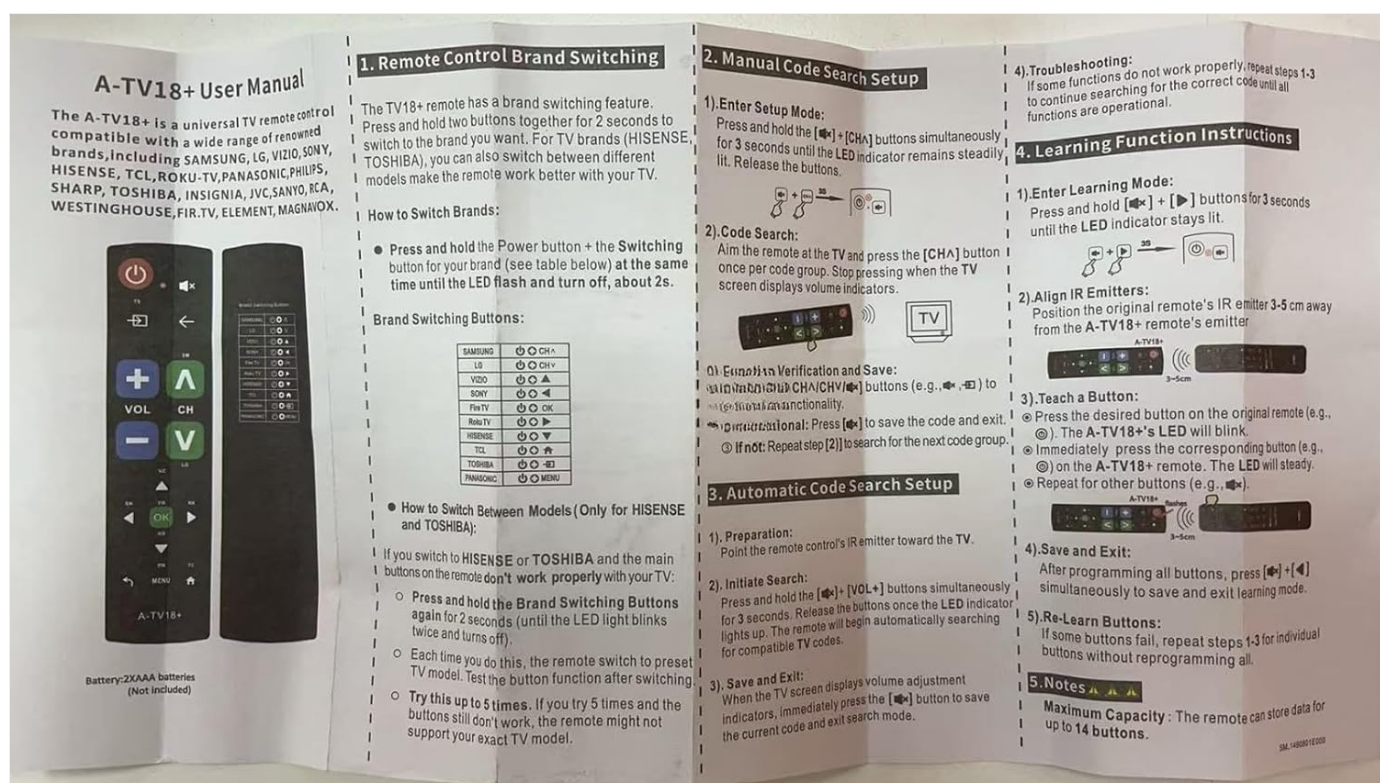

OPERATING INSTRUCTIONS (LEARNING FUNCTION)

The A-TV18+ remote control supports a learning function, allowing it to mimic commands from your original remote. It can store data for up to 14 buttons.

- 1. Enter Learning Mode:** Press and hold the [SET] + [MUTE] buttons for 3 seconds until the LED indicator stays lit.
- 2. Align IR Emitters:** Position the original remote's IR emitter 3-5 cm away from the A-TV18+'s emitter.
- 3. Teach a Button:** Press the desired button on the original remote (e.g., Power). The A-TV18+'s LED will blink. Immediately, press the corresponding button on the A-TV18+ remote. The LED will steadily light up, indicating successful learning.
- 4. Save and Exit:** After programming all buttons, press [SET] + [MUTE] simultaneously to save and exit learning mode.
- 5. Re-Learn Buttons:** If some buttons fail, repeat steps 1-3 for individual buttons without reprogramming all.

MAINTENANCE

The XINFUTE A-TV18+ remote is designed for durability. Its waterproof design helps protect against accidental spills. To ensure optimal performance and longevity:

- Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Battery Replacement:** Replace batteries when the remote's performance degrades or the LED indicator does not light up. Always use two new AAA alkaline batteries.
- Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- Remote not responding:** Ensure batteries are correctly installed and have sufficient charge. Replace with new AAA batteries if necessary.
- Some functions do not work after setup:** If some functions do not work properly after initial setup, repeat the manual or automatic code search steps. Continue searching for the correct code until all functions are operational.
- Learning function issues:** If specific buttons fail to learn or operate correctly after using the learning function, repeat the learning steps (1-3) for those individual buttons without reprogramming the entire remote. Ensure proper alignment (3-5 cm) between the remotes during the learning process.
- TV not responding to brand switching:** If the main buttons do not work after switching brands (especially for HISENSE or TOSHIBA), repeat the brand switching process up to 5 times, testing after each attempt. If it still doesn't work, your TV model might not be fully supported.

SPECIFICATIONS

Brand	XINFUTE
Model Number	A-TV18+
Type	Universal Learning Remote Control
Material	ABS Material
Color	As Shown
Special Feature	Ergonomic, Waterproof Design
Compatible Devices	Television

Max Supported Devices (Switching)	Up to 2 devices
Learning Capacity	Up to 14 buttons
Connectivity Technology	Infrared
Maximum Range	5 Meters
Batteries Required	2 x AAA batteries (not included)
Battery Type	Alkaline
Item Weight	0.08 Kilograms
Item Dimensions (L x W x H)	6"L x 3"W x 1"H

WARRANTY

The XINFUTE A-TV18+ Universal TV Remote Control comes with a one-year warranty on all purchases. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, or inquiries regarding your XINFUTE A-TV18+ remote control, please contact the manufacturer or your retailer. Refer to your purchase documentation for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FM71YPND>

More documents and user manuals: <https://manuals.plus/>