

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SoBuy](#) /
- › [SoBuy BZR217-WN Washing Machine Cabinet User Manual](#)

SoBuy BZR217-WN

SoBuy BZR217-WN Washing Machine Cabinet

USER MANUAL

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup & Assembly](#) [Operating Instructions](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your SoBuy BZR217-WN Washing Machine Cabinet. This cabinet is designed to provide organized storage in your laundry area or bathroom, featuring a dedicated space for a washing machine or dryer, an integrated drawer, and a laundry basket compartment. Please read this manual thoroughly before assembly and use to ensure proper installation and safe operation.



Image 1.1: The SoBuy BZR217-WN Washing Machine Cabinet installed in a laundry room, showcasing its design and functionality alongside a washing machine.

2. Safety Information

Always follow these safety guidelines to prevent injury or damage to the product:

- Keep all small parts and packaging materials away from children.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the cabinet or its components. The total load capacity is 49 kg.
- Place the cabinet on a flat, stable surface to prevent tipping.
- Avoid exposing the cabinet to excessive moisture or direct sunlight for prolonged periods.
- Use only the provided hardware for assembly.

3. Package Contents

Before beginning assembly, verify that all components are present and undamaged. Refer to the assembly diagram for identification of parts.



Image 3.1: An exploded diagram showing all individual components and hardware included in the package for assembly.

If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

4. Setup & Assembly

Assembly typically requires a screwdriver (not included). Follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Match each part to the corresponding labels in the assembly diagram (Image 3.1).
3. **Assemble Frame:** Begin by assembling the main frame of the cabinet using the provided screws and connectors. Ensure all connections are snug.
4. **Install Shelves/Panels:** Attach any internal shelves or panels as indicated in the instructions.
5. **Assemble Drawer:** Construct the drawer unit, ensuring the runners are correctly installed for smooth operation.
6. **Install Laundry Basket Compartment:** Assemble the tilting door mechanism for the laundry basket.
7. **Attach Back Panel:** Secure the back panel to the cabinet frame.
8. **Final Checks:** Once assembled, ensure the cabinet is stable and all parts are securely fastened.

Massimizza lo spazio nella lavanderia

Tieni tutto perfettamente in ordine



Materiali resistenti all'umidità



Cassetti di grande capacità



Cesti per la biancheria

Image 4.1: Dimensional diagram of the cabinet, useful for planning placement and ensuring compatibility with your washing machine or dryer.

Note: Detailed step-by-step assembly instructions with diagrams are typically included in the product packaging. Refer to those for precise guidance.

5. Operating Instructions

The SoBuy BZR217-WN cabinet is designed for practical use in a laundry or bathroom environment.

- **Washing Machine/Dryer Placement:** Position your standard-sized washing machine or dryer within the designated open space of the cabinet. Ensure there is adequate clearance for ventilation and connections.
- **Drawer Usage:** The integrated drawer is suitable for storing small laundry essentials such as detergents, fabric softeners, or cleaning supplies. Pull the drawer gently to open and push to close.
- **Laundry Basket Compartment:** The tilting door reveals a compartment designed to hold the included laundry basket. Place the basket inside to collect dirty clothes discreetly. To access, gently pull the handle on the tilting door.
- **Top Surface:** The top surface can be used for folding laundry, placing decorative items, or holding additional supplies. Do not place excessively heavy items on the top surface.



Image 5.1: Detailed view of the cabinet's features, highlighting the drawer and the tilting laundry basket compartment.



Image 5.2: The hidden laundry basket feature, demonstrating how it helps maintain a tidy laundry area.

6. Maintenance

Regular maintenance will help prolong the life and appearance of your cabinet:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive cleaning tools.
- **Spills:** Immediately wipe up any spills to prevent moisture damage, especially on the engineered wood surfaces.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Ventilation:** Ensure adequate airflow around your washing machine or dryer when placed within the cabinet to prevent overheating.

7. Troubleshooting

If you encounter any issues with your cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Loose fasteners; uneven floor.	Check and tighten all screws. Ensure the cabinet is on a level surface.
Drawer does not slide smoothly.	Improperly installed runners; obstruction.	Verify drawer runners are correctly aligned and installed. Check for any objects obstructing the drawer path.
Laundry basket door does not open/close properly.	Hinge misalignment; obstruction.	Check hinges for proper alignment and tightness. Ensure the basket or other items are not blocking the door mechanism.

If the problem persists, please contact customer support.

8. Specifications

Feature	Detail
Model:	BZR217-WN
Brand:	SoBuy
Dimensions (Width x Depth x Height):	100 cm x 60 cm x 90 cm (39.4 in x 23.6 in x 35.4 in)
Material:	Engineered Wood (PB+MDF, E1 standard)
Color:	White with wood effect top
Total Load Capacity:	49 kg (108 lbs)
Recommended Use:	Storage for cleaning products, garments, laundry organization

9. Warranty & Support

SoBuy products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty information provided with your purchase for specific terms and conditions.

For technical support, missing parts, or warranty claims, please contact SoBuy customer service through their official website or the retailer where the product was purchased. Please have your model number (BZR217-WN) and proof of purchase ready when contacting support.

Online Support: www.sobuy.com (This is a placeholder link, please refer to the actual manufacturer's website for support.)