

[Manuals.plus](#) /

> [LINSY HOME](#) /

> LINSY HOME HC318E 8-Drawer Dresser: Assembly and Care Manual

LINSY HOME HC318E

LINSY HOME HC318E 8-Drawer Dresser: Assembly and Care Manual

INTRODUCTION

Thank you for choosing the LINSY HOME HC318E 8-Drawer Dresser. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your new furniture. Please read these instructions thoroughly before beginning assembly and retain them for future reference.

SAFETY INFORMATION

To ensure safe use and prevent injury or damage, please adhere to the following safety guidelines:

- Always assemble the dresser on a soft, clean surface to prevent scratches.
- Ensure all parts are securely fastened before use. Periodically check and tighten all connections.
- Keep small parts and packaging materials away from children and pets to avoid choking hazards.
- Do not overload drawers. Distribute weight evenly.
- This product must be used with the wall attachment device provided to prevent overturning. Failure to do so can result in serious injury or death.



Image: Diagram illustrating the importance and steps for installing the wall attachment device to prevent the dresser from tipping over.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Dresser components (panels, drawer fronts, drawer sides, drawer backs, drawer bottoms)
- Hardware pack (screws, cam locks, dowels, drawer slides, handles, wall anchor kit)

ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Please follow the steps carefully. A screwdriver and hammer may be required (not included).

Video: A detailed visual guide demonstrating the step-by-step assembly process for the LINSY HOME 8-Drawer Dresser.

General Assembly Steps:

1. **Prepare Components:** Lay out all panels and hardware. Identify each part using the provided labels.
2. **Install Drawer Slides:** Attach the drawer slides to the side panels of the dresser frame and to the drawer components as shown in the video.
3. **Assemble Dresser Frame:** Connect the base, side panels, and support beams using the provided hardware. Ensure all connections are tight.
4. **Attach Back Panel:** Secure the back panel to the dresser frame.
5. **Assemble Drawers:** Construct each drawer by attaching the sides, front, and back panels, then sliding in the bottom panel. Install the handles.
6. **Insert Drawers:** Carefully slide the assembled drawers into their respective slots in the dresser frame.
7. **Install Anti-Tip Kit:** Securely attach the wall anchor kit to the dresser and the wall as per the safety instructions.

PRODUCT FEATURES AND DIMENSIONS

The LINSY HOME HC318E dresser is designed for efficient storage and modern aesthetics.

- **Ample Storage:** Features eight smooth-gliding deep drawers for organized storage of clothing, accessories, and essentials.
- **Durable Construction:** Crafted from high-quality manufactured wood with a sturdy wood frame and metal handles.
- **Modern Design:** Clean lines, sleek profile, and a rich wood grain finish complement various interior styles.
- **Smooth Operation:** Drawers are designed for smooth, effortless opening and closing.



Image: Visual details of the dresser's construction, showing smooth corners, drawer slides, and base stability.




Image: Illustration demonstrating the dresser's capacity to accommodate various television sizes on its top surface.

OPERATING INSTRUCTIONS

To ensure optimal performance and longevity of your dresser:

- **Drawer Use:** Open and close drawers gently. Avoid slamming them shut.
- **Weight Capacity:** The dresser has a weight capacity of 150 lbs for the top surface. Distribute items evenly. Each drawer has its own weight limit, avoid overloading.
- **Placement:** Place the dresser on a level surface to prevent wobbling and ensure proper drawer alignment.

Product Size

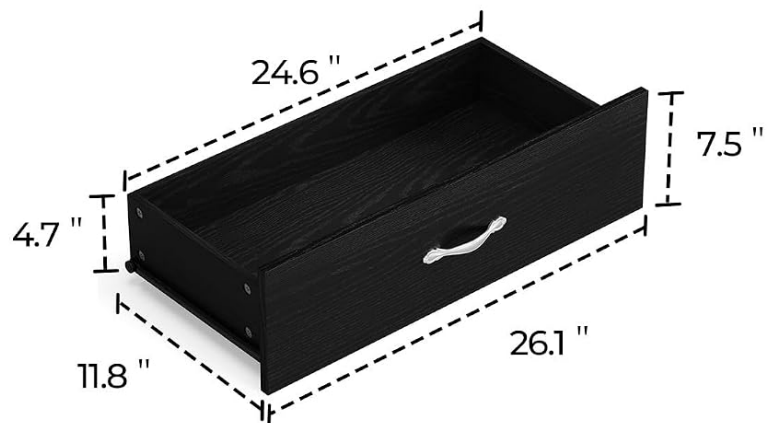

ColorBlackMaterial TypeManufactured WoodItem Weight120 PoundsNumber of Drawers8Assembly RequiredYes

WARRANTY AND CUSTOMER SUPPORT

For warranty information or assistance with your LINSY HOME dresser, please contact LINSY HOME customer support directly. Have your model number (HC318E) and purchase details ready for faster service.

You can typically find contact information on the LINSY HOME official website or through your original point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FM7QS923>

More documents and user manuals: **<https://manuals.plus/>**