

[Manuals.plus](#) /

› [MaxMango](#) /

› MaxMango D72 Digital Camera User Manual

MaxMango D72

MaxMango D72 Digital Camera User Manual

64MP & 2.4" Vlogging Camera for Beginners

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your MaxMango D72 Digital Camera. This camera is designed for capturing 64MP HD photos and 4K videos, featuring a 2.4-inch 180° flip screen, 16x digital zoom, and autofocus capabilities. It is suitable for photography, vlogging, and can function as a webcam.

2. WHAT'S IN THE BOX

Please verify that all items are present in your package:

- Camera Body Only
- 1* 16G SD Card
- 1* Charging Cable (USB Type C)
- 1* Lanyard
- 1* User Manual

Best Gift



Image: Contents of the MaxMango D72 camera box, including the camera, SD card, charging cable, lanyard, and user manual.

3. PRODUCT OVERVIEW

The MaxMango D72 camera features a compact design with essential controls for ease of use.

Easy Sharing Photo Via OTG

We only provide Type-C OTG adapters
For Lightning connections, you need to purchase it by yourself

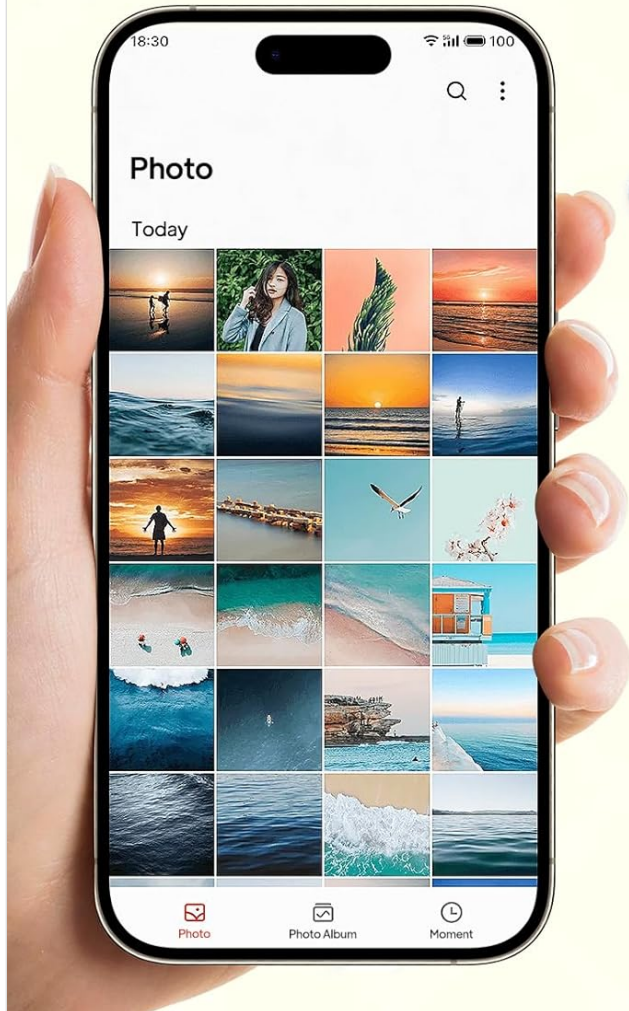


Image: Front and back view of the MaxMango D72 Digital Camera, showing the lens, flash, and rear display with control buttons.

Key Components:

- **Lens:** Main optical component for image capture.
- **Built-in Flash:** Provides illumination in low-light conditions.
- **2.4-inch IPS Display:** Rotates 180 degrees for versatile viewing angles, including selfies and vlogging.
- **Control Buttons:** Includes power, shutter, mode, menu, zoom, and navigation buttons.
- **USB Type-C Port:** For charging and data transfer.
- **SD Card Slot:** For memory expansion.



Image: The MaxMango D72 camera demonstrating its 180-degree flip screen, ideal for selfies and vlogging.

4. SETUP

4.1. Inserting the SD Card

1. Ensure the camera is powered off.
2. Locate the SD card slot on the side of the camera.
3. Insert the provided 16GB SD card into the slot with the metal contacts facing down until it clicks into place.
4. To remove, press the card gently inward until it springs out.



Image: A close-up view of the MaxMango D72 camera with the 16GB SD card inserted, indicating storage capacity.

4.2. Charging the Battery

1. Connect the camera to a power source using the provided USB Type-C charging cable.
2. The charging indicator light will illuminate.
3. Once fully charged, the indicator light will change or turn off.

4.3. Initial Power On

1. Press and hold the Power button until the screen turns on.
2. Follow any on-screen prompts for initial setup, such as setting the date and time.

5. OPERATING INSTRUCTIONS

5.1. Taking Photos

1. Turn on the camera and select Photo mode using the Mode button.
2. Frame your shot using the 2.4-inch display. The camera features autofocus for clear images.
3. Press the Shutter button to capture the photo.



Image: Visual comparison demonstrating the vivid detail captured by the 64MP sensor of the MaxMango D72 camera.

5.2. Recording Videos

1. Switch to Video mode using the Mode button.
2. Press the Shutter button to start recording. A red indicator light will flash.
3. Press the Shutter button again to stop recording.



Image: The MaxMango D72 camera in use, recording 4K Ultra HD video, with an emphasis on the recording indicator light.

5.3. Using Digital Zoom

The camera supports 16x digital zoom.

1. In Photo or Video mode, use the Zoom In/Out buttons (often labeled 'W' and 'T' or with magnifying glass icons) to adjust the zoom level.

Auto Focus, Always Sharp

Capture every moment in perfect clarity! Quickly locks onto your subject for sharp, detailed photos every time.

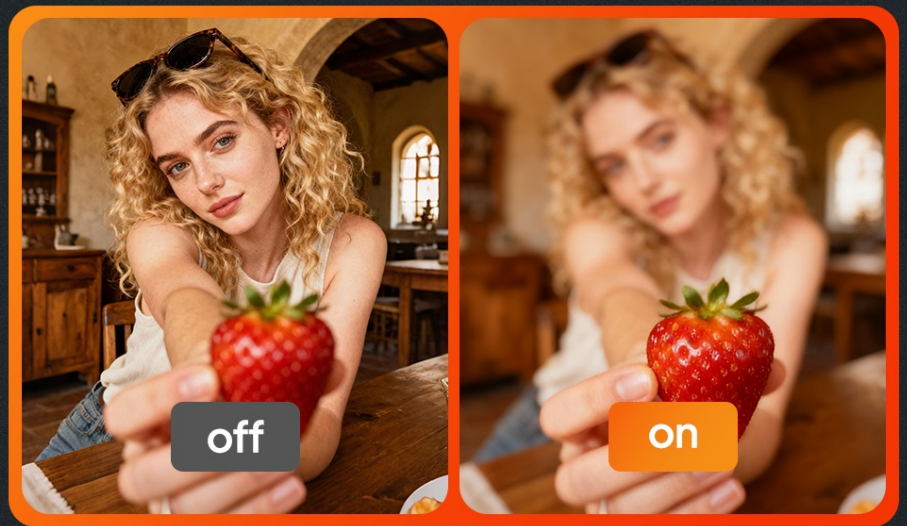


Image: A visual representation of the 16x digital zoom capability, showing progressive magnification of a scene.

5.4. Flash Settings

The built-in flash can be adjusted for different lighting conditions.

1. Press the Flash button (often indicated by a lightning bolt icon) to cycle through modes: Auto, On, Off.
2. **Auto:** Flash activates automatically in low light.
3. **On:** Flash fires with every shot.
4. **Off:** Flash is disabled.

10+ Kinds of Filters



With a built-in flash light, it allows you to take clear pictures even in low light conditions



Image: The MaxMango D72 camera highlighting its built-in flash and available flash modes (On, Off, Auto).

5.5. Applying Filters and Stickers

Enhance your photos and videos with creative filters and stickers.

1. In Photo mode, press the "OK" button to access the sticker and filter menu.
2. Use the navigation buttons to select your desired filter or sticker.
3. Confirm your selection to apply it.



Image: Examples of unique stickers and filters, including animal and decorative frames, available for creative photo and video enhancement.

5.6. Using the 180° Flip Screen

The 2.4-inch IPS display can be rotated 180 degrees.

1. Gently flip the screen outwards and rotate it to face forward for selfies or vlogging.
2. The display will automatically adjust its orientation.

5.7. Webcam Function

The camera can be used as a webcam for live streaming or video calls.

1. Connect the camera to your computer using the USB Type-C cable.
2. Select the "Webcam" option on the camera's screen (if prompted).
3. Your computer should recognize the camera as a webcam. Select it in your video conferencing or streaming software.



Image: The MaxMango D72 camera connected to a computer, illustrating its webcam functionality for video calls or vlogging.

5.8. Other Features

- **Triple Burst Mode:** Captures multiple photos in quick succession.
- **Time-Lapse Photography:** Records a series of images over time to create a sped-up video.
- **Date Stamping:** Adds the date to your photos.
- **Exposure Compensation:** Adjusts the brightness of your images.

6. TRANSFERRING FILES

6.1. Transfer to Computer

1. Connect the camera to your computer using the USB Type-C cable.
2. On the camera screen, select the "Mass Storage" or "PC Connect" option (if prompted).
3. Your computer will recognize the camera as a removable drive. Open the drive to access your photos and videos.
4. Copy the files to your computer.

6.2. Transfer to Phone (OTG)

The camera supports direct transfer to phones via an OTG adapter (Type-C OTG adapter provided; Lightning adapter needs to be purchased separately).

1. Connect the camera to your phone using the USB cable and an appropriate OTG adapter.
2. On the camera, select the first icon (usually indicating photo transfer).
3. On your phone, open the file manager or gallery app and browse for the camera's storage (often labeled 'NO NAME').
4. Select and transfer the desired photos and videos.



Image: Instructions for easy photo sharing from the camera to a phone using an OTG adapter.

Your browser does not support the video tag.

Video: A demonstration on how to transfer photos from the MaxMango D72 camera to a smartphone using a USB cable and OTG connection.

7. MAINTENANCE

7.1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens directly with your fingers.
- Do not use harsh chemicals or abrasive cleaners.

7.2. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the battery.

8. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common solutions:

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Camera does not power on	Ensure the battery is charged. Check if the SD card is inserted correctly.
Blurry images	Ensure autofocus is enabled. Clean the lens. Hold the camera steady during capture. Check lighting conditions.
Cannot transfer files	Check USB cable connection. Ensure correct mode is selected on camera (Mass Storage/PC Connect). Try a different USB port or cable.
SD card error	Reinsert the SD card. Format the SD card (this will erase all data). Try a different compatible SD card.
Flash not working	Check flash settings (ensure it's not set to 'Off'). Ensure battery has sufficient charge.

9. SPECIFICATIONS

Feature	Detail
Model Name	D72
Photo Sensor Resolution	64 MP
Video Resolution	2160p (4K)
Optical Zoom	1x (Macro lens)
Digital Zoom	16x
Screen Size	2.4 inches (180° Flip IPS LCD)
Image Stabilization	Anti-shake
Autofocus	Yes (Contrast Detection)
Flash	Built-In (Auto, On, Off modes)
Memory Storage Capacity	16 GB (SD card included), supports up to 64 GB external memory
Connectivity Technology	USB Type C
Item Weight	138.8 g
Special Features	Webcam function, Live-streaming, Self-timer, Face-Detection, Beauty Face, Face Capture, Slow Motion

10. WARRANTY AND SUPPORT

Warranty Information:

MaxMango provides technical support for this product. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact MaxMango customer service.

Customer Support:

For assistance with product setup, operation, or troubleshooting, please contact MaxMango Direct, the seller. You can typically find their contact information through your purchase platform or the official MaxMango website.

© 2026 MaxMango. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question