

[manuals.plus](#) /› [AGPTEK](#) /› [AGPTEK M7 64GB MP3 Player with Bluetooth User Manual](#)**AGPTEK M7**

# AGPTEK M7 64GB MP3 Player with Bluetooth User Manual

Model: M7 | Brand: AGPTEK

## 1. INTRODUCTION

This manual provides detailed instructions for the AGPTEK M7 MP3 Player. This device is designed for portable audio playback, offering features such as Bluetooth connectivity, FM radio, voice recording, and e-book reading. Please read this manual thoroughly to ensure proper use and maintenance of your device.



Image: The AGPTEK M7 MP3 Player, showcasing its 1.8-inch screen, touch buttons, and included accessories like wired earbuds and a 64GB microSD card.

## 2. WHAT'S IN THE Box

Verify that all items are present in the package:

- AGPTEK M7 MP3 Player
- USB-C Data Cable
- Wired Headphones
- 64GB TF Card (pre-installed or separate)
- User Manual (this document)



## FM Radio

Wired Headphones Required for FM Reception



Image: A visual representation of the AGPTEK M7 MP3 Player package contents, including the player, data cable, TF card, headphones, and user manual.

## 3. SETUP

### 3.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB-C cable to the device's charging port and the other end to a USB power adapter or computer USB port. The battery icon on the screen will indicate charging status.

### 3.2 Inserting/Managing SD Card

The device comes with a 64GB microSD card, which is typically pre-installed. The player supports up to 128GB microSD cards. To insert or remove the card, gently push it into or out of the dedicated slot on the side of the device until it clicks.

# 64GB Built-In Storage

Thousands of Songs. Zero Storage Worries



Image: The AGPTEK M7 MP3 Player highlighting its 64GB built-in storage, represented by a microSD card, indicating ample space for audio files.

### 3.3 Transferring Music Files

Connect the MP3 player to your computer using the USB-C cable. The device will appear as a removable disk. You can then drag and drop your music files (MP3, FLAC, APE, WAV, etc.) directly into the designated music folder on the device's storage. The device supports high-speed USB 2.0 for faster transfers.

#### What's in the Box



AGPTEK-M7PL



Packaging Box



Data Cable



TF card



Headphones



User Manual

Image: An illustration demonstrating OTG (On-The-Go) file transfer, showing the AGPTEK M7 MP3 Player connected to a smartphone via a USB cable for direct file transfer.

Your browser does not support the video tag.

Video: This video demonstrates the process of transferring files from a PC to the MP3 player, guiding users through the steps to load their music library onto the device.

## 4. OPERATING THE DEVICE

### 4.1 Power On/Off

To power on the device, press and hold the power button located on the side until the screen illuminates. To power off, press and hold the power button again until the device shuts down.

### 4.2 Navigation

The AGPTEK M7 features a 1.8-inch color screen and touch-sensitive backlit keys for navigation. Use the directional touch buttons to move through menus and select options. The 'M' button typically serves as a menu or back button, while the play/pause button confirms selections.

### 4.3 Music Playback

From the main menu, select 'Music'. You can browse by artist, album, genre, or all songs. The player supports MP3, FLAC, APE, WAV, and other mainstream and lossless audio formats. Multiple playback modes such as repeat one, repeat all, shuffle, and A-B repeat are available.

# Hi-Fi Lossless Sound

Hear More Details. Feel Deeper



Image: A graphic illustrating the Hi-Fi Lossless Sound capabilities of the AGPTEK M7 MP3 Player, showing various supported audio formats like FLAC, APE, WAV, WMA, MP3, and AAC.

## 4.4 Bluetooth Connectivity

The device is equipped with Bluetooth 5.4 for stable wireless connections. To pair with Bluetooth headphones or speakers, go to the 'Bluetooth' menu, turn Bluetooth on, and search for available devices. The player supports auto-reconnect to your last paired device.



**AGPTEK**

## Auto Bluetooth Reconnect

Power on. Play instantly

### Others

#### Manual Bluetooth Setup

Reconnect required after  
every restart



Image: The AGPTEK M7 MP3 Player demonstrating its auto-reconnect Bluetooth feature, showing it automatically connecting to a wireless earbud case, contrasting with manual setup required by other devices.

Your browser does not support the video tag.

Video: This video provides an overview of the AGPTEK M7 MP3 Player, highlighting its Bluetooth capabilities and various functions for an enhanced user experience.

### 4.5 FM Radio

To use the FM radio function, plug in wired headphones, as they act as the antenna. Select 'FM Radio' from the main menu. You can scan for stations and save your favorites.



## Pocket eBook Reader

Auto Page Turn



Image: The AGPTEK M7 MP3 Player displaying its FM Radio interface, emphasizing that wired headphones are required for proper reception.

### 4.6 Voice Recorder

Access the 'Recorder' function to capture audio. The device has a built-in microphone for voice recordings, useful for notes or lectures.

### 4.7 E-Book Reader

The 'E-Book' feature allows you to read text files. Transfer compatible e-book files to the device's storage to access them.



### OTG File Transfer Plug and Play



Image: The AGPTEK M7 MP3 Player showcasing its Pocket eBook Reader function, illustrating its use for reading text on the go with auto page turn capability.

### 4.8 Pedometer

The built-in pedometer tracks your steps, making it suitable for sports and fitness activities.

### 4.9 Video Playback

The device supports video playback in AMV/AVI formats. Ensure your video files are converted to a compatible format for optimal viewing on the 1.8-inch screen.

### 4.10 Screen Lock/Unlock

To prevent accidental presses, you can lock the screen. Typically, this is done by pressing and

holding a specific button (often the 'M' button or a dedicated lock switch). A lock icon will appear. Repeat the action to unlock.

#### 4.11 Volume Control

Volume is adjusted using dedicated buttons, usually located on the side of the device. Some models may require a brief press of a function button to activate volume adjustment via the directional pad.

### 5. MAINTENANCE

#### 5.1 Battery Life & Charging

The 260mAh battery provides hours of continuous playback. A full charge takes approximately 2-2.5 hours. To maximize battery life, avoid extreme temperatures and fully charge the device before long periods of inactivity.



Image: The AGPTEK M7 MP3 Player highlighting its long battery life, indicating 2-2.5 hours of charging provides 16 hours of continuous playback.

#### 5.2 Cleaning

Use a soft, dry cloth to clean the device. Avoid using liquid cleaners or abrasive materials, as they

may damage the screen or casing.

### 5.3 Storage Management

Regularly organize your files on the microSD card. Delete unwanted files to free up space and ensure smooth operation. Back up important files to a computer to prevent data loss.

## 6. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged. Connect to a power source and try again. If unresponsive, perform a hard reset (refer to specific model instructions for reset procedure, often a small reset pinhole).
- **Cannot transfer files:** Check USB cable connection. Ensure the device is in 'Charge & Transfer' mode when connected to a computer. Verify that the microSD card is properly inserted.
- **Music not playing:** Check file format compatibility. Ensure the music files are placed in the correct folder on the microSD card. Update the playlist from the music menu.
- **Bluetooth not connecting:** Ensure Bluetooth is enabled on both the MP3 player and the target device. Place devices close to each other. Try unpairing and re-pairing the devices.
- **No sound:** Check volume levels on both the player and connected headphones/speakers. Ensure headphones are properly plugged in or Bluetooth is connected.

## 7. SPECIFICATIONS

Feature	Detail
Model Name	M7
Screen Size	1.8 Inches
Memory Storage Capacity	64 GB (expandable up to 128 GB)
Connectivity Technology	Bluetooth 5.4
Special Feature	Built-In Speaker, FM Radio, Voice Recorder, E-Book Reader, Pedometer
Battery	260mAh Lithium Polymer (2-2.5H charge, 16H playback)
Item Weight	6.3 ounces
Package Dimensions	7.48 x 5.51 x 0.71 inches

## **8. WARRANTY AND SUPPORT**

AGPTEK offers a 1-year warranty for this product. Additionally, lifetime technical support and 7x24 online service are available for any assistance you may require.