

KIKETECH BH609C

KIKETECH Cordless Vacuum Cleaner Electric Brush

Model: BH609C

INTRODUCTION

Thank you for choosing the KIKETECH Cordless Vacuum Cleaner Electric Brush, Model BH609C. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read these instructions thoroughly before first use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions before using this appliance.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
12. Do not use without dust bag and/or filters in place.
13. Turn off all controls before unplugging.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
16. Store the appliance indoors. Put away after use to prevent accidents.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present and undamaged:

- KIKETECH Cordless Vacuum Cleaner Main Unit
- Electric Brush Head (Floor & Carpet Brush)
- Extension Wand
- Accessory Kit (various nozzles and brushes)
- Charging Adapter
- Wall Mount Bracket
- User Manual

SETUP

Assembly

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Wand:** Insert the extension wand into the main unit until it clicks securely into place.
2. **Attach the Electric Brush Head:** Connect the electric brush head to the other end of the extension wand, ensuring it locks firmly.
3. **Attach Accessories:** For handheld use, attach desired accessories (e.g., crevice tool, dusting brush) directly to the main unit. For extended reach, attach them to the extension wand.

22.2V Cordless Handheld Vacuum Cleaner Floor Brush

**Powerful suction
saves time and energy**

LED lighting upgrade



Gimbal
Cleaning



save time
and energy



Double
Roller Brush



Applicable Series: BH-609C

Image: The KIKETECH Cordless Vacuum Cleaner fully assembled, showing the main unit, extension wand, and electric brush head. This image illustrates the primary components and their connection points.

Charging the Battery

Before first use, fully charge the vacuum cleaner's battery.

1. Connect the charging adapter to the charging port on the main unit.
2. Plug the adapter into a standard wall outlet.
3. The charging indicator lights will illuminate, typically showing progress or a full charge status.
4. A full charge can take approximately 4-5 hours. Do not overcharge the battery.

OPERATING INSTRUCTIONS

Powering On/Off

Press the power button located on the main unit to turn the vacuum cleaner on. Press it again to turn it off.

Suction Modes

The vacuum cleaner features two suction modes for different cleaning needs:

- **Min Mode:** Suitable for light cleaning tasks and extending battery life (up to 45 minutes).
- **High Mode:** Provides maximum suction for deep cleaning and stubborn dirt (up to 25 minutes).

Press the mode selection button on the main unit to switch between Min and High modes.

Using the Electric Brush Head

The 2-in-1 electric brush head is designed for effective cleaning on various floor types.



Image: The electric brush head shown cleaning different surfaces including low-pile carpet, rug, tile floor, and hardwood. This demonstrates its versatility across various floor types.

It adapts to different ground types, providing deeper cleaning on carpets, hardwood, and tile floors. The brush roll actively agitates dirt for thorough removal.

Adjustable Head Angle

The electric brush head features an adjustable angle for improved maneuverability and access to difficult areas.



Image: The electric brush head demonstrating its adjustable angles, including 180 degrees left and right, and 90 degrees up and down. This feature allows for easier navigation around furniture and obstacles.

- **180° Left & Right:** Allows for easy steering around furniture and obstacles.
- **90° Up & Down:** Enables cleaning under low-lying furniture and reaching tight spaces.

Using Versatile Accessories

The included accessory kit allows for cleaning various surfaces and hard-to-reach areas:

- Use the crevice tool for narrow gaps, corners, and edges.
- Use the dusting brush for delicate surfaces, curtains, and upholstery.
- Attach accessories directly to the main unit for handheld cleaning in cars or on furniture.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin

Empty the dustbin after each use or when the MAX fill line is reached to maintain suction power.

1. Ensure the vacuum cleaner is turned off.
2. Locate the dustbin release button and press it to detach the dustbin from the main unit.
3. Open the dustbin lid and empty the contents into a waste bin.
4. Close the dustbin lid and reattach the dustbin to the main unit until it clicks.

Cleaning the HEPA Filter

The 5-stage sealed cyclone filtration system includes a HEPA filter. Clean the filter regularly to prevent clogging and maintain filtration efficiency.

1. Remove the dustbin as described above.
2. Carefully remove the HEPA filter from the dustbin assembly.
3. Tap the filter gently over a waste bin to remove loose dust.
4. If necessary, rinse the filter under cold running water. Ensure it is completely dry before reinserting. Do not use detergents or hot water.
5. Reassemble the filter and dustbin once completely dry.

Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris and clean as needed.

1. Ensure the vacuum cleaner is turned off and disconnected from any power source.
2. Detach the electric brush head from the extension wand.
3. Locate the brush roll release mechanism (refer to the brush head diagram if available) and open it.
4. Remove the brush roll.
5. Use scissors or a brush to remove any tangled hair, strings, or debris from the brush roll.
6. Reinsert the brush roll and secure the release mechanism.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dustbin is full Filter is clogged Brush roll is tangled Hose/nozzle is blocked	Empty the dustbin Clean the HEPA filter Clean the brush roll Check for and remove any blockages
Brush roll not spinning	Brush roll is tangled Brush head is blocked Brush head not properly attached	Clean the brush roll Remove any debris from the brush head Ensure the brush head is securely attached

Problem	Possible Cause	Solution
Short battery life	Battery not fully charged Operating in High mode continuously Aging battery	Ensure battery is fully charged Use Min mode for lighter tasks Contact customer support for battery replacement options

SPECIFICATIONS

Feature	Detail
Brand	KIKETECH
Model Name	BH609C
Special Feature	Cordless
Filter Type	HEPA Filter
Capacity	0.98 Liters
Product Dimensions	43.7"L x 9.45"W x 9.06"H
Item Weight	6 pounds
Battery Runtime (Min Mode)	Up to 45 minutes
Battery Runtime (High Mode)	Up to 25 minutes

WARRANTY AND SUPPORT

KIKETECH products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official KIKETECH website. Please have your model number (BH609C) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question