

[Manuals.plus](#) /

› [AHENOD](#) /

› AHENOD G18-EU MP3 Player User Manual

AHENOD G18-EU

AHENOD G18-EU MP3 Player User Manual

Model: G18-EU

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your AHENOD G18-EU MP3 Player. Please read it thoroughly before using the device and keep it for future reference.

What's in the Box:

- 1 x AHENOD G18-EU MP3 Player
- 1 x 128GB SD Card
- 1 x User Manual
- 1 x USB Type-C Cable
- 1 x Earphones
- 1 x Silicone Case
- 1 x Screen Protector

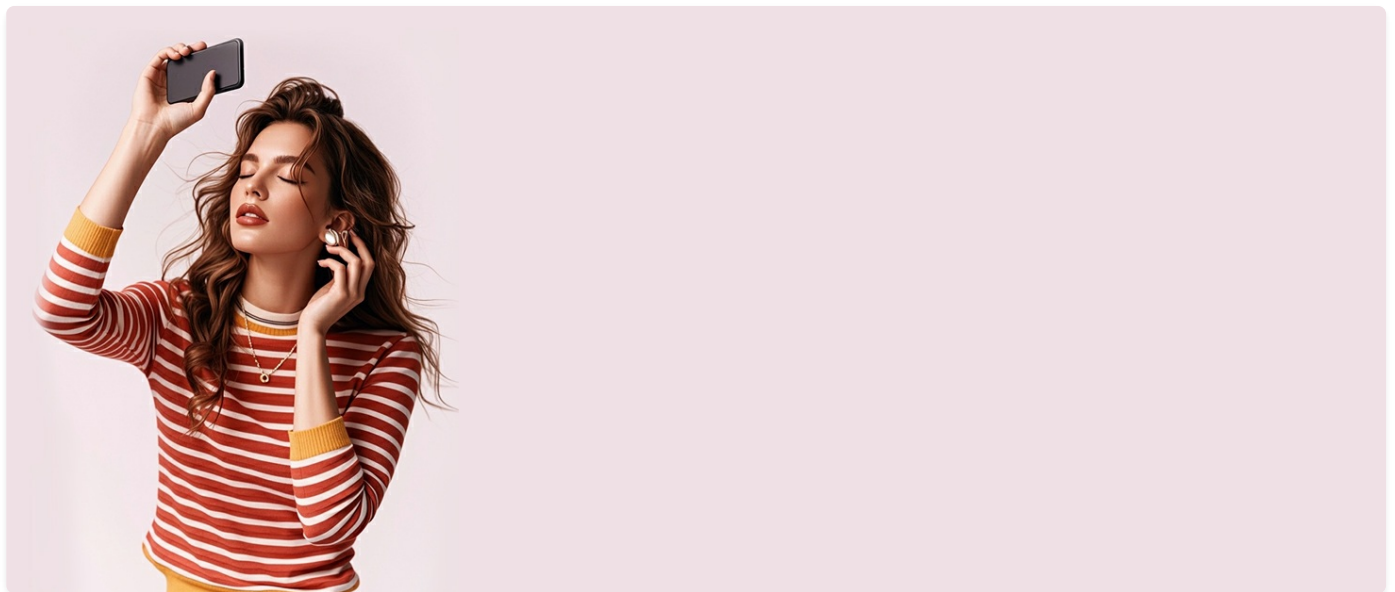 


Image: The AHENOD G18-EU MP3 Player displayed with its included accessories, such as earphones, USB cable, and protective case.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the provided charging cable and adapter to prevent damage.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Prolonged listening at high volume levels can cause hearing damage.

PRODUCT OVERVIEW

The AHENOD G18-EU is a portable MP3/MP4 player featuring a 4.02-inch IPS HD touchscreen, Android 13 OS, and extensive storage capabilities. It supports various audio and video formats and offers wireless connectivity via Bluetooth 5.0 and Wi-Fi.

Key Features:

- **Operating System:** Android 13 with 8-core MTK chip for smooth performance.
- **Display:** 4.02-inch IPS HD touchscreen, supporting 1080P video resolution.
- **Storage:** 3GB RAM, 32GB ROM, and a 128GB TF card included, expandable up to 512GB.
- **Connectivity:** Bluetooth 5.0 for stable connections to audio devices, and Wi-Fi for online streaming and app management.
- **Battery:** 2000mAh lithium-ion battery, offering up to 25 hours of music playback or 5 hours of video playback.
- **Pre-installed Apps:** Includes popular music streaming services like Spotify, Apple Music, Amazon Music, and Deezer.
- **Parental Control:** Features for managing device usage.
- **Additional Features:** FM Radio, sound recorder.

Android 13 OS con Google App Store

Puedes instalar y desinstalar aplicaciones en cualquier momento para satisfacer tus diferentes necesidades.



Image: The AHENOD G18-EU MP3 Player displaying various application icons on its screen, highlighting its Android OS capabilities.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB Type-C cable to the device's charging port and the other end to a compatible USB power adapter or computer USB port. The charging indicator will show the charging status.

2. Inserting the SD Card

The device comes with a 128GB TF (Micro SD) card pre-installed. If you wish to use a different card (up to 512GB), gently insert it into the designated SD card slot until it clicks into place. Ensure the device is powered off before inserting or removing the SD card.

160 GB de memoria ultragrande

El dispositivo tiene 32 GB de RAM y una tarjeta de memoria de 128GB con soporte para hasta 512 GB

3GB

RAM

32GB

ROM

128GB

Tarjeta SD en el paquete



Image: A close-up view of the AHENOD G18-EU MP3 Player showing the side with the SD card slot, with a Micro SD card partially inserted.

3. Initial Power On

Press and hold the power button located on the side of the device until the screen lights up. Follow the on-screen prompts to complete the initial setup, including language selection and time zone.

4. Connecting to Wi-Fi

From the home screen, navigate to **Settings** > **Network & internet** > **Wi-Fi**. Turn on Wi-Fi, select your desired network, and enter the password if prompted. This enables online music streaming and app updates.

Android 13 con procesador MTK de 8 núcleos

El dispositivo cuenta con un procesador MTK 6762 octa-core con Android 13 para un uso más fluido y estable.

RAM
3GB

ROM
32GB

Micro SD
128GB

45% ↑
velocidad de carrera

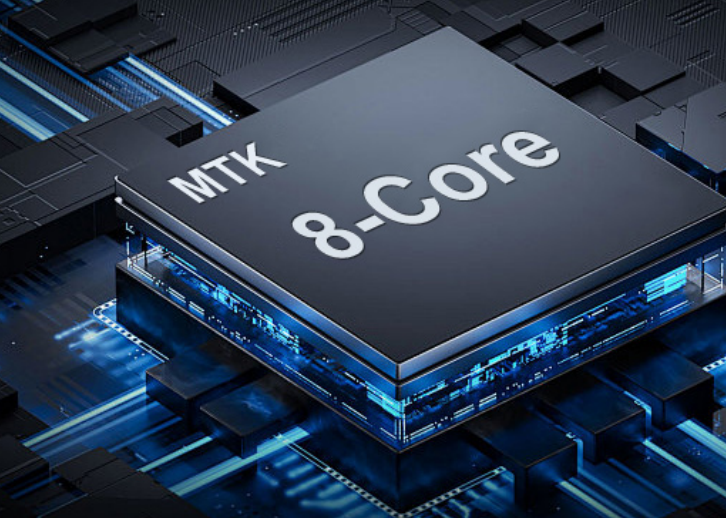 


Image: The AHENOD G18-EU MP3 Player screen displaying the Android 13 OS interface with various Google Play Store applications, indicating Wi-Fi connectivity for app access.

5. Setting Up Parental Controls

To manage content and screen time, navigate to **Settings** and look for **Digital Wellbeing & parental controls**. You can set up Google Family Link to supervise the device remotely, set screen time limits, and filter content on Google Play.

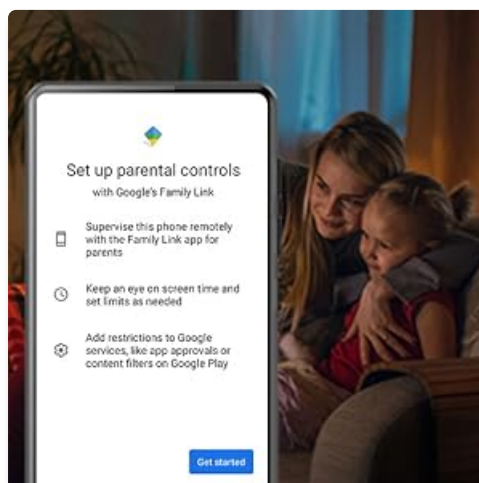 


Image: A screen capture from the AHENOD G18-EU MP3 Player showing the 'Set up parental controls' interface, with options for remote supervision and content filtering.

OPERATING INSTRUCTIONS

1. Basic Navigation

The device uses a touchscreen interface. Swipe left/right or up/down to navigate between screens and menus. Tap icons to open applications or select options. Use the physical buttons for power, volume, and back functions.

2. Music Playback

Local Music: Open the pre-installed music player app. Use the music scan function to automatically add songs from the internal storage or SD card. The player supports MP3, WAV, APE, FLAC, AAC, OGG, and WMA formats. You can select playback modes such as sequential, loop list, random, or single song loop.



Image: The AHENOD G18-EU MP3 Player screen displaying the music player interface with options for sequential playback, list loop, random playback, and single song loop.

Online Music: Connect to Wi-Fi and open any of the pre-installed streaming apps (Spotify, Apple Music, Amazon Music, etc.) to access online music libraries. Log in with your account credentials.

3. Video Playback

Open the video player app. The device supports 1080P video resolution and formats including AVI, MKV, RMVB, MP4, MPG, and MOV. Transfer video files to the device's storage or SD card for local playback.

Reproductor de pantalla táctil 1080P HD Full

Compatible con formatos de vídeo: AVI MKV RMVB MP4 MPG MOV RM FLY



4,02 pulgadas



640*1136

IPS

Pantalla táctil IPS HD



Image: The AHENOD G18-EU MP3 Player screen showing a high-definition video playing, demonstrating its visual capabilities.

4. Bluetooth Pairing

Go to **Settings** > **Connected devices** > **Bluetooth**. Turn on Bluetooth. The device will scan for available Bluetooth devices. Select your headphones, speakers, or other compatible device from the list to pair. Confirm the pairing on both devices if prompted.

Potente aplicación de reproducción de música local

Compatible con MP3, WAV, APE, FLAC, AAC, OGG, WMA



Image: The AHENOD G18-EU MP3 Player with Bluetooth headphones and a car stereo icon, illustrating its stable Bluetooth 5.0 connectivity to various devices.

5. Installing and Uninstalling Applications

The device comes with Google Play Store pre-installed. Connect to Wi-Fi to download and install additional applications. To uninstall an app, long-press its icon on the home screen or app drawer, then drag it to the 'Uninstall' option, or go to **Settings > Apps > See all apps**, select the app, and tap **Uninstall**.



Image: A close-up of the AHENOD G18-EU MP3 Player screen demonstrating the process of uninstalling an application by dragging its icon.

6. FM Radio

To use the FM Radio function, connect the earphones as they act as an antenna. Open the FM Radio app, then scan for available stations. You can save your favorite stations for quick access.



Image: The AHENOD G18-EU MP3 Player screen displaying the sound recorder application, indicating its functionality for audio recording.

MAINTENANCE

1. Cleaning

Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents. For the screen, use a screen-specific cleaning solution and a microfiber cloth.

2. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, but do not leave it plugged in for extended periods after it's fully charged. Store the device in a cool, dry place when not in use for long durations.

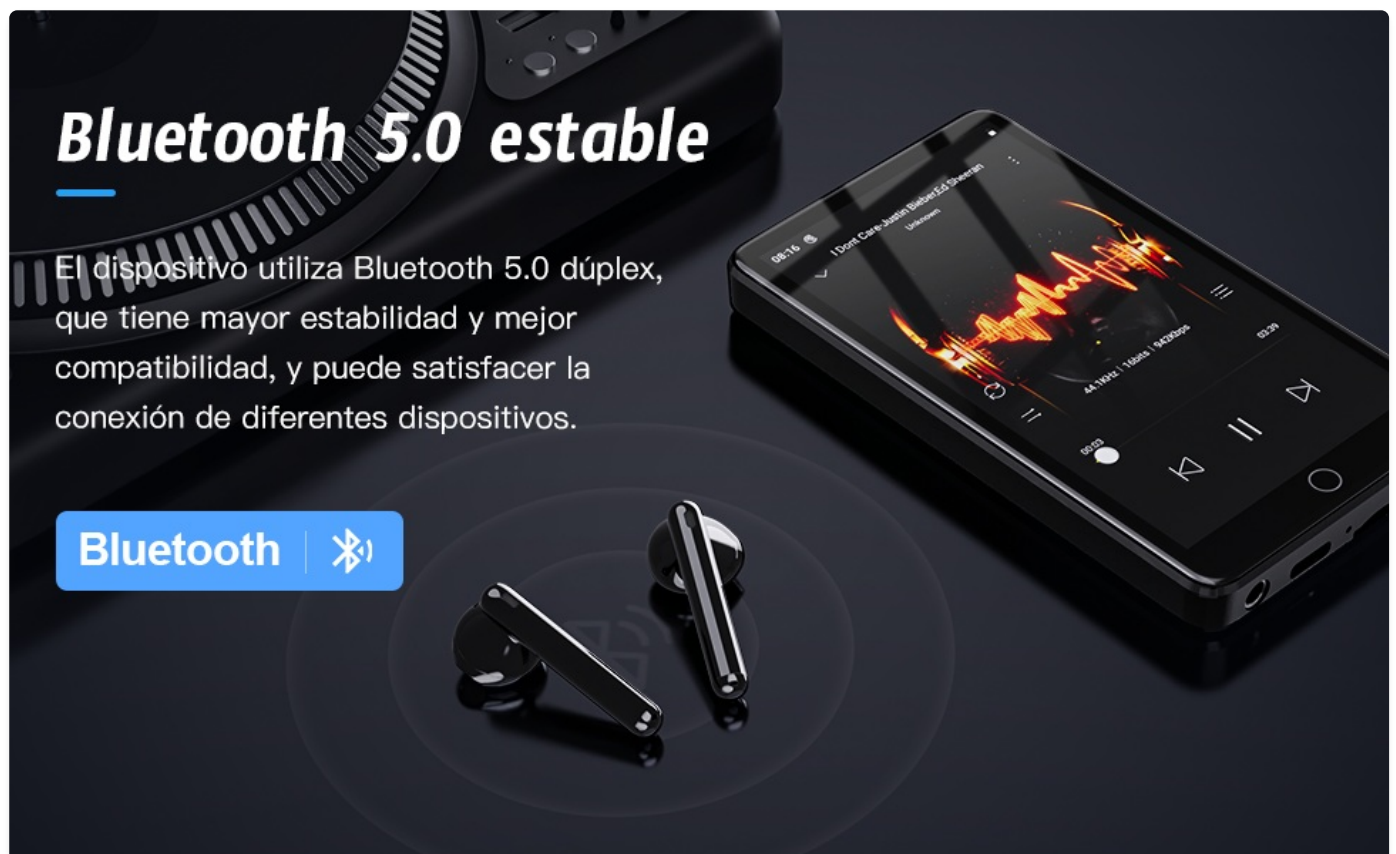


Image: The AHENOD G18-EU MP3 Player screen displaying battery information, highlighting its 2000mAh capacity and estimated usage

3. Software Updates

Periodically check for software updates to ensure optimal performance and security. Connect to Wi-Fi and go to [Settings](#) > [System](#) > [System update](#).

TROUBLESHOOTING

If you encounter issues with your device, refer to the following common solutions:

- **Device not turning on:** Ensure the battery is charged. Connect the device to a charger and wait a few minutes before attempting to power it on again.
- **Screen flickering or unresponsive:** Restart the device by holding the power button. If the issue persists, perform a factory reset (Note: this will erase all data). Navigate to [Settings](#) > [System](#) > [Reset options](#) > [Erase all data \(factory reset\)](#).
- **Bluetooth connectivity issues:** Ensure Bluetooth is enabled on both the player and the target device. Make sure both devices are within range. Try unpairing and re-pairing the devices.
- **Wi-Fi connection problems:** Verify your Wi-Fi password and ensure the router is functioning correctly. Try restarting the player and your Wi-Fi router.
- **Apps crashing or freezing:** Close and reopen the app. Clear the app's cache and data from [Settings](#) > [Apps](#) > [See all apps](#). If the problem continues, uninstall and reinstall the app.
- **Low volume or poor audio quality:** Check the volume settings on the device and any connected audio accessories. Ensure earphones are fully plugged in. For Bluetooth devices, check their individual volume settings.

If these steps do not resolve the issue, please contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	AHENOD
Model	G18-EU
Dimensions	10 x 5 x 1 cm
Weight	200 g
Operating System	Android 13
Processor	8-core MTK
RAM	3 GB
Internal Storage (ROM)	32 GB
Expandable Storage	128 GB TF card included, supports up to 512 GB
Screen Size	4.02 Inches

Display Technology	IPS HD LED Touchscreen
Video Resolution Support	1080P
Battery Capacity	2000 mAh Lithium Ion
Music Playback Time	Up to 25 hours
Video Playback Time	Up to 5 hours
Bluetooth Version	5.0
Wi-Fi Connectivity	2.4 GHz, 5 GHz
Supported Audio Formats	MP3, WAV, APE, FLAC, AAC, OGG, WMA
Supported Video Formats	AVI, MKV, RMVB, MP4, MPG, MOV
Special Features	FM Radio, Parental Control

WARRANTY INFORMATION

Your AHENOD G18-EU MP3 Player is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact AHENOD customer support through the retailer where you purchased the product or visit the official AHENOD website for contact information.

© 2026 AHENOD. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question