

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [OneBlis](#) /

› OneBlis 59-inch Fireplace TV Stand Instruction Manual

OneBlis H21022-59IN

OneBlis 59-inch Fireplace TV Stand Instruction Manual

Model: H21022-59IN

1. INTRODUCTION

Thank you for choosing the OneBlis 59-inch Fireplace TV Stand. This entertainment center is designed to accommodate TVs up to 65 inches and features an integrated electric fireplace with a 3-sided glass display. It offers adjustable flame brightness, multiple LED and flame color options, and ample storage. This manual provides essential information for safe assembly, operation, and maintenance of your new TV stand.



Image 1: The OneBlis 59-inch Fireplace TV Stand with a television and decorative items.

2. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep children and pets away from the assembly area.
- Ensure all connections are secure before plugging in the fireplace.
- Do not overload the TV stand. The tabletop has a maximum load capacity of 150 lbs, and shelves have a maximum load capacity of 35 lbs.
- Place the TV stand on a flat, stable surface to prevent tipping.
- Do not block the air vents of the electric fireplace. Maintain adequate clearance around the unit.
- Unplug the fireplace from the power outlet before cleaning or performing any maintenance.

3. PACKAGE CONTENTS

Your OneBlis Fireplace TV Stand is shipped in two separate packages: one for the TV stand components and one for the electric fireplace insert. All hardware and parts are clearly numbered for easy identification during assembly. Please ensure all packages have arrived and all components are present before beginning assembly.

PRODUCT DIMENSION



 TV stand and electric fireplace will be shipped in **2 separate packages**



Max. Load

-  • Tabletop max load to **150 lbs**
-  • Shelf max load to **35 lbs**

Image 2: Product dimensions and maximum load capacities. Note that the TV stand and fireplace ship in two separate packages.

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the OneBlis Fireplace TV Stand requires two people and approximately 1-2 hours. Illustrated, step-by-step instructions are included with your product. All parts and hardware are labeled to simplify the process. A power drill is recommended for faster and easier assembly, but use caution to avoid overtightening screws, especially with engineered wood components.

Assembly Tips:

- Lay out all components on a soft, clean surface to prevent scratches.
- Identify each part by its corresponding number or letter as per the included manual.

- Do not fully tighten all screws until the entire unit is assembled, then tighten them securely.
- Ensure the electric fireplace insert is properly seated in its compartment before connecting power.



Details Show

Ample storage space to showcase your stylish decors



**Adjustable
Shelves**



**Large Cabel
Holes**



**Open Storage
Cabinet**

Image 3: Features such as adjustable shelves, cable management holes, and open storage.

5. OPERATING INSTRUCTIONS

5.1 Electric Fireplace Operation

The electric fireplace features a control panel on the unit and a remote control for convenient operation. Ensure the fireplace is plugged into a standard electrical outlet.

24" 3D FIREPLACE INSERT

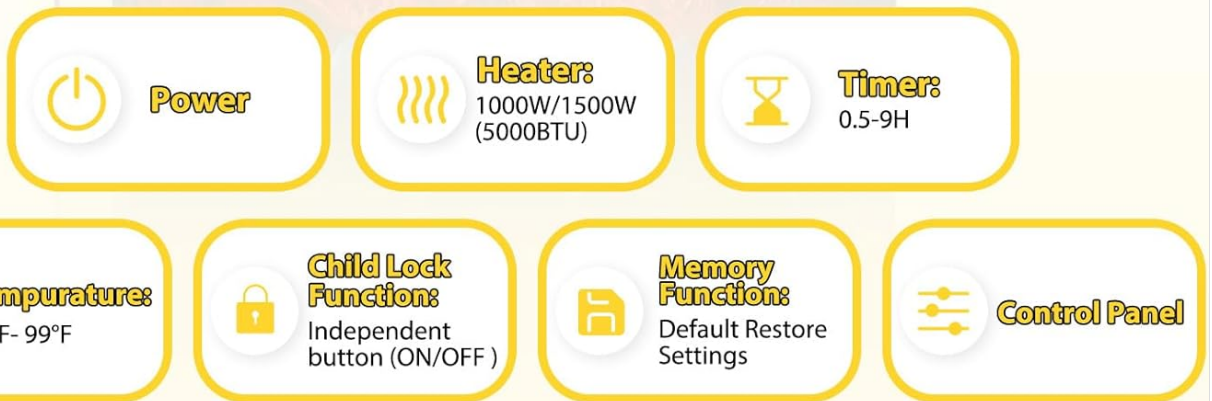


Image 4: Fireplace insert control panel and remote functions.

Controls and Functions:

- **Power:** Turns the fireplace on or off.
- **Heater:** Activates the heating function. Choose between 1000W or 1500W settings (5000 BTU). The heater operates quietly.
- **Timer:** Sets an automatic shut-off timer from 0.5 to 9 hours.
- **Temperature:** Adjusts the desired room temperature from 60°F to 99°F.
- **Flame Brightness:** Select from 5 levels of flame brightness (L1-L5, L5 being brightest).
- **Flame Color:** Choose from 12 distinct flame colors to customize the ambiance.
- **LED Color:** Select from 12 LED colors for the integrated light strips within the glass cabinets.
- **Child Lock Function:** An independent button on the remote to lock/unlock controls.
- **Memory Function:** The fireplace retains your last settings for flame color, brightness, and temperature.

12 Flame Color & 12 LED Color

Tailor perfect atmosphere space to suit your mood



Image 5: Available flame colors and brightness levels.

5.2 TV Stand Usage

- The 59-inch wide tabletop is designed to support televisions up to 65 inches.
- Utilize the adjustable shelves within the glass-enclosed cabinets for media devices, books, or decorative items.
- Route cables through the large cable management holes located in the open storage cabinet to maintain a tidy appearance.

59" Farmhouse TV Stand with 24" Fireplace



Image 6: The TV stand is compatible with various TV sizes, up to 65 inches.

6. MAINTENANCE

- **Cleaning:** Dust the TV stand regularly with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and mild cleaner, then wipe dry immediately. Avoid abrasive cleaners or solvents.
- **Fireplace:** Ensure the fireplace is unplugged before cleaning. Wipe the exterior with a soft, damp cloth. Do not spray water directly onto the unit. Periodically check air vents for dust accumulation and clean as needed to ensure proper airflow.
- **Glass Doors:** Clean glass surfaces with a glass cleaner and a soft cloth to avoid streaks.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

- **Fireplace not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the power button on the unit or remote is pressed.

- **No heat output:** Verify the heater function is activated and the temperature setting is above the current room temperature. Ensure air vents are not obstructed.
- **Flames or LEDs not working:** Check power connection. If only specific colors or brightness levels are affected, try cycling through the settings using the remote or control panel.
- **Remote control not working:** Replace batteries in the remote control. Ensure there are no obstructions between the remote and the fireplace sensor.
- **Unstable TV stand:** Ensure the TV stand is placed on a level surface. Check all assembly screws and tighten any loose connections.

8. SPECIFICATIONS

Brand	OneBlis
Model Number	H21022-59IN
Material	Engineered Wood (MDF)
Color	Black
Product Dimensions	59 x 13.8 x 31.5 inches (W x D x H)
Item Weight	123 pounds
Max TV Size	Up to 65 inches
Tabletop Load Capacity	150 lbs
Shelf Load Capacity	35 lbs
Fireplace Heater	1000W / 1500W (5000 BTU)
Temperature Range	60°F - 99°F
Flame/LED Colors	12 each
Assembly Required	Yes
Batteries Required	No (for unit, remote requires batteries)

9. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For warranty details, replacement parts, or technical support, please refer to the documentation included with your purchase or contact OneBlis customer service directly through their official website or the retailer where the product was purchased.