

- Manuals.plus /
- > IBELL /
 - > IBELL ICM 04L Ice Cream Maker User Manual

IBELL ICM 04L

IBELL ICM 04L Ice Cream Maker User Manual

Model: ICM 04L

- Introduction
- Safety Instructions
- Product Components
- Setup & First Use
- Operation
- Cleaning & Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. INTRODUCTION

Thank you for purchasing the IBELL ICM 04L Ice Cream Maker. This appliance is designed to help you create delicious homemade ice cream, sorbet, and frozen yogurt with ease. Please read this manual thoroughly before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.



**1 Year Standard Warranty +
1 Year Additional Warranty
On Free Registration**

Image 1: IBELL ICM 04L Ice Cream Maker. This image shows the complete ice cream maker unit, highlighting its compact design and overall appearance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not immerse the motor unit in water or other liquids.
- Always unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from the paddle during operation to reduce the risk of injury and/or damage to the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- This appliance is for household use only.
- Close supervision is necessary when any appliance is used by or near children.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your IBELL ICM 04L Ice Cream Maker:



Image 2: Labeled components of the IBELL ICM 04L Ice Cream Maker. This diagram illustrates the Motor Unit, ON/OFF switch, Paddle, Cooling Bowl, and Outer Cover with Handle.

1. **Motor Unit:** Contains the 7W motor and ON/OFF switch.
2. **ON/OFF Switch (O/I):** Controls the power to the motor.

3. **Paddle:** The two-way rotating paddle for mixing ingredients.
4. **Cooling Bowl:** Detachable bowl that requires pre-freezing.
5. **Outer Cover with Handle:** Provides insulation and a convenient handle for the cooling bowl.

4. SETUP AND BEFORE FIRST USE

Before using your ice cream maker for the first time, or after prolonged storage, follow these steps:

- **Wash all parts:** Wash the cooling bowl, paddle, and outer cover with warm, soapy water. Rinse thoroughly and dry completely. The motor unit should only be wiped clean with a damp cloth.
- **Freeze the Cooling Bowl:** Place the cooling bowl in a freezer set to at least -18°C (0°F) for a minimum of 12 hours. Ensure the bowl is placed upright to allow the freezing liquid within its walls to freeze evenly. A properly frozen bowl is crucial for successful ice cream making.
- **Chill Ingredients:** For best results, chill your ice cream mixture ingredients in the refrigerator for 1-2 hours before adding them to the machine. This will help the machine make ice cream faster and achieve a better consistency.



Before Use

- Before using for the first time (or after prolonged without use), wash any parts that will come into contact with food
- Place the cooling bowl in a freezer, and leave it there for at least **12 hours**
- The cooling bowl must be in upright position; The temperature in the freezer must be at least -18°C (or turn it to max freezing level) to allow the cooling bowl to freeze properly.
- Chill ingredients for **1-2** hours before use, the machine will make ice cream faster

Image 3: Preparation steps for the IBELL ICM 04L Ice Cream Maker. This image visually reinforces the importance of freezing the cooling bowl and chilling ingredients before use.

5. OPERATING INSTRUCTIONS

Follow these steps to make your favorite frozen treats:

1. **Assemble the Machine:**

- Place the frozen cooling bowl into the outer cover.
- Insert the paddle into the center of the cooling bowl.
- Place the motor unit on top, ensuring the paddle engages with the motor drive.

2. **Add Ingredients:** Pour your chilled ice cream, sorbet, or frozen yogurt mixture into the cooling bowl through the opening in the motor unit lid. Do not fill above the maximum fill line (approximately 400ml capacity) to allow for expansion during freezing.

3. **Start Churning:** Plug in the appliance and press the ON/OFF switch to the 'I' position to start the motor. The paddle will begin to rotate, mixing and churning the ingredients.

4. **Churning Time:** Churn for approximately 20-40 minutes, or until the mixture reaches your desired consistency. The churning time may vary depending on the recipe and room temperature.

5. **Check Consistency:** The mixture will thicken as it churns. For a softer consistency, serve immediately. For a firmer consistency, transfer the mixture to an airtight container and place it in the freezer for an additional 1-2 hours.

6. **Turn Off and Disassemble:** Once done, press the ON/OFF switch to the 'O' position and unplug the appliance. Carefully remove the motor unit, then the paddle, and finally the cooling bowl from the outer cover.



Image 4: The IBELL ICM 04L Ice Cream Maker during operation. This image demonstrates the process of pouring the ice cream mixture into the machine while the paddle is churning.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your ice cream maker:

- **Unplug:** Always ensure the appliance is unplugged before cleaning.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
- **Cooling Bowl, Paddle, and Outer Cover:** These parts can be washed in warm, soapy water. Rinse thoroughly and dry completely before storing. Do not wash in a dishwasher as extreme heat may damage the cooling bowl.
- **Storage:** Store the disassembled, clean, and dry parts in a cool, dry place.

Note: The product specifications mention "Product Care Instructions: Dry clean only". This instruction is generally not applicable to food contact parts of an ice cream maker. For hygiene, the cooling bowl, paddle, and outer cover must be washed with water. The motor unit should be wiped clean.

7. TROUBLESHOOTING

If you encounter any issues with your IBELL ICM 04L Ice Cream Maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet malfunction; ON/OFF switch not engaged.	Ensure the power cord is securely plugged into a working outlet. Check the ON/OFF switch is in the 'I' position.
Mixture is not freezing or is too soft.	Cooling bowl not frozen long enough; ingredients not chilled; recipe issue.	Ensure the cooling bowl was frozen for at least 12 hours at -18°C. Chill ingredients before adding. Adjust recipe if necessary.
Paddle stops rotating during operation.	Mixture is too thick; too much mixture in the bowl.	Ensure the mixture is not too thick for the machine. Do not exceed the maximum fill line (400ml).
Loud noise during operation.	Paddle not properly seated; motor unit not correctly assembled.	Disassemble and reassemble the paddle and motor unit, ensuring all parts are correctly aligned.

8. PRODUCT SPECIFICATIONS

Technical details for the IBELL ICM 04L Ice Cream Maker:

- Brand:** IBELL
- Model Number:** IBLICM04L
- Capacity:** 400 Milliliters
- Motor Power:** 7W
- Special Features:** Cooling Bowl, Two-Way Rotating Paddle
- Material:** Plastic
- Operation Mode:** Automatic
- Item Dimensions (L x W x H):** 10L x 10W x 21H Centimeters
- Item Weight:** 900 Grams
- Included Components:** Ice Cream Maker (Motor Unit, Paddle, Cooling Bowl, Outer Cover)



Image 5: Dimensions of the IBELL ICM 04L Ice Cream Maker. This image provides a visual representation of the product's height (21cm / 8.2in) and width (10cm / 3.9in).

9. WARRANTY AND SUPPORT

Warranty Information:

The IBELL ICM 04L Ice Cream Maker comes with a **1 Year standard warranty**. An additional **1 Year warranty** can be obtained upon registration. Registration must be completed within 30 days from the date of purchase to avail the extended warranty.

Customer Support:

For any queries, assistance, or warranty claims, please contact IBELL customer support:

Manufacturer: Innovative Technologies, IBELL

Address: Fida's Building, Thottumugham P.O, Aluva, Kerala - 683105

Phone: 1800 2020 260

Email: connect@ibellstore.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FM8823B9>

More documents and user manuals: <https://manuals.plus/>