

[Manuals.plus](#) /

› [Brewmann](#) /

› Brewmann Single Serve Hot & Iced Coffee Maker KY-632S Instruction Manual

## Brewmann KY-632S

# Brewmann Single Serve Hot & Iced Coffee Maker

Model: KY-632S

### IMPORTANT SAFEGUARDS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Do not immerse the appliance, power cord, or plug in water or other liquids.
- This appliance is for household use only.
- Ensure the voltage indicated on the appliance matches your local power supply.
- Always unplug the coffee maker when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug.
- Keep the appliance out of reach of children.
- Avoid contact with hot surfaces. Use handles or knobs.
- Do not place the coffee maker on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the water reservoir is filled to the appropriate level before brewing.
- The appliance features an auto shut-off function after 25 minutes for safety and energy saving.
- This product is made from BPA-free materials.

### PRODUCT OVERVIEW

The Brewmann Single Serve Hot & Iced Coffee Maker is designed for convenience and versatility, allowing you to brew hot or iced coffee using K-Cup pods or ground coffee.

# SINGLE OR 4-CUP BREW

## Compact Coffee Maker



**Brew Pods & Grounds**



**5 Preset Cup Sizes:  
6oz/ 8oz/ 10oz/ 12oz/ 24oz**



**Iced Coffee Function**



**30s Fast Heating System**



**42oz Large Water Tank**



**Descaling Reminder**



Image: Brewmann coffee maker highlighting key features like brew pods & grounds, 5 preset cup sizes, iced coffee function, fast heating, 42oz water tank, and descaling reminder.

### Components Included:

- Brewmann Coffee Maker
- K Pod Holder (for K-Cup capsules)
- Ground Coffee Filter (for ground coffee & tea)
- Coffee Measuring Spoon
- Instruction Manual



Image: The Brewmann coffee maker displayed with its included accessories: the K Pod holder, ground coffee filter, and coffee measuring spoon.

### Product Dimensions:

- Depth: 10 inches
- Width: 5.28 inches
- Height: 11.8 inches



Image: Diagram illustrating the compact dimensions of the Brewmann coffee maker, showing its height, width, and depth.

## SETUP

### Before First Use:

1. Unpack the coffee maker and all accessories. Remove any packaging materials.
2. Wash the removable parts (water reservoir lid, K Pod holder, ground coffee filter, drip tray, and drip tray plate) in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a damp cloth.
4. Perform a cleansing brew cycle: Fill the water reservoir with clean water to the MAX line. Place an empty mug on the drip tray. Close the lid. Select the largest brew size (24oz) and press the brew button. Discard the hot water after the cycle. Repeat this process 2-3 times to ensure the internal components are clean.

### Drip Tray Adjustment:

The drip tray can be adjusted to three different heights to accommodate various mug sizes, including travel mugs up to 7 inches tall.

- To adjust, simply lift the drip tray and reposition it into the desired slot.
- For taller mugs, the drip tray can be removed entirely.

## 3-Level Height Adjustment Splash-free Brewing



Image: Three views of the Brewmann coffee maker demonstrating the adjustable drip tray for different cup sizes, including removal for tall travel mugs.

### OPERATING INSTRUCTIONS

#### General Brewing Steps:

1. Fill the water reservoir with fresh, cold water. Do not exceed the MAX fill line. The 42oz tank allows for multiple brews without refilling.
2. Place your mug on the drip tray. Adjust the drip tray height if necessary.
3. Open the brew head lid.
4. Insert either a K-Cup pod into the K Pod holder or ground coffee into the ground coffee filter. Refer to specific instructions below.
5. Close the brew head lid firmly.

6. Select your desired brew size (6oz, 8oz, 10oz, 12oz, or 24oz) using the 'SIZE' button.
7. Select your desired brew type (Regular, Strong, or Over Ice) using the respective buttons.
8. Press the 'BREW' button to start brewing. The indicator light will illuminate.
9. The coffee maker will automatically stop brewing once the cycle is complete.



Image: Close-up of the control panel showing the brew size selection buttons (6oz, 8oz, 10oz, 12oz, 24oz) and brew type options.

### Using K-Cup Pods:

1. Place the K Pod holder into the brew head.
2. Insert a standard K-Cup pod into the K Pod holder.
3. Follow general brewing steps 5-9.

### Using Ground Coffee:

1. Place the ground coffee filter into the brew head.

2. Add your desired amount of ground coffee into the filter. Do not overfill. The included measuring spoon can assist.
3. Follow general brewing steps 5-9.

## COMPATIBLE WITH K CUP & GROUNDS & TEA



Coffee Capsules



Coffee



Tea



**K Pod Holder**  
Fits for Standard K-Cup Capsules



**Ground Coffee Filter**  
Fits for Ground Coffee & Tea

Image: The K Pod holder for K-Cup capsules and the ground coffee filter for ground coffee or tea, demonstrating the versatility of the coffee maker.

### Brewing Iced Coffee:

For iced coffee, use the 'OVER ICE' setting. This setting uses a lower temperature brew to prevent dilution when brewing over ice.

1. Fill your mug with ice. A 1:1 ratio of ice to coffee is recommended for optimal flavor.
2. Prepare your K-Cup pod or ground coffee as usual.
3. Select either the 6oz or 8oz brew size.
4. Press the 'OVER ICE' button.
5. Press the 'BREW' button to start.

# ICED COFFEE MADE EASY

Lower-temp brew setting for smooth, ready-to-chill coffee.



Image: The Brewmann coffee maker dispensing coffee over a cup filled with ice, illustrating the iced coffee function.

## MAINTENANCE

### Daily Cleaning:

- Always unplug the coffee maker before cleaning.
- Remove and empty the K Pod holder or ground coffee filter after each use. Rinse under running water.
- Empty and clean the drip tray and drip tray plate.
- All removable parts are dishwasher-safe for easy cleaning.
- Wipe the exterior of the coffee maker with a damp cloth. Do not use abrasive cleaners.

## Clean Made Effortless

Self-Clean Reminder & One-Touch Cleaning  
Dishwasher-safe parts — save time, stay fresh. ✓



Image: Illustration of the coffee maker's easy-clean features, including a self-clean reminder and dishwasher-safe parts.

### Descaling:

Mineral deposits from water can build up in your coffee maker over time, affecting performance and taste. The Brewmann coffee maker features an automatic descaling reminder.

- When the 'DESCALE' indicator light illuminates, it is time to descale your machine.
- To descale, fill the water reservoir with a mixture of 1 part white vinegar and 2 parts water, or use a commercial descaling solution according to its instructions.
- Place a large empty mug on the drip tray.
- Press the 'DESCALE' button and then the 'BREW' button to start the descaling cycle.
- After the cycle is complete, discard the solution.
- Run 2-3 cycles with fresh, clean water to rinse out any remaining descaling solution.
- Regular descaling extends the machine's lifespan and maintains optimal brewing performance.

# SMART FUNCTIONS FOR DURABILITY



**Descaling Reminder**



**BPA-FREE**



**Auto Shut-Off**

**\* Regular descaling extends the machines lifespan.**



Image: The Brewmann coffee maker with icons indicating the descaling reminder, BPA-free materials, and auto shut-off feature.

## TROUBLESHOOTING

| Problem               | Possible Cause                                                               | Solution                                                               |
|-----------------------|------------------------------------------------------------------------------|------------------------------------------------------------------------|
| Coffee does not brew. | No water in reservoir; Lid not fully closed; Power issue.                    | Fill reservoir; Ensure lid is securely closed; Check power connection. |
| Coffee tastes weak.   | Too much water; Not enough coffee grounds; Incorrect brew strength selected. | Use less water or more coffee; Select 'STRONG' brew option.            |

| Problem                   | Possible Cause                                                                 | Solution                                                                                                                                                 |
|---------------------------|--------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Coffee overflows.         | Mug too small for selected brew size; Drip tray not positioned correctly.      | Use a larger mug; Adjust or remove drip tray for taller mugs.                                                                                            |
| Descaling light is on.    | Mineral buildup.                                                               | Perform a descaling cycle as per maintenance instructions.                                                                                               |
| Water leaks from machine. | Water reservoir not seated correctly; Overfilled reservoir; Internal blockage. | Ensure reservoir is properly seated; Do not overfill past MAX line; Perform descaling to clear blockages. If problem persists, contact customer support. |

## SPECIFICATIONS

- **Model:** KY-632S
- **Brand:** Brewmann
- **Capacity:** 42 oz water tank (approx. 7 cups)
- **Brew Sizes:** 6oz, 8oz, 10oz, 12oz, 24oz
- **Power:** 1100 Watts
- **Voltage:** 120 Volts AC
- **Dimensions (D x W x H):** 10" x 5.28" x 11.8"
- **Weight:** 3.3 pounds
- **Material:** Metal, Plastic, Stainless Steel (BPA-Free)
- **Features:** Auto Clean Function, Auto Shut-Off (25 minutes), Lightweight, Permanent Filter, Single Cup Brew, Iced Coffee Function, Descaling Reminder.
- **Compatible Coffee Input:** Ground coffee, K-Cup pods

## WARRANTY AND SUPPORT

### Warranty Information:

This Brewmann coffee maker (Model KY-632S) comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

The warranty does not cover damage resulting from misuse, accident, alteration, neglect, commercial use, or failure to follow the instructions in this manual, including proper descaling procedures.

### Customer Support:

For technical assistance, warranty claims, or general inquiries, please contact Brewmann customer support. Refer to the contact information provided on the product packaging or the official Brewmann website.

Please have your model number (KY-632S) and proof of purchase ready when contacting support.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**