

Odoland OD0671HQ

Odoland 30000mAh Camping Fan with LED Lantern User Manual

Model: OD0671HQ

PRODUCT OVERVIEW

The Odoland 30000mAh Camping Fan with LED Lantern is a versatile and portable device designed for various outdoor and indoor uses, including camping, RV trips, job sites, and power outages. It combines a powerful fan with an integrated LED lantern and a large-capacity rechargeable battery that can also function as a power bank.

- **Powerful Airflow:** Features 4 fan speeds, providing strong and quiet wind up to 15 ft/s.
- **Integrated LED Lantern:** Offers 3 brightness settings for soft night lighting or strong illumination.
- **Long-lasting Battery:** Equipped with a 30000mAh battery, offering extended operation times and supporting charging while in use.
- **Power Bank Function:** Supports reverse charging for emergency power to mobile phones, GPS, and other devices.
- **Automatic Oscillation & Adjustable Head:** Provides 90° or 45° automatic swing and a 270° swivel head for optimal comfort.
- **Remote Control:** Allows convenient operation from up to 25ft away.
- **Portable Design:** Lightweight and compact with a standing base and a 360° rotation hanging hook for versatile placement.



Image: The Odoland Camping Fan being used in diverse outdoor environments such as camping, fishing, RV camping, and picnicking, highlighting its versatility.

SETUP

Unpacking and Initial Inspection

- Carefully remove all components from the packaging.
- Verify that all items are present: 1x Fan, 1x Manual, 1x Remote control, 1x Type-C charging cable.
- Inspect the fan and accessories for any signs of damage.

Package Included



USB & Type-C Charging Port



360° Rotation Hanging Hook

Image: A visual representation of the package contents, including the fan, manual, remote control, and Type-C charging cable, along with dimensions and port details.

Charging the Fan

- Before first use, fully charge the fan.
- Connect the provided Type-C charging cable to the fan's Type-C charging port and a suitable USB power adapter (not included).
- The battery indicator lights on the fan will show the charging progress. A full charge typically takes 7-8 hours.

Remote Control Setup

- Locate the remote control.
- Remove the insulation strip from the remote control's battery compartment before use.

OPERATING INSTRUCTIONS

Powering On/Off

- Press the power button on the fan's control panel or the 'OFF' button on the remote control to turn the fan on or off.

Fan Speed Adjustment

- The fan has 4 speed settings. Press the fan speed button on the control panel or the '+' / '-' buttons on the remote to cycle through speeds 1 (low) to 4 (high).



Image: The Odoland Camping Fan displaying its four fan speed settings and their corresponding continuous working times.

LED Lantern Brightness

- The LED lantern has 3 brightness levels. Press the light button on the control panel or the sun icon buttons on the remote to adjust brightness.



3 Brightness Levels



Image: The Odoland Camping Fan illustrating its three brightness levels (Low, Medium, Strong) and their respective continuous operation hours.

Oscillation Function

- Press the oscillation button on the control panel or the remote to activate the automatic 90° or 45° swing.
- The fan head can also be manually swiveled 270° for precise airflow direction.

Automatic Oscillating Fan with Remote Control



Image: The Odoland Camping Fan demonstrating its 90°/45° automatic oscillation and 270° manual swivel head for comprehensive air distribution.

Timer Settings

- Use the timer button on the control panel or the clock icon on the remote to set the fan to operate for 1, 2, 4, or 8 hours.

Power Bank Usage

- Connect your device's charging cable to the USB or Type-C output port on the fan.
- The fan's battery will provide emergency charging to your device.

Emergency Power Bank

Can be a emergency power to
charge your phone



Image: The Odoland Camping Fan being used as an emergency power bank to charge a smartphone in an outdoor setting.

Placement Options

- **Standing:** Place the fan on a flat, stable surface.
- **Hanging:** Utilize the 360° rotation hanging hook located on the base to suspend the fan from a tent ceiling, branch, or other suitable fixture.



Image: The Odoland Camping Fan highlighting its easy-to-carry design, weather and impact resistance, and the 360° upside-down hook for hanging.

MAINTENANCE

Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Wipe the exterior of the fan with a soft, damp cloth. Do not use abrasive cleaners or immerse the fan in water.
- For the fan blades, use a soft brush or compressed air to remove dust and debris.

Storage

- Store the fan in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% to prolong its lifespan.

TROUBLESHOOTING

Fan Not Turning On

- Check if the battery is charged. If not, connect the fan to a power source using the Type-C cable.
- Ensure the power button is pressed firmly.

LED Lantern Not Working

- Verify the fan has sufficient battery charge.
- Press the light button to cycle through brightness settings.

Remote Control Not Responding

- Ensure the insulation strip has been removed from the remote's battery compartment.
- Check the remote control's battery and replace if necessary.
- Make sure there are no obstructions between the remote and the fan.

Poor Airflow

- Increase the fan speed setting.
- Ensure the fan blades are clean and free from dust or obstructions.

SPECIFICATIONS

Brand	Odoland
Model Name	OD0671HQ-odoland
Power Source	Battery Powered
Battery Capacity	30000mAh
Fan Speeds	4
LED Brightness Levels	3
Oscillation	45° / 90° Automatic
Swivel Head	270° Manual
Timer Settings	1H, 2H, 4H, 8H
Charging Ports	USB & Type-C (Input/Output)
Mounting Type	Table Mount, Freestanding, Hanging Hook
Material	Plastic
Included Components	Batteries included

WARRANTY AND SUPPORT

Warranty Information

This product comes with a 30-day warranty. Please retain your proof of purchase for any warranty claims.

Customer Support

For further assistance, troubleshooting, or to inquire about product information, please visit the official Odoland Store on Amazon: [Odoland Store](#).