

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ARCADE1UP](#) /
- › [Arcade1Up Ms. Pac-Man Classic SE Arcade Machine User Manual](#)

## ARCADE1UP MSP-A-405629

# Arcade1Up Ms. Pac-Man Classic SE Arcade Machine User Manual

Brand: ARCADE1UP | Model: MSP-A-405629

[Introduction](#)   [Safety Information](#)   [Package Contents](#)   [Setup](#)   [Operation](#)   [Maintenance](#)  
[Warranty & Support](#)  
[Troubleshooting](#)   [Specifications](#)   [Support](#)

## 1. INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your Arcade1Up Ms. Pac-Man Classic SE Arcade Machine. Please read this manual thoroughly before use to ensure proper function and safety.





Image 1: The Arcade1Up Ms. Pac-Man Classic SE Arcade Machine, featuring vibrant blue and pink artwork with Ms. Pac-Man characters.

## 2. SAFETY INFORMATION

Please observe the following safety precautions:

- Keep the arcade machine away from water or excessive moisture.
- Ensure the power cord is not damaged or frayed.
- Do not attempt to open or modify the machine. Refer all servicing to qualified personnel.
- Place the machine on a stable, level surface to prevent tipping.
- Supervise children during use.

## 3. PACKAGE CONTENTS

Your Arcade1Up Ms. Pac-Man Classic SE Arcade Machine package includes:

- Arcade Machine Cabinet
- Power Adapter
- Instruction Manual (this document)

*Note: An optional riser may be sold separately.*

## 4. SETUP

### 4.1 Assembly

The Arcade1Up Ms. Pac-Man Classic SE Arcade Machine requires some assembly. Follow the detailed instructions provided in the separate assembly guide included with your product. Ensure all screws and fasteners are securely tightened before use.



Image 2: Dimensions of the Arcade1Up Ms. Pac-Man Classic SE Arcade Machine, showing its height of 45.4 inches without a riser and

indicating an optional riser is sold separately.

## 4.2 Power Connection

1. Locate the power input port on the back of the arcade machine.
2. Connect the provided power adapter to the machine.
3. Plug the power adapter into a standard electrical outlet.
4. Ensure the power switch (if present) is in the 'OFF' position before plugging in.

Your browser does not support the video tag.

Video 1: An overview of the Arcade1Up Ms. Pac-Man Classic SE Arcade Machine, demonstrating its features and setup in a home environment. This video is provided by the seller.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Powering On/Off

Locate the power switch on the control panel. Flip the switch to 'ON' to power on the machine. Flip to 'OFF' to power off.

### 5.2 Game Selection

Upon powering on, you will see a game selection menu. Use the joystick to navigate through the available games. Press the 'Start Game' button to select and launch your desired game.



# ARCADE1UP

## 13 GAMES INCLUDED

MS.  
PAC-MAN



PAC-MAN<sup>TM</sup>  
PLUS

SUPER  
PAC-MAN

PAC-MANIA

PAC & PAL

DIG DUG

DIG DUG 2

Galaga

MAPPY

Galaxian

ROVERS

Galaga  
88

THE  
TOWER OF  
DRUAGA

Image 3: The Arcade1Up Ms. Pac-Man Classic SE Arcade Machine displaying the list of 13 included games, such as Ms. Pac-Man, Dig Dug, and Galaga.

### 5.3 Controls

- **Joystick:** Used for character movement in games.
- **Start Game Button:** Initiates a game or confirms selection.
- **Action Buttons:** Used for specific in-game actions (e.g., firing, jumping).
- **Volume Control:** Adjust the game sound level using the dedicated volume buttons.
- To return to the game selection menu or save a high score, hold the 'Start Game' button for 5 seconds.
- To reset a game, hold the 'Start Game' button for 5 seconds.



Image 4: A detailed view of the control panel, highlighting the joystick, start game button, and other action buttons for gameplay.

## 5.4 Included Games

Your Arcade1Up Ms. Pac-Man Classic SE Arcade Machine includes 13 classic games:

- Ms. PAC-MAN
- PAC-MAN PLUS
- SUPER PAC-MAN
- PAC & PAL

- PACMANIA
- DIG DUG
- DIG DUG 2
- GALAGA
- GALAXIAN
- GALAGA 88
- MAPPY
- ROMPERS
- THE TOWER OF DRUAGA

### 5.5 WiFi Leaderboards

Connect your arcade machine to WiFi to access online leaderboards and compete for high scores globally. Refer to the on-screen prompts for WiFi setup and leaderboard access.

Your browser does not support the video tag.

Video 2: Gameplay footage of the Arcade1Up Ms. Pac-Man Classic SE Arcade Machine, showcasing the classic arcade experience and the online leaderboard feature. This video is provided by the seller.

## 6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the cabinet and screen. Avoid abrasive cleaners or excessive moisture.
- **Storage:** Store the machine in a cool, dry place away from direct sunlight and extreme temperatures.
- **Power Cord:** Regularly inspect the power cord for any signs of damage.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not power on.	Power cord not connected; outlet not working.	Ensure power cord is securely plugged in. Test the outlet with another device.
No sound.	Volume turned down; speaker issue.	Check volume settings on the control panel. If problem persists, contact support.
Game freezes or crashes.	Software glitch; temporary error.	Power off the machine, wait 10 seconds, then power back on.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	MSP-A-405629
Dimensions (H x W x D)	45.4" x 17.35" x 45.4" (without riser)
Screen Size	15.6 Inches IPS Color Monitor
Number of Games	13

Feature	Detail
Controller Type	Joystick
Power Source	Corded Electric
Material	Plastic, Acrylonitrile Butadiene Styrene (ABS)
Item Weight	47 pounds
Manufacturer Recommended Age	10 years and up
Connectivity	WiFi Leaderboards

## 9. WARRANTY AND SUPPORT




For warranty information, technical support, or service inquiries, please refer to the official Arcade1Up website or contact their customer service department. Keep your proof of purchase for warranty claims.

Online Support: [www.arcade1up.com](http://www.arcade1up.com)



© 2025 ARCADE1UP. All rights reserved.

### Related Documents - MSP-A-405629

	<p><a href="#">Arcade1Up Pac-Man Deluxe Owner's Manual - Safety, Setup, and Troubleshooting</a></p> <p>This official owner's manual provides essential safety instructions, installation guidance, game control details, and troubleshooting tips for the Arcade1Up Pac-Man Deluxe arcade machine.</p>
	<p><a href="#">Arcade1Up 40th Anniversary Cabinet Assembly Guide</a></p> <p>Comprehensive assembly instructions for the Arcade1Up 40th Anniversary arcade cabinet. Includes a detailed parts list, tools required, step-by-step guidance with textual descriptions of diagrams, and safety information.</p>
	<p><a href="#">Arcade1Up Class of 81 Owner's Manual - MSP-A-10171</a></p> <p>Comprehensive owner's manual for the Arcade1Up Class of 81 (MSP-A-10171) featuring safety instructions, troubleshooting, game settings, and control layouts for classic arcade games.</p>





Arcade1Up-PacMan  
User Manual - Owner's manual -  
Benutzerhandbuch

### [Arcade1Up Pac-Man Jr. User Manual](#)

User manual for the Arcade1Up Pac-Man Jr. arcade machine, covering setup, safety precautions, game modes, controls, and anti-tip device installation.



### [Arcade1Up Deluxe Class of 1981 Owner's Manual](#)

Owner's manual for the Arcade1Up Deluxe Class of 1981 arcade machine, including safety precautions, installation instructions, specifications, game controls, and troubleshooting.



### [Arcade1Up Counter-Cade Owners Manual - Safety, Controls, and Troubleshooting](#)

Comprehensive owners manual for the Arcade1Up Counter-Cade, detailing safety instructions, installation, game controls for Pac-Man, Space Invaders, Dig Dug, and more, plus troubleshooting tips.