

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CaDA](#) /

› [CaDA Master C66019W Japanese Style Yakitori Izakaya House Building Set Instruction Manual](#)

CaDA C66019W

CaDA Master C66019W Japanese Style Yakitori Izakaya House Building Set

Instruction Manual

INTRODUCTION

Thank you for choosing the CaDA Master C66019W Japanese Style Yakitori Izakaya House Building Set. This comprehensive instruction manual provides essential information for assembling, operating, maintaining, and troubleshooting your model. This building block set, numbered C66019W, allows you to construct a detailed Japanese Yakitori Izakaya, capturing the essence of a Japanese street corner.

The set includes 1,195 high-precision building blocks, offering a challenging yet rewarding building experience. The finished model measures approximately 15.2 x 14.4 x 24.8 cm (5.1 x 6 x 9.5 inches), making it a suitable display piece for various settings.

Key features of this model include:

- **Detailed Architecture:** Recreates the interior and exterior structures of a traditional Japanese Izakaya, including signboards like "Ocha" and "Yekaichu."
- **Authentic Aesthetic:** Features a harmonious color scheme with a dark brown roof, off-white walls, and blue noren curtains, reflecting classic Japanese machiya design.
- **Integrated Lighting:** A built-in warm yellow LED lighting system illuminates the doors and windows, simulating a cozy night-time atmosphere.
- **Interactive Elements:** Includes an opening side wall and a main entrance sliding door for enhanced playability and display options.
- **Quality Components:** Made from high-quality ABS material, ensuring smooth interlocking and a sturdy, durable finished product.
- **Additional Greenery:** A bonus green bonsai model is included to enhance the scene's natural vitality.

This set is designed for enthusiasts aged 14 years and up.

SETUP AND ASSEMBLY

Follow these general steps for assembling your CaDA Master C66019W building set. Refer to the included

physical instruction manual for detailed, step-by-step visual guidance.

1. **Unpack Components:** Carefully open the packaging and remove all bags of building blocks and the instruction manual.
2. **Organize Pieces:** Sort the building blocks by color, shape, or bag number as indicated in the physical manual. This will significantly streamline the assembly process.
3. **Follow Instructions:** Begin assembly according to the numbered steps in the provided instruction booklet. Pay close attention to the diagrams and piece counts for each step.
4. **Secure Connections:** Ensure all blocks are firmly pressed together to create stable connections. The high-quality ABS parts are designed to interlock precisely.
5. **Install Lighting System:** Integrate the warm yellow LED lighting system as directed in the manual. This system is designed to illuminate the interior and exterior features.
6. **Complete Details:** Attach all decorative elements, including signboards, noren curtains, and the bonsai model, to finalize the Izakaya structure.



Image: The fully assembled CaDA Master C66019W Izakaya House, showcasing its detailed design and integrated lighting.

CaDA®



Image: A side view illustrating the functional main entrance sliding door and the opening side wall for interior access.

OPERATING THE MODEL

The primary operational feature of the CaDA C66019W Izakaya House is its integrated lighting system.

- **Activating Lights:** The model includes two 'twist to turn on' lights. Locate these light bricks within the model, typically in the roof section and near the garden lantern. Gently twist the top portion of the light brick to activate the illumination.
- **Deactivating Lights:** To turn off the lights, twist the light brick in the opposite direction until the light extinguishes.
- **Accessing Interior:** The model features an opening side wall and a main entrance sliding door. These can be manually opened to view the detailed interior, including the bar counter and kitchen grill table.

CaDA®

USB with 8 different
lighting effects



Image: The Izakaya model with its USB-powered lighting system active, showcasing the warm illumination.



Open double booth



Kitchen grill table

Image: Interior details, including the open double booth and the kitchen grill table, accessible via the opening side wall.

MAINTENANCE

Proper care will ensure the longevity and display quality of your CaDA Izakaya House model.

- **Cleaning:** To remove dust, use a soft, dry brush or a can of compressed air. For more stubborn dirt, gently wipe with a damp cloth and mild soap, then dry immediately. Avoid harsh chemicals or abrasive materials.
- **Storage:** If disassembling for storage, keep all pieces in sealed bags or containers to prevent loss and damage. Store in a cool, dry place away from direct sunlight to prevent discoloration of the plastic.
- **Handling:** Handle the model with care, especially delicate sections like the roof and the bonsai tree, which may be less stable. Avoid dropping or applying excessive force.
- **Light Batteries:** The 'twist to turn on' light bricks typically have non-replaceable batteries. Once the battery life is depleted, the light function will cease.

TROUBLESHOOTING

Here are solutions to common issues you might encounter during or after assembly:

- **Unstable Sections (e.g., Roof, Tree):** If certain parts feel unstable, double-check the connections. Ensure all bricks are fully pressed together. Sometimes, reassembling a section with firm pressure can improve stability. For decorative elements like the bonsai tree, gentle handling is recommended.
- **Missing Pieces:** In the event of missing pieces, first thoroughly check all packaging and sorting areas. If pieces are confirmed missing, contact CaDA customer support with details of the missing parts (part number, color, quantity).
- **Difficulty Reading Instructions:** If illustrations in the physical manual are unclear, especially for dark-colored bricks, try assembling in a well-lit area. Pay close attention to the shape and number of studs on each piece. Online resources or community forums might also offer alternative views or tips.
- **Lights Not Working:** Ensure the 'twist to turn on' mechanism is fully engaged. If the lights still do not work, the internal battery may be depleted. These light bricks are generally sealed units with non-replaceable batteries.
- **Parts Not Fitting:** Verify that you are using the correct pieces as indicated in the manual. CaDA bricks are designed for precise fit; if a piece doesn't fit, it might be the wrong one or oriented incorrectly. Avoid forcing pieces together.

SPECIFICATIONS

Feature	Detail
Model Number	C66019W
Number of Pieces	1195
Product Dimensions (Assembled)	15.2 × 14.4 × 24.8 cm (5.1 x 6 x 9.5 inches)
Item Weight	3.3 pounds
Material	High-quality ABS Plastic
Recommended Age	14 years and up
Lighting System	Integrated LED lights (twist to turn on)

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

WARRANTY INFORMATION

Specific warranty details for the CaDA Master C66019W Japanese Style Yakitori Izakaya House Building Set are typically provided with the product packaging or can be obtained directly from the manufacturer. Please refer to any documentation included in your product box for warranty terms and conditions. In general, CaDA products are manufactured to high standards, but in case of manufacturing defects or missing parts, the manufacturer's warranty policy would apply.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your CaDA Master C66019W building set, please contact the manufacturer or the retailer from whom you purchased the product. They can provide support for missing parts, assembly issues, or other product-related inquiries.

You may also visit the official CaDA website for additional resources, FAQs, or contact information.