

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Coleshome](#) /

› Coleshome Dresser with Clothes Rail, LED Lighting, and Power Outlets (Model Coleshome-44-356) - User Manual

Coleshome Coleshome-44-356

Coleshome Dresser with Clothes Rail, LED Lighting, and Power Outlets

Model: Coleshome-44-356

INTRODUCTION

Thank you for choosing the Coleshome Multifunctional Dresser. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new furniture. Please read this manual thoroughly before assembly and retain it for future reference.

SETUP AND ASSEMBLY

Before beginning assembly, ensure all parts are present and undamaged. Refer to the included parts list. Assembly typically requires two people. A Phillips head screwdriver and a hammer (not included) may be needed in addition to the provided tools.

Unpacking

- Carefully remove all components from the packaging.
- Place components on a soft, clean surface to prevent scratches.
- Verify all parts against the parts list. If any parts are missing or damaged, contact customer service immediately.

Assembly Steps

1. **Frame Assembly:** Assemble the metal frame components according to the diagrams. Ensure all screws are tightened securely.
2. **Fabric Drawer Installation:** Insert the fabric drawers into their designated slots. Ensure they slide smoothly.
3. **Clothes Rail Attachment:** Securely attach the clothes rail to the frame using the provided hardware.
4. **LED Strip Installation:** Adhere the LED strip along the designated area of the clothes rail section. Connect the power cable.
5. **Power Outlet Unit Installation:** Install the integrated power outlet unit into the tabletop. Connect the power cable to a wall outlet.

6. **Adjustable Feet:** Adjust the feet at the base of the dresser to ensure stability on uneven surfaces.
7. **Anti-Tip Kit Installation:** For safety, attach the anti-tip kit to the dresser and secure it to a wall stud. This is crucial to prevent accidental tipping, especially in households with children or pets.



Image: Overview of the dresser's multifunctional design, highlighting its storage components.

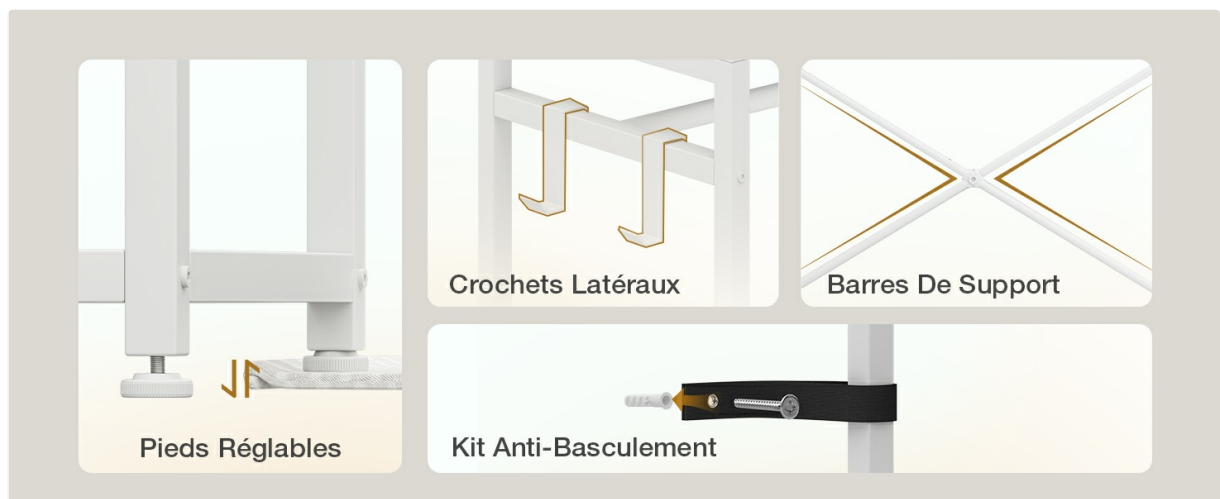


Image: Close-up of adjustable feet, side hooks, support bars, and the anti-tip mechanism for enhanced stability and safety.

OPERATING INSTRUCTIONS

LED Lighting System

The integrated RGB LED strip offers customizable lighting options.

- **Power On/Off:** Use the inline controller to turn the LED lights on or off.
- **Color Selection:** Cycle through 10 static colors using the controller.
- **Dynamic Modes:** Choose from 10 dynamic lighting modes for various effects.
- **Brightness Adjustment:** Adjust the brightness across 7 levels to suit your preference.
- **Memory Function:** The system retains your last setting even after being powered off.



Image: The dresser with its LED lighting active, showcasing its use in a room setting.



Image: Visual representation of the LED lighting system's various modes and functions.

Integrated Charging Station

The dresser includes a convenient charging station for your electronic devices.

- **AC Outlets:** Features 3 AC power outlets (220-250V/15A) for larger electronics.

- **USB Ports:** Includes 2 USB ports (5V/2A) for charging phones, tablets, and other USB-powered devices.
- **Usage:** Simply plug your devices into the appropriate outlets. Ensure the dresser's main power cable is connected to a functional wall outlet.

Steckdosen Zum Aufladen




-  **3 AC-Steckdosen**
220-250V/15A
-  **2 USB-Anschlüsse**
5V/2A
-  **Netzkabel**
150cm



Image: Detail of the charging station, showing AC outlets and USB ports in use.



Prises De Courant Pour La Charge




-  **3 Prises CA**
220-250V/15A
-  **2 Ports USB**
5V/2A
-  **Cordon D'Alimentation**
150cm

Image: Specifications and features of the integrated power strip.

Reversible Design

The dresser's design allows for flexible placement of the clothes rail and drawer sections.

- The clothes rail section can be assembled on either the left or right side of the drawer unit to best fit your room layout.
- Refer to the assembly instructions for specific steps on reversing the configuration.

Umkehrbares Design

Drehen Sie Es, Wechseln Sie Es, Machen Sie Es Funktional Für Ihren Raum!



Image: Illustration of the reversible design, showing the clothes rail configurable on either side.

MAINTENANCE AND CARE

Cleaning

- **Frame:** Wipe the metal frame with a soft, damp cloth. Avoid abrasive cleaners.
- **Fabric Drawers:** Spot clean fabric drawers with a mild detergent and a damp cloth. Allow to air dry completely. Do not machine wash.
- **Electrical Components:** Ensure the unit is unplugged before cleaning near the power outlets or LED strip. Use a dry cloth to wipe these areas.

General Care

- Regularly check all screws and connections to ensure they remain tight.
- Avoid placing excessively heavy items on the top surface or in the drawers.
- Do not expose the dresser to direct sunlight or extreme humidity for prolonged periods.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|--------------------------------------|---|--|
| LED lights do not turn on. | Power cable not connected; LED strip damaged; controller malfunction. | Ensure the power cable is securely plugged into a working outlet. Check connections of the LED strip. If issues persist, contact customer service. |
| Power outlets/USB ports not working. | Dresser not plugged in; power surge; internal wiring issue. | Verify the dresser's main power cable is plugged into a live wall outlet. Test the wall outlet with another device. Avoid overloading the outlets. If still not working, contact customer service. |
| Dresser is wobbly. | Uneven floor; loose connections; adjustable feet not properly set. | Adjust the leveling feet at the bottom of the dresser. Ensure all assembly screws are tightened. Confirm the anti-tip kit is securely installed. |
| Drawers do not slide smoothly. | Improper installation; obstruction; overloaded drawer. | Ensure drawers are inserted correctly. Check for any items obstructing the drawer path. Do not overload drawers beyond their capacity. |

SPECIFICATIONS

Brand: Coleshome

Model Number: Coleshome-44-356

Color: White

Product Dimensions (L x W x H): 30 x 110 x 105 cm

Item Weight: 12 Kilograms

Material: Metal frame, Fabric drawers

Installation Type: Freestanding

Style: Modern

Number of Shelves: 1 (base shelf)

Recommended Uses: Clothes, Shoes, Accessories

Assembly Required: Yes

LED Lighting: RGB, 10 static colors, 10 dynamic modes, 7 brightness levels, memory function

Power Outlets: 3 AC outlets (220-250V/15A), 2 USB ports (5V/2A)

Produktgröße

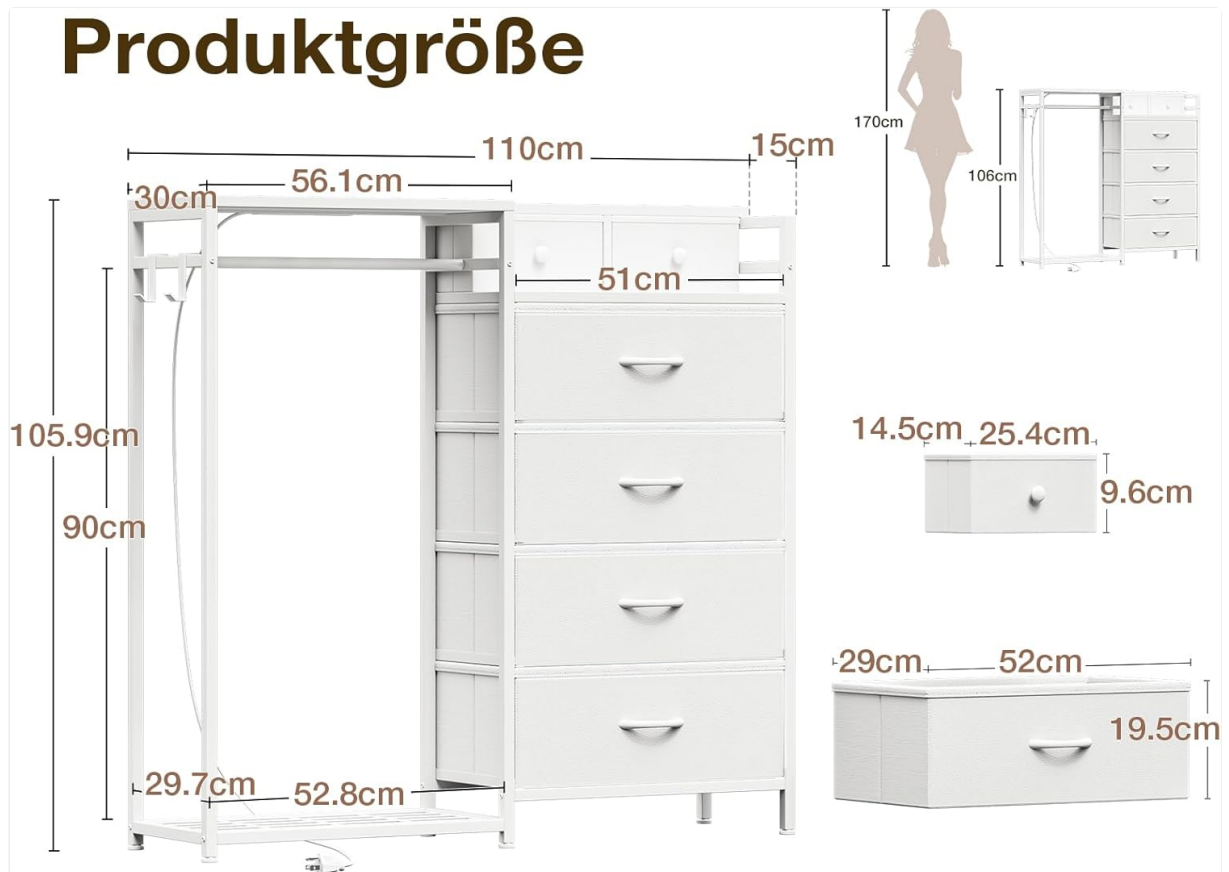


Image: Technical drawing with precise dimensions of the dresser.

WARRANTY INFORMATION

Coleshome offers a 30-day return and exchange guarantee from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Coleshome dresser, please do not hesitate to contact our customer service team.

Our professional customer service team is available online 24/7.

Please refer to your purchase documentation or the Coleshome official website for contact details.