

LEISHAHA H6

LEISHAHA H6 Kids Instant Print Camera User Manual

Model: H6

Brand: LETSHAHA

1. INTRODUCTION

The LETSHAHA H6 Kids Instant Print Camera is designed to provide children aged 3-12 with a fun and interactive photography experience. This multi-functional digital camera captures 20MP photos and 1080P videos, offering instant black-and-white thermal printing without the need for ink. It includes various creative features such as filters, stickers, frames, and DIY coloring options to encourage imagination and artistic expression.

This manual provides detailed instructions for setting up, operating, and maintaining your camera, along with troubleshooting tips to ensure optimal performance.

2. SAFETY INFORMATION

- **Adult Supervision:** Always ensure children use the camera under adult supervision.
- **Choking Hazard:** Small parts, such as the SD card and printing paper rolls, can be a choking hazard. Keep them out of reach of very young children.
- **Battery Safety:** The camera contains a rechargeable lithium-polymer battery. Do not attempt to open or replace the battery. Use only the provided Type-C charging cable.
- **Thermal Paper:** The thermal paper is BPA-free and safe for use. Avoid direct contact with eyes or mouth.
- **Water Resistance:** This camera is **not water-resistant**. Avoid exposure to water or high humidity.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use liquid cleaners or solvents.

3. WHAT'S IN THE BOX

Upon unboxing your LETSHAHA H6 Kids Instant Print Camera, you should find the following items:

- LETSHAHA H6 Kids Instant Print Camera (Green)
- 3 Rolls of Thermal Print Paper
- 32GB SD Card (pre-installed or separate)

- Type-C Charging Cable
- Lanyard
- Instruction Manual



Video: Unboxing the LETSHAHA children's instant print camera, showing all included accessories.

4. PRODUCT OVERVIEW

4.1 Camera Components

Easy to Install & Use



Step 1



Step 2



Step 3



Image: Front and back view of the camera with dimensions and labeled components.

- **Photo Button:** Press to take a photo.
- **Flash:** Provides additional light for photos.
- **Small Mirror for Selfies:** Located next to the lens for easy self-portraits.
- **Lens:** Captures images and videos.
- **Speaker:** For audio playback.
- **Memory Card Slot:** Insert the 32GB SD card here.

- **Charging Port (Type-C):** Connect the charging cable here.
- **Charging Indicator Light:** Shows charging status.
- **Reset Hole:** For factory reset if needed.
- **Up Button:** Navigate menus, zoom in (long press).
- **Down Button:** Navigate menus, zoom out (long press).
- **Flash/Settings Button:** Toggle flash, access settings menu.
- **Print Button:** Initiate printing.
- **OK/Confirm Button:** Confirm selections.
- **Power/Return Button:** Long press to power on/off, short press to return to previous menu.

5. SETUP

5.1 Charging the Camera

Before first use, fully charge the camera. Connect the provided Type-C charging cable to the camera's charging port and a compatible USB power adapter (not included). The charging indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes 3-4 hours.

5.2 Inserting the SD Card

The camera comes with a 32GB SD card. Locate the memory card slot on the side of the camera. Insert the SD card with the gold contacts facing down until it clicks into place. To remove, gently push the card until it pops out.

5.3 Installing Printing Paper

The camera uses thermal printing paper. Follow these steps to install a new roll:

1. Slide the top cover of the camera upwards to unlock and open the paper slot.
2. Insert a roll of thermal printing paper into the compartment, ensuring the paper feeds from the bottom and the leading edge is facing outwards.
3. Close the top cover firmly until it clicks into place. The camera is now ready for printing.



Video: Detailed guide on how to install printing paper and initiate photo printing.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Long press the **Power/Return Button** to turn the camera on or off. A short press will return you to the previous menu screen.

6.2 Taking Photos

In camera mode, frame your shot using the screen. Press the **Photo Button** to capture an image. The camera will automatically save the photo to the SD card. To print the photo immediately, ensure the print icon is displayed on the screen before pressing the photo button. If not, you can select the photo from the album and press the **Print Button**.



Video: Demonstrates the two available print modes: grayscale and dot matrix.

6.3 Recording Videos

From the main menu, select the 'Video' icon. Press the **Photo Button** to start recording. Press it again to stop. Videos are

saved to the SD card.


6.4 Navigation and Settings

Use the **Up** and **Down Buttons** to navigate through menu options. Press the**OK/Confirm Button** to select an option. The **Flash/Settings Button** allows you to access various camera settings, including resolution, date/time, and language.

6.5 Creative Features

The camera offers several creative options to enhance photos and prints:

- **Filters:** Apply different color filters to your photos.
- **Stickers & Frames:** Choose from a variety of fun stickers and decorative frames to add to your pictures before printing.
- **DIY Coloring/Tracing:** The camera includes pre-loaded tracing paper designs that can be printed and colored using the provided markers.

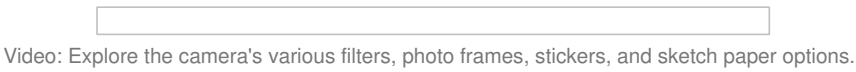

6.6 Print Modes and Density

The camera supports two print modes: Grayscale and Dot Matrix. You can also adjust the print density (Light, Medium, High) to achieve desired results. These settings can be accessed through the camera's menu.

7. MAINTENANCE

- **Cleaning:** Wipe the camera exterior with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods.
- **Paper Storage:** Store thermal paper rolls in a cool, dark place to prevent degradation and ensure print quality.

8. TROUBLESHOOTING

- **Camera Not Turning On:** Ensure the battery is charged. Connect to the charger and try again. If unresponsive, use a thin object to press the reset hole.
- **Printing Issues:** Check if the paper roll is installed correctly and has enough paper. Ensure the paper is feeding smoothly. If prints are faint, adjust print density in settings.
- **SD Card Not Recognized:** Ensure the SD card is inserted correctly. Try reinserting it. If the issue persists, try formatting the SD card via the camera's settings (this will erase all data).
- **Poor Image Quality:** Ensure the lens is clean. Check lighting conditions.
- **Camera Freezes:** Press the reset hole with a thin object to restart the camera.

9. SPECIFICATIONS

Feature	Detail
Model Name	H6

Feature	Detail
Brand	LETSHAHA
Effective Still Resolution	20 MP
Video Resolution	1080p
Screen Size	2.4 Inches
Image Stabilization	Digital
Optical Zoom	1 x
Digital Zoom	10 x
Memory Storage Capacity	32 GB (SD Card included)
Battery Type	Lithium-Ion Polymer
Battery Average Life	3 Hours
Connectivity Technology	USB (Type-C)
Item Weight	200 Grams
Special Feature	Time-lapse
Water Resistance Level	Not Water Resistant

10. WARRANTY AND SUPPORT

The LETSHAHA H6 Kids Instant Print Camera comes with a**1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims, technical support, or any questions regarding your product, please contact LETSHAHA customer service through the retailer where you purchased the camera or visit the official LETSHAHA store online.

Online Store: [LETSHAHA Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question