



[Manuals.plus](#) /

> [Tribesigns](#) /

> Tribesigns F2172 Farmhouse Wood Console Table User Manual

Tribesigns F2172

Tribesigns F2172 Farmhouse Wood Console Table User Manual

Model: F2172

INTRODUCTION

Thank you for choosing the Tribesigns Farmhouse Wood Console Table. This manual provides detailed instructions for assembly, usage, maintenance, and troubleshooting to ensure safe and optimal use of your new furniture. Please read all instructions carefully before beginning assembly.



Image: The Tribesigns Farmhouse Wood Console Table in black, showcasing its design and finish.

SAFETY INFORMATION

Important: Always secure the console table to the wall using the provided anti-tip straps to prevent tip-over. This is especially crucial in homes with children or pets. Do not place excessively heavy items on the open shelf to maintain stability and prevent damage.

PACKAGE CONTENTS

Before assembly, verify that all parts and hardware are present. Refer to the included assembly guide for a complete list and identification of each component.

- Tabletop Panel
- U-Shaped Base Panels (2)
- Lower Shelf Panel
- Connecting Brackets/Supports
- Assembly Hardware (screws, cam locks, dowels, etc.)
- Anti-tip Straps

- Installation Tool (e.g., Allen wrench)
- Assembly Guide

70.9" Long Console Table

Farmhouse & Rustic Style



Image: An exploded diagram showing all individual components of the console table and their assembly order.

SETUP AND ASSEMBLY

Assembly of the Tribesigns console table is designed to be straightforward with clear labeling and detailed instructions. It is recommended to assemble the table on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Check against the parts list in the assembly guide.
2. **Attach Base Supports:** Follow the guide to securely attach the U-shaped base panels to the lower shelf and tabletop using the provided hardware. Ensure all connections are tight.
3. **Assemble Main Structure:** Connect the tabletop to the assembled base structure.
4. **Install Anti-Tip Straps:** For safety, attach the anti-tip straps to the back of the console table and secure them to a wall stud using appropriate hardware (not always included for wall attachment, but typically for the furniture side).
5. **Final Check:** Ensure all screws and fasteners are tightened, and the table is stable.

Your browser does not support the video tag.

Video: Official installation guide for the Tribesigns Farmhouse Wood Console Table, demonstrating step-by-step assembly.

OPERATING AND USAGE

This console table is designed for versatile use in various areas of your home, offering both display and storage solutions.

- **Placement:** Ideal for entryways, hallways, living rooms (behind a sofa), or dining areas.
- **Top Surface:** Use the spacious tabletop for displaying decorative items, lamps, photo frames, or small plants.
- **Lower Shelf:** The open lower shelf provides additional storage for books, baskets, or other essentials, helping to keep your space organized.



Image: The console table positioned in an entryway, adorned with a vase and framed art.



Image: The console table placed behind a sofa, serving as a functional accent in a living room.

Your browser does not support the video tag.

Video: A brief overview of the Tribesigns Farmhouse Wood Console Table, highlighting its features and potential uses.

MAINTENANCE

Proper care will extend the life and appearance of your console table.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Blot spills immediately with a clean, dry cloth to prevent staining or water damage.
- **Heat and Moisture:** Avoid placing hot items directly on the surface. Use coasters or protective pads. Protect from excessive moisture.
- **Sunlight:** Keep the table out of direct sunlight to prevent fading or discoloration over time.
- **Tighten Hardware:** Periodically check and tighten all assembly hardware to ensure stability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table is wobbly or unstable.	Loose hardware or uneven floor.	Check and tighten all screws and fasteners. Adjust the adjustable foot pads (if present) to level the table on uneven surfaces. Ensure anti-tip straps are properly installed.
Parts do not fit together.	Incorrect orientation or missing hardware.	Review the assembly guide carefully to ensure parts are oriented correctly. Verify all necessary hardware is used and installed as directed. Do not force parts.
Missing or damaged parts.	Packaging error or transit damage.	Contact Tribesigns customer service immediately for assistance. Refer to the "Support" section.

SPECIFICATIONS

Feature	Detail
Brand	Tribesigns
Model Number	F2172
Color	Black
Material Type	Engineered Wood (MDF)
Style	Farmhouse
Item Dimensions (L x W x H)	70.86 x 11.82 x 33.46 inches
Item Weight	77 Pounds
Required Assembly	Yes
Included Components	Assembly Guide, Installation Tool

Solid Structure for Excellent Support



Image: Diagram illustrating the length, width, and height measurements of the console table.

WARRANTY AND SUPPORT

Tribesigns is committed to providing quality products. For any questions regarding assembly, missing parts, or product issues, please contact Tribesigns customer service. Refer to your purchase documentation or the official Tribesigns website for specific warranty details and contact information.