



**336150**

# **Generic Anthracite Steel Drawer Cabinet (Model 336150) User Manual**

Comprehensive instructions for assembly, operation, and maintenance.

---

## **1. INTRODUCTION AND OVERVIEW**

---

This manual provides essential information for the safe and efficient use of your Generic Anthracite Steel Drawer Cabinet, Model 336150. Please read these instructions carefully before assembly and operation, and retain them for future reference.

The cabinet is designed to offer a functional and stylish storage solution for indoor environments. It features a durable steel construction with an anthracite powder-coated finish, ensuring longevity and a modern aesthetic. The unit includes six drawers equipped with ball-bearing slides for smooth operation.



Figure 1: The Anthracite Steel Drawer Cabinet in a typical room setup, showcasing its design and functionality.

## 2. SETUP AND ASSEMBLY

---

Assembly of the Anthracite Steel Drawer Cabinet is required. It is recommended that two individuals perform the assembly to ensure safety and ease of construction.

### 2.1 Unpacking

- Carefully open the packaging and remove all components.
- Verify that all parts listed in the included hardware and parts list are present and undamaged.
- Place components on a soft, clean surface to prevent scratches during assembly.

### 2.2 Assembly Steps

1. Attach the cabinet legs to the base frame using the provided screws. Ensure they are securely fastened.
2. Assemble the main cabinet frame according to the diagrams in the separate assembly guide (if provided).
3. Install the drawer slides into the cabinet frame. Ensure they are correctly oriented and aligned for

smooth drawer operation.

4. Assemble each drawer, attaching the front panel, side panels, back panel, and bottom.
5. Insert the assembled drawers into the cabinet, ensuring they slide smoothly on the installed rails.
6. Place the cabinet in its desired location. The cabinet is designed for floor mounting.

## 2.3 Adjusting Levelers

The cabinet is equipped with adjustable levelers on its legs. To ensure stability on uneven surfaces, rotate the levelers at the bottom of each leg until the cabinet is stable and level. This prevents wobbling and ensures proper drawer alignment.



Figure 2: Cabinet dimensions, useful for planning placement and assembly.

## 3. OPERATING INSTRUCTIONS

---

The Anthracite Steel Drawer Cabinet is designed for straightforward operation.

### 3.1 Drawer Usage

- To open a drawer, gently pull the handle. The ball-bearing slides ensure smooth and quiet extension.
- To close a drawer, push it firmly until it is fully seated within the cabinet frame.
- Avoid forcing drawers open or closed, as this can damage the slides.



Figure 3: Detail of the ball-bearing drawer slide, illustrating the smooth operation mechanism.

### 3.2 Weight Capacity

The cabinet has a total capacity of 120 units (e.g., liters or similar volume measure) and a maximum weight capacity of 264 lbs (approximately 120 kg). Distribute weight evenly across the drawers to maintain stability and prevent damage.

## 4. MAINTENANCE

---

Regular maintenance will help preserve the appearance and functionality of your drawer cabinet.

### 4.1 Cleaning

- Wipe surfaces with a soft, damp cloth.
- For stubborn marks, use a mild, non-abrasive cleaner.
- Avoid harsh chemicals, abrasive pads, or solvents, as these can damage the powder-coated finish.
- Dry thoroughly after cleaning to prevent water spots.

## 4.2 Drawer Slides

If drawer slides become stiff over time, a small amount of silicone-based lubricant can be applied to the moving parts. Do not use oil-based lubricants, as they can attract dust and grime.

## 5. TROUBLESHOOTING

This section addresses common issues you might encounter with your drawer cabinet.

Problem	Possible Cause	Solution
Cabinet wobbles or is unstable.	Uneven floor surface; levelers not adjusted.	Adjust the levelers on the bottom of each leg until the cabinet is stable.
Drawers do not slide smoothly.	Misaligned drawer slides; debris in slides; excessive weight.	<ul style="list-style-type: none"> <li>• Check that drawers are not overloaded.</li> <li>• Inspect slides for obstructions and clean if necessary.</li> <li>• Ensure drawer slides are correctly installed and aligned.</li> <li>• Apply silicone lubricant if needed.</li> </ul>
Drawers do not close completely.	Obstruction; misaligned slides; cabinet not level.	<ul style="list-style-type: none"> <li>• Remove any items obstructing the drawer.</li> <li>• Verify cabinet is level using the adjustable feet.</li> <li>• Check drawer slide alignment.</li> </ul>

## 6. SPECIFICATIONS

<b>Brand</b>	Generic
<b>Model Number</b>	336150
<b>Material</b>	Metal Steel
<b>Color</b>	Anthracite
<b>Finish</b>	Painted (Powder-coated)
<b>Dimensions (W x L x H)</b>	13.8 x 31.5 x 40.0 inches (35 x 80 x 101.5 cm)
<b>Weight</b>	55.87 lbs (25.34 kg)
<b>Maximum Weight Capacity</b>	264 lbs (120 kg)
<b>Mounting Type</b>	Floor Mount

<b>Base Type</b>	Legs (Adjustable)
<b>Indoor/Outdoor Use</b>	Indoor Only
<b>Assembly Required</b>	Yes
<b>Recommended Assembly Personnel</b>	2 people

## 7. WARRANTY AND SUPPORT

---

For information regarding product warranty, please refer to the documentation provided at the time of purchase or contact the retailer from whom you purchased this product. Warranty terms and conditions may vary.

If you require technical assistance, have questions about assembly, or need to report a missing or damaged part, please contact the seller or manufacturer directly. Their contact information can typically be found on the product packaging or your purchase receipt.