

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [InnoVibe](#) /

› [InnoVibe Party Speaker with Microphone and FM Radio Instruction Manual](#)

InnoVibe B0FMFH9J

InnoVibe Party Speaker Instruction Manual

Model: B0FMFH9J

1. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the device and keep them for future reference. Incorrect use may result in reduced performance, damage to the product, or danger.

- Do not expose the speaker to water, moisture, or rain.
- Keep the speaker away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the speaker during lightning storms or when unused for long periods.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- InnoVibe Party Speaker
- Wired Microphone
- USB Type-C Charging Cable
- AUX Cable
- User Manual (this document)

InnoVibe®

PARTY SPEAKER

Wireless LED Speaker with Included Microphone



5 LED
COLOR MODES



LCD
SCREEN



MIC PORT



AUX-IN



FM RADIO



RECHARGEABLE
BATTERY



PORTABLE
SHOULDER
STRAP



MICROPHONE
INCLUDED



10 UP TO
10 HOURS
PLAYTIME



20 WATTS

Image: The InnoVibe Party Speaker shown with its included wired microphone, USB-C charging cable, and AUX cable, highlighting its features like LED color modes, LCD screen, mic port, AUX-in, FM radio, and RGB LED lights.

3. PRODUCT OVERVIEW

The InnoVibe Party Speaker is a portable audio system designed for various entertainment needs. It features a 20W output, dual 4-inch drivers, and multiple connectivity options.

Key Features:

- 20W Audio Output:** Delivers clear and powerful sound.
- Wired Microphone:** For karaoke, announcements, or public speaking.
- Multiple Input Options:** Bluetooth, USB, TF card, AUX, and FM Radio.
- Rechargeable Battery:** Provides 1 to 3 hours of wireless playtime.
- Dynamic LED Lights:** Integrated RGB LED lighting that pulses with music.
- Portable Design:** Lightweight with a shoulder strap for easy transport.



Image: A front view of the InnoVibe Party Speaker, showcasing its dual speaker grilles with active colorful LED lights and the connected wired microphone.

4. SETUP

4.1 Charging the Speaker

1. Locate the USB Type-C charging port on the speaker.
2. Connect one end of the provided USB Type-C cable to the speaker's charging port.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate. A full charge typically takes approximately 2 hours.
5. Once fully charged, disconnect the charging cable.

4.2 Powering On/Off

- To power on the speaker, locate the Power knob on the control panel and turn it clockwise.
- To power off the speaker, turn the Power knob counter-clockwise until it clicks off.

4.3 Connecting the Microphone

1. Locate the Microphone Input port on the speaker's control panel.
2. Insert the plug of the wired microphone firmly into the Microphone Input port.
3. Ensure the speaker is powered on before using the microphone.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED or an audible prompt.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.

3. Select "InnoVibe Speaker" from the list of devices.
4. Once paired, the speaker will indicate a successful connection, and the LED may stop flashing.
5. You can now play audio from your device through the speaker.

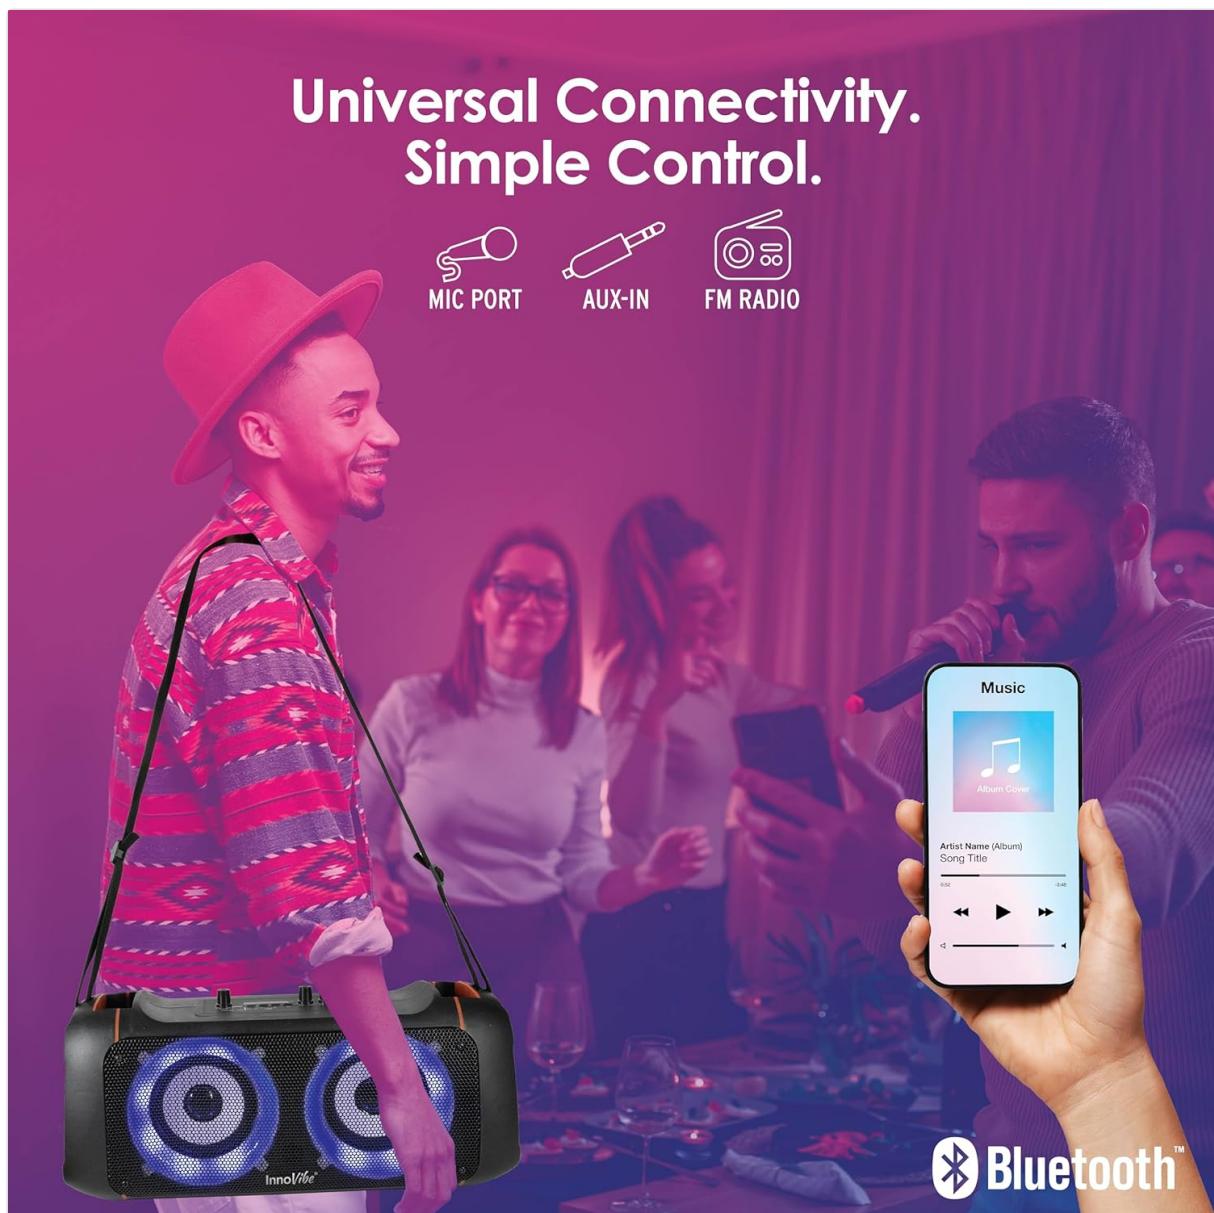


Image: A person holding a smartphone displaying a music player interface, with the InnoVibe Party Speaker visible in the foreground, illustrating Bluetooth connectivity.

5.2 FM Radio Mode

1. Power on the speaker.
2. Press the 'Mode' button (if available, or cycle through modes) until 'FM' is displayed on the screen or announced.
3. Press and hold the 'Play/Pause' button to automatically scan and save available FM radio stations.
4. Use the 'Previous/Next' buttons to navigate between saved stations.

5.3 USB/TF Card Playback

1. Insert a USB flash drive or a TF (MicroSD) card with MP3 audio files into the respective port on the speaker.
2. The speaker should automatically switch to USB/TF card mode and begin playing audio. If not, press the 'Mode' button to select the correct input.

3. Use the 'Play/Pause' and 'Previous/Next' buttons to control playback.

5.4 AUX Input

1. Connect one end of the provided AUX cable to the AUX-in port on the speaker.
2. Connect the other end of the AUX cable to the audio output jack of your external device (e.g., MP3 player, laptop).
3. Press the 'Mode' button to select 'AUX' input.
4. Control playback and volume from your external device.

5.5 Microphone Usage and Controls

1. Ensure the microphone is connected as described in Section 4.3.
2. **Microphone Volume:** Use the 'MIC VOL' knob on the control panel to adjust the microphone's volume level.
3. **Echo Effect:** Use the 'ECHO' knob to add or reduce the echo effect to your voice.
4. Adjust the main volume knob for overall sound output.

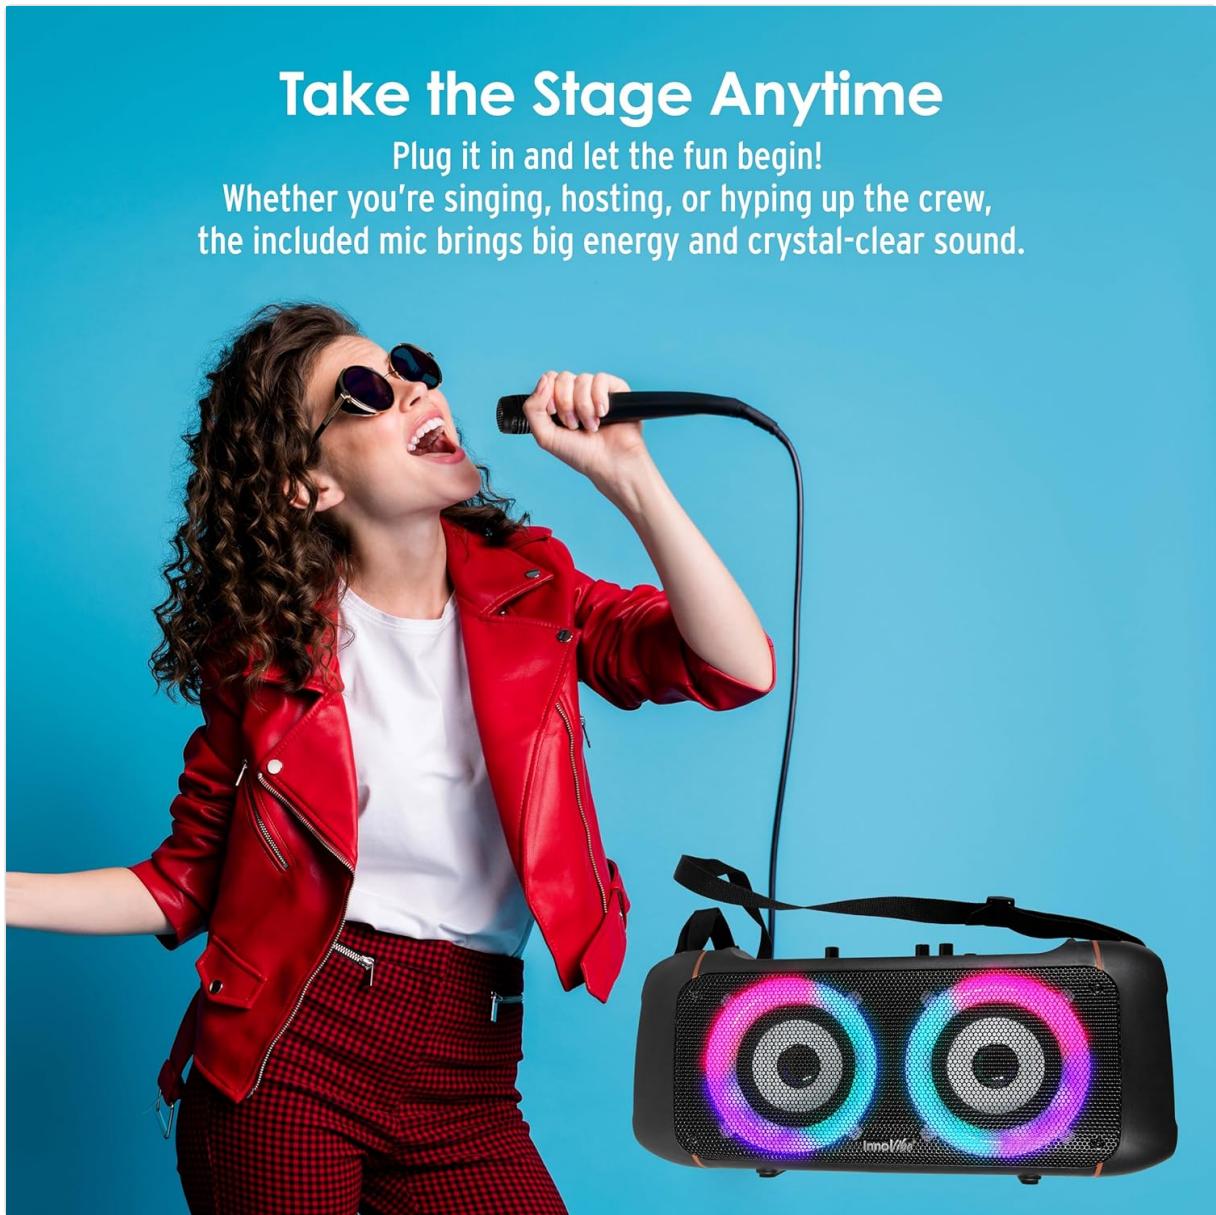


Image: A woman singing into a wired microphone, with the InnoVibe Party Speaker visible, demonstrating the use of the microphone feature.

5.6 LED Light Control

The speaker features dynamic RGB LED lights. Specific controls for changing light modes or turning them off may vary. Refer to the control panel for a dedicated light button or a combination of buttons that might cycle through light patterns or disable them.



Image: The InnoVibe Party Speaker displaying its colorful RGB LED lights, positioned on a reflective surface to highlight the light effects.

6. MAINTENANCE

6.1 Cleaning

- Ensure the speaker is powered off and unplugged before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces of the speaker.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Avoid getting moisture into any openings.

6.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every few months to maintain battery health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted. Power knob is off.	Charge the speaker. Turn the Power knob clockwise.
No sound from speaker.	Volume is too low. Incorrect input mode. Device not connected.	Increase speaker and source device volume. Select correct input mode (Bluetooth, AUX, etc.). Ensure device is properly connected/paired.
Bluetooth not connecting.	Speaker not in pairing mode. Device too far. Interference.	Ensure speaker is in Bluetooth mode and discoverable. Move device closer to speaker. Avoid obstacles. Try restarting both devices.
Microphone sound is poor or has feedback.	Microphone volume too high. Echo setting too high. Microphone too close to speaker.	Adjust 'MIC VOL' and 'ECHO' knobs. Ensure microphone is not pointed directly at the speaker.
FM radio reception is poor.	Weak signal. Interference.	Relocate the speaker to an area with better reception. Extend any external antenna if available.

8. SPECIFICATIONS

Feature	Detail
Brand	InnoVibe
Model	B0FMFH9J
Output Power	20W
Connectivity	Bluetooth, AUX, USB, TF Card, FM Radio
Power Source	Battery Powered (Rechargeable)
Battery Capacity	1500mAh (approximate)
Charging Time	Approx. 2 hours
Playtime	1 to 3 hours (depending on volume and features used)
Connector Type	USB Type-C (charging)
Item Weight	4.55 pounds
Package Dimensions	15.74 x 7.28 x 6.49 inches
UPC	810182220949

9. WARRANTY AND SUPPORT

InnoVibe products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact InnoVibe customer support.

For technical assistance or customer service inquiries, please visit the official InnoVibe website or contact your retailer.

© 2025 InnoVibe. All rights reserved.

Related Documents - B0FMFH9J

 <p>InnoVibe® KARAOKE MICROPHONE WITH SPEAKER USER MANUAL IVMP1858SV <small>PRINTED IN CHINA / 2024</small></p>	<p><u>InnoVibe Karaoke Microphone with Speaker User Manual (IVMP1858SV)</u> Official user manual for the InnoVibe Karaoke Microphone with Speaker, model IVMP1858SV. Provides instructions on setup, operation, safety, warranty, and compliance for this consumer audio device.</p>
--	--