

[manuals.plus](#) /

› [OMMO](#) /

› [OMMO OM-200 High-Speed Blender Instruction Manual](#)

OMMO OM-200

OMMO OM-200 High-Speed Blender Instruction Manual

Model: OM-200

1. INTRODUCTION

Thank you for choosing the OMMO OM-200 High-Speed Blender. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.



Image 1.1: The OMMO OM-200 High-Speed Blender with its pitcher filled with colorful fruits, alongside a glass of orange juice and a tamper.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the blender.
- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Always operate blender with lid in place.
- Do not blend hot liquids in the pitcher as pressure buildup may cause scalding.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package:

- 1800-Peak-Watt Motor Base
- 68oz BPA-Free Pitcher with Lid
- Tamper
- Recipe Inspiration Guide
- Instruction Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your OMMO OM-200 Blender.

Blender Key Features



Image 4.1: An overview highlighting the key features of the OMMO Blender, including 68oz large capacity, 1400W motor, 6 stainless steel blades, BPA-free pitcher, adjustable speed, and timer function.

Control Panel Features:

- **Start/Stop Button:** Initiates or halts the blending process.
- **Time Control Knob:** Adjusts the blending duration up to 6 minutes for hands-free operation.
- **Speed Control Knob (Min/Max):** Allows for variable speed adjustment to achieve desired texture.
- **Pulse Button:** Provides short bursts of power for chopping or quick blending.

5. SETUP

Follow these steps to prepare your blender for first use:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the pitcher, lid, and tamper with warm, soapy water. Rinse thoroughly and dry. The pitcher is top-

rack dishwasher safe.

3. **Assemble:** Place the pitcher securely onto the motor base. Ensure it is properly seated.
4. **Lid Placement:** Place the lid onto the pitcher and ensure it is firmly closed. Insert the tamper plug into the lid opening.
5. **Power Connection:** Plug the power cord into a standard electrical outlet.



Image 5.1: A diagram illustrating the dimensions of the OMMO OM-200 Blender, showing its height, width, and depth.

6. OPERATING INSTRUCTIONS

Your OMMO OM-200 Blender is designed for efficient blending of various ingredients. Always ensure the pitcher is securely placed and the lid is on before operating.

General Blending:

1. Add ingredients to the 68oz BPA-free pitcher. Do not exceed the maximum fill line.

2. Secure the lid and tamper plug.
3. Select your desired speed using the Speed Control Knob (Min to Max).
4. Press the Start/Stop button to begin blending.
5. For hands-free operation, set the desired blending time using the Time Control Knob (up to 6 minutes). The blender will automatically stop when the timer expires.
6. Use the Pulse button for short bursts of power to chop ingredients or achieve a coarser texture.
7. If ingredients get stuck, use the tamper through the lid opening to push them towards the blades while the blender is running.
8. Once blending is complete, press the Start/Stop button (if not using the timer) and unplug the unit.



Image 6.1: A hand adjusting the timer knob on the OMMO Blender's control panel, with a green smoothie in the pitcher and a glass next to it.

Tips for Best Results:

- For optimal blending, add liquids first, then soft ingredients, followed by leafy greens, and finally frozen ingredients or ice.

- Do not overload the pitcher.
- Use the tamper to help process thick or frozen mixtures.



Image 6.2: A close-up view of the OMMO Blender's six stainless steel blades efficiently crushing ice, strawberries, and kiwi, demonstrating its powerful blending capability.

7. CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your blender.

Cleaning:

- **Self-Cleaning:** After use, fill the pitcher halfway with warm water and a drop of dish soap. Secure the lid and run the blender on low speed for 30-60 seconds. Rinse thoroughly.
- **Dishwasher Safe:** The 68oz BPA-free pitcher is top-rack dishwasher safe.
- **Hand Washing:** For thorough cleaning, disassemble the pitcher components and wash with warm, soapy water. Use a brush for hard-to-reach areas around the blades. Handle blades with extreme care.
- **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.

Free Your Hands, Automatic Cleaning & Dishwasher Safe



Image 7.1: The OMMO Blender pitcher shown inside a dishwasher on the left, and performing a self-cleaning cycle with water on the motor base on the right.

Storage:

Store the blender in a clean, dry place. Ensure the pitcher is empty and clean before storage. Do not store anything on top of the blender.

8. TROUBLESHOOTING

If you encounter issues with your OMMO OM-200 Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; pitcher not correctly seated on base.	Ensure power cord is securely plugged in. Test outlet with another appliance. Re-seat the pitcher firmly on the motor base.

Problem	Possible Cause	Solution
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large or hard.	Add more liquid. Reduce the amount of ingredients. Cut hard ingredients into smaller pieces. Use the tamper to push ingredients towards the blades. Increase speed.
Blender stops during operation.	Overheating due to prolonged use or overloading.	Unplug the blender and allow it to cool down for at least 15 minutes. Reduce load or blending time.
Loud noise or unusual odor.	Foreign object in pitcher; motor strain.	Immediately turn off and unplug. Check for any foreign objects. If no object, reduce load. If problem persists, contact customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	OMMO
Model Number	OM-200
Color	Grey
Motor Power	1400W (1800W Peak)
Pitcher Capacity	68oz (BPA-Free Plastic)
Blades	6 Stainless Steel Blades
Control Type	Manual (Variable Speed, Pulse, Timer)
Timer Function	Up to 6 minutes
Product Dimensions	10"D x 7.87"W x 14.17"H
Item Weight	7.59 pounds
Voltage	110 Volts
Special Features	Adjustable Speed Control, Adjustable Time, Automatic Cleaning, Dishwasher Safe Pitcher, Pulse Technology, Safety Lock

10. WARRANTY AND CUSTOMER SUPPORT

Warranty Information:

The OMMO OM-200 High-Speed Blender comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or commercial use. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions, concerns, or warranty claims, please contact OMMO customer support:

Email: service@ommohome.com

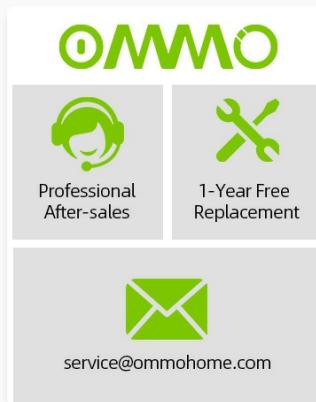


Image 10.1: An image displaying OMMO's commitment to professional after-sales support and a 1-year free replacement, along with the customer service email address: service@ommohome.com.