

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Invicta](#) /

› [ACTIVA by Invicta Digital Essentials Dual Time Watch ACWM423-003 User Manual](#)

Invicta ACWM423-003

ACTIVA by Invicta Digital Essentials Dual Time Watch User Manual

MODEL: ACWM423-003



A close-up view of the ACTIVA by Invicta Digital Essentials Dual Time Watch. The watch features a silver-toned alloy case and bracelet, with a light blue dial. The dial displays both analog hands and a digital screen. Buttons are visible on the sides, labeled 'LIGHT', 'MODE', 'START', and 'RESET'. The watch face also indicates 'ACTIVA DUAL TIME' and 'WATER PROOF 30M'.

Introduction

This manual provides detailed instructions for the proper setup, operation, and maintenance of your ACTIVA by Invicta Digital Essentials Dual Time Watch, Model ACWM423-003. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

Setup

1. Initial Time Setting (Digital Display)

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **RESET** button to select the digit you wish to adjust (e.g., hours, minutes, 12/24-hour format).
3. Use the **START** button to increase the selected digit. Hold to advance rapidly.
4. Once the time is set, press the **MODE** button to exit the setting mode.

2. Setting Date and Day

1. In the time setting mode (or a dedicated date setting mode, accessed via **MODE**), use the **RESET** button to cycle through year, month, and day settings.
2. Adjust the values using the **START** button.
3. Confirm by pressing the **MODE** button.

3. Analog Hand Synchronization

The analog hands are typically synchronized automatically with the digital time. If they are out of sync, refer to the troubleshooting section or consult a professional. Some models may have a dedicated button or crown for manual analog adjustment.

Operating Instructions

Button Functions:

- **LIGHT**: Activates the backlight for the digital display. Press once for illumination.
- **MODE**: Cycles through different watch modes (Time, Alarm, Stopwatch, etc.).
- **START**: Used to start/stop functions in Stopwatch mode, or to increase values during setting.
- **RESET**: Used to reset functions in Stopwatch mode, or to select items/digits during setting.

1. Time Mode

The default display shows the current time (hours, minutes, seconds) and date. The analog hands also display the current time.

2. Alarm Mode (ALM)

1. Press **MODE** until 'ALM' or the alarm time is displayed.
2. Press **RESET** to select hours or minutes.
3. Use **START** to adjust the alarm time.
4. Press **MODE** to confirm and exit.
5. To activate/deactivate the alarm, press **START** while in Alarm Mode. An alarm icon (AL) will appear/disappear.
6. To activate/deactivate the hourly chime (SIG), press **RESET** while in Alarm Mode. A chime icon (SIG) will appear/disappear.

3. Stopwatch Mode

1. Press **MODE** until 'STW' or '00:00:00' is displayed.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.
5. Press **MODE** to exit Stopwatch mode.

Maintenance

1. Cleaning

Wipe the watch case and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive materials.

2. Water Resistance (30M)

Your watch is water resistant to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Avoid operating buttons while the watch is wet to prevent water ingress.

3. Battery Replacement

When the digital display becomes dim or stops functioning, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance. Attempting to replace the battery yourself may void the warranty and compromise the watch's water resistance.

4. Storage

Store your watch in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, consider removing the battery to prevent leakage, though this is generally not necessary for modern watch batteries.

Troubleshooting

- **Digital Display is Blank or Dim:** The battery may be low or depleted. Replace the battery.
- **Incorrect Time Display:** Re-set the time following the 'Initial Time Setting' instructions. Ensure the 12/24-hour format is correctly selected.
- **Analog Hands Do Not Match Digital Time:** Some models require manual synchronization. If no specific instructions are provided, a professional watch repair service can adjust them.

- **Buttons Are Unresponsive:** Ensure the watch is not in a locked mode (if applicable). If the issue persists, the watch may require servicing.
- **Water Inside the Watch:** Immediately take the watch to a professional for inspection and repair to prevent further damage.

Specifications



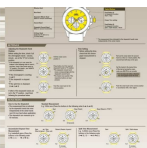
Model Number	ACWM423-003
Brand	ACTIVA by Invicta
Case Diameter	45.5mm
Water Resistance	30 Meters (3 ATM)
Movement Type	Electronic Digital
Case Material	Alloy
Clasp Type	Buckle
Department	Unisex




Warranty and Support

Your ACTIVA by Invicta watch is covered by a manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your purchase or visit the official Invicta website. For technical support or service inquiries, please contact Invicta customer service directly.

Please retain this manual for future reference.

Related Documents - ACWM423-003

	<p>Invicta Watch Warranty and Service Guide</p> <p>Comprehensive guide to Invicta watch warranties, including registration, service procedures, repair pricing, shipping requirements, and policies. Learn how to maintain your Invicta timepiece for optimal performance and longevity.</p>
	<p>Invicta Watch Instruction Manual and Warranty</p> <p>A comprehensive guide to understanding and operating your Invicta timepiece, including instructions for setting time, date, day, and alarm functions, as well as chronograph operations and warranty information.</p>
	<p>Invicta 19289 S1 Rally Watch: Installation and User Guide</p> <p>This document provides installation and operational guidance for the Invicta Men's 19289 S1 Rally Analog Display Japanese Quartz Black Watch. It covers essential setup, features, and maintenance to ensure proper use of the timepiece.</p>

	<p>Invicta Watch Manual and Warranty Guide</p> <p>Explore the official Invicta watch manual and warranty details. This guide covers your 3-year limited warranty, service center information, watch care, and explanations of various watch features and movements.</p>
	<p>Invicta Watch Manual and Warranty Guide: Care, Service, and Features</p> <p>Official manual and warranty guide for Invicta watches. Learn about the 3-year warranty, service procedures, watch care, water resistance, and types of movements (Quartz, Automatic, Manual Wind).</p>
	<p>Invicta VD53 Movement Caliber: User Manual and Functions</p> <p>Detailed guide to the Invicta VD53 watch movement, covering its display elements, setting procedures, and stopwatch functions including standard, accumulated elapsed time, and split time measurements.</p>