

Invicta ACWM423-008

ACTIVA x INVICTA DIGITAL ESSENTIALS ACWM423-008 Unisex Digital Watch User Manual

Model: ACWM423-008

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ACTIVA x INVICTA DIGITAL ESSENTIALS ACWM423-008 digital watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.



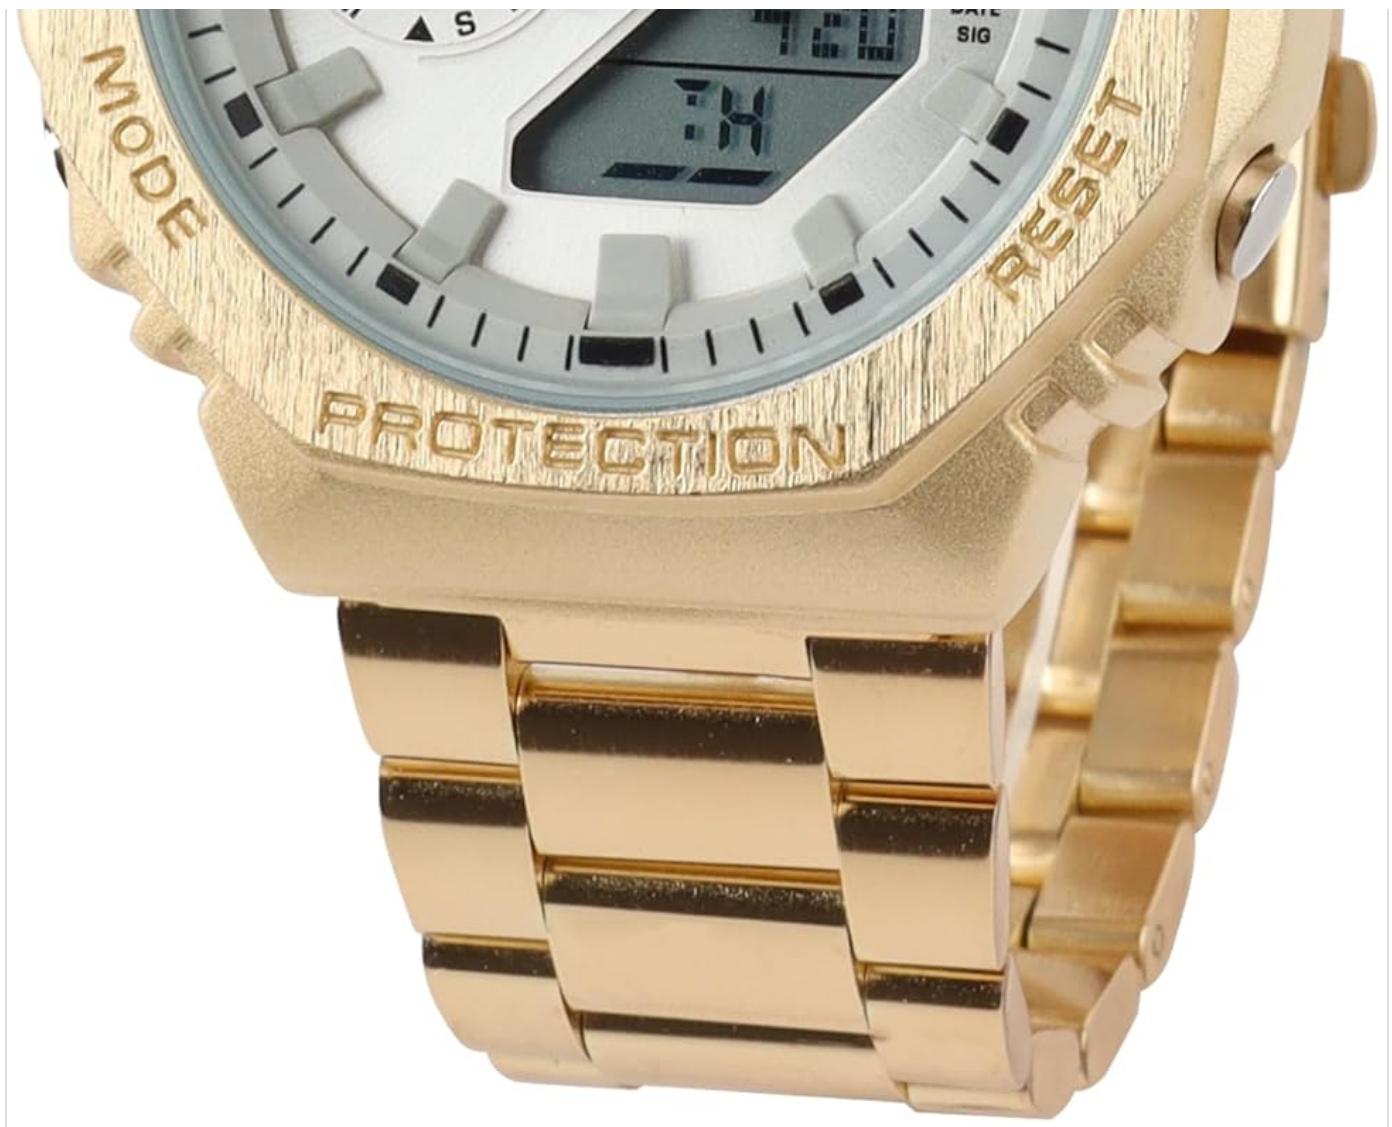


Figure 1: Front view of the ACTIVA x INVICTA DIGITAL ESSENTIALS ACWM423-008 digital watch. This image displays the gold-toned alloy casing and bracelet, with a white dial featuring both analog hands and digital displays for time, date, and other functions. The watch face clearly shows the "ACTIVA DUAL TIME" branding, "WATER PROOF 30M" rating, and button labels for "LIGHT", "MODE", "START", and "RESET" around the bezel.

WATCH COMPONENTS

Familiarize yourself with the main components and their functions:

- **Light Button (Top Left):** Activates the backlight for visibility in low light conditions.
- **Mode Button (Bottom Left):** Cycles through different modes (Timekeeping, Alarm, Stopwatch, etc.).
- **Start Button (Top Right):** Used to start/stop functions in Stopwatch mode or adjust settings.
- **Reset Button (Bottom Right):** Used to reset functions or confirm settings.
- **Analog Hands:** Display the current time in analog format.
- **Digital Display:** Shows time, date, and other digital functions.
- **Crown (Right Side):** Used to set the analog time.

SETUP AND INITIAL CONFIGURATION

1. Setting Analog Time

1. Pull the crown out to the first click position.

2. Rotate the crown to set the hour and minute hands to the desired time.
3. Push the crown back in to its normal position to start the analog timekeeping.

2. Setting Digital Time and Date

1. From the normal timekeeping mode, press the **MODE** button repeatedly until the digital time display starts flashing. This indicates you are in setting mode.
2. Press the **START** button to cycle through the settings: seconds, hour, minute, month, date, day of the week.
3. Use the **RESET** button to adjust the flashing value. Hold the **RESET** button to rapidly advance the value.
4. Once all settings are adjusted, press the **MODE** button to exit the setting mode and return to normal timekeeping.

OPERATING INSTRUCTIONS

1. Using the Backlight

Press the **LIGHT** button (top left) to illuminate the digital display for a few seconds. This feature is useful in dark environments.

2. Alarm Function

1. Press the **MODE** button until "ALM" (Alarm) appears on the digital display.
2. Press the **START** button to select the hour or minute setting.
3. Use the **RESET** button to adjust the flashing value.
4. Press the **MODE** button to activate/deactivate the alarm. An alarm icon will appear when activated.

3. Stopwatch Function

1. Press the **MODE** button until "STW" (Stopwatch) appears on the digital display.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.
5. To resume timing after pausing, press the **START** button.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive materials.
- **Water Resistance:** This watch is water resistant to 30 meters (3 ATM). It is suitable for daily use and can withstand splashes or brief immersion in water. It is *not* suitable for swimming, diving, or showering. Do not operate buttons while the watch is wet.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, as this can affect its accuracy and lifespan.
- **Impact:** Protect the watch from strong impacts or shocks.
- **Battery Replacement:** When the digital display becomes dim or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery.
Analog and digital times do not match.	Analog time was not set correctly or was accidentally adjusted.	Re-set the analog time using the crown.
Buttons are unresponsive.	Watch may be in a locked mode or battery is very low.	Try pressing the MODE button repeatedly. If still unresponsive, consider battery replacement.
Water condensation inside the watch.	Exposure to extreme temperature changes or exceeding water resistance limits.	Immediately take the watch to a qualified technician for inspection and repair to prevent damage.

SPECIFICATIONS

- Model Number:** ACWM423-008
- Case Diameter:** 45.5mm
- Case Material:** Alloy
- Dial Type:** Analog-Digital (Dual Time)
- Movement:** Electronic Digital
- Water Resistance:** 30 Meters (3 ATM)
- Functions:** Time (Analog & Digital), Date, Day, Alarm, Stopwatch, Backlight
- Department:** Unisex

WARRANTY INFORMATION

This product is covered by the manufacturer's standard warranty. For detailed information regarding warranty terms, conditions, and service procedures, please refer to the warranty card included with your purchase or visit the official Invicta website. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please contact Invicta customer service. Contact details can typically be found on the official Invicta website or on the packaging materials.

Online Resources: www.invictawatch.com

