

Kenmore 2214785

Kenmore 2214785 24" Premium Hybrid Tub Dishwasher User Manual

Model: 2214785

1. PRODUCT OVERVIEW

The Kenmore 2214785 24-inch Premium Hybrid Tub Dishwasher is designed for efficient and quiet dish cleaning. It features advanced technologies to ensure thorough washing and drying.

Key Features:

- **UltraWash System:** Utilizes 2 pressurized spray arms and a 3-stage filter to remove stubborn food particles, ensuring dishes are cleaned with filtered water.
- **SmartWash Cycle:** Sensor technology automatically detects soil levels and adjusts water temperature, pressure, and cycle time for optimal cleaning.
- **MoreSpace Adjustable Upper Rack:** Provides flexibility to accommodate large or oddly shaped items with two height levels.
- **Sani Rinse Option:** Offers a UL-certified sanitization cycle for enhanced hygiene.
- **Heated Dry Option:** Facilitates quick water evaporation for sparkling, dry dishes.
- **Quiet Operation:** Operates at a low noise level of 54 dBA.

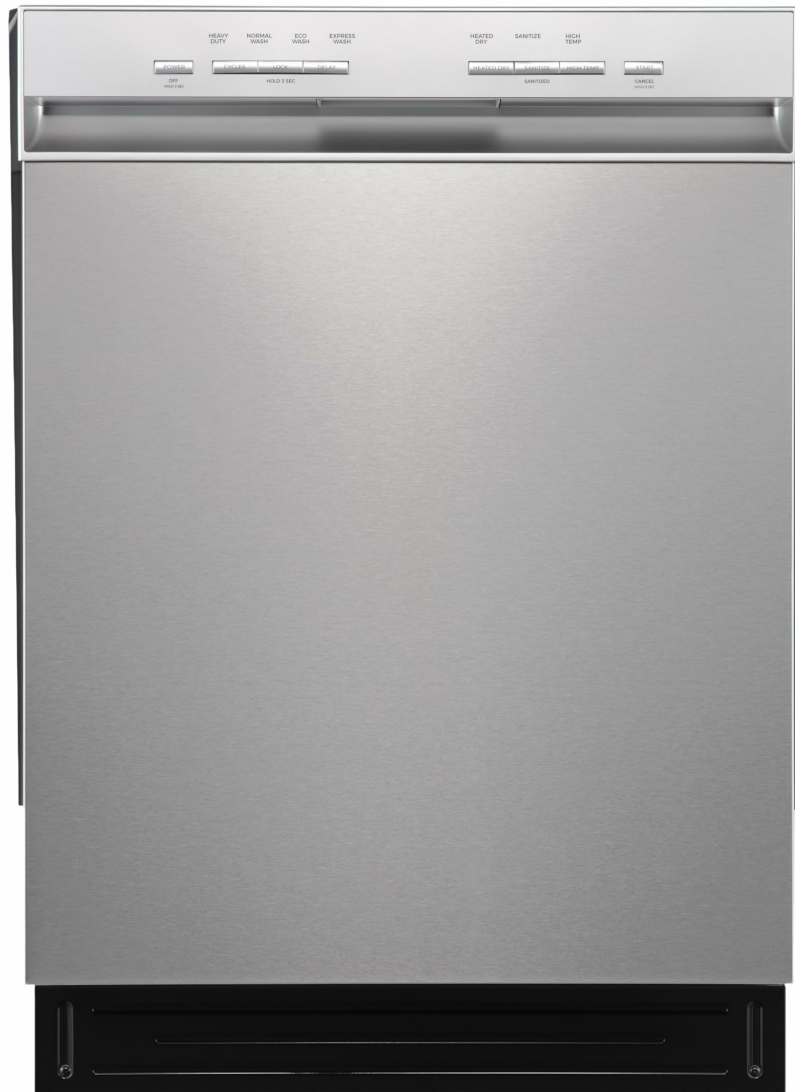 


Figure 1.1: Front view of the Kenmore 2214785 Dishwasher in Fingerprint Resistant Stainless Steel.

2. SAFETY INFORMATION

Please read all safety instructions before installing or operating your dishwasher to reduce the risk of fire, electric shock, or injury to persons.

- **Electrical Safety:** Ensure the dishwasher is properly grounded. Do not use extension cords.
- **Water Supply:** Connect to a potable water supply only. Ensure all water connections are secure to prevent leaks.
- **Installation:** Installation must be performed by a qualified installer in accordance with all local codes and ordinances.
- **Child Safety:** Keep children away from the dishwasher during operation. Do not allow children to play inside or on the dishwasher.
- **Sharp Objects:** Load sharp items so they are not likely to damage the door seal or tub. Load sharp knives with handles up.
- **Flammable Materials:** Do not store or use flammable materials near the dishwasher.

3. SETUP AND INSTALLATION

Proper measurement and preparation are crucial for a smooth installation. This section guides you through the necessary steps before your dishwasher arrives.

3.1 Measuring Your Space

Before delivery, measure the path from the delivery truck to the final installation location, including gates, hallways, doorways, corners, and stairways. Also, measure the dimensions of the installation space in your kitchen.



 
Figure 3.1: Kenmore 24" Hybrid Tub Dishwasher with approximate dimensions. Ensure your space accommodates these measurements.

3.2 Required Tools and Parts

Ensure you have the following tools and parts ready for installation. Some items may be included with your dishwasher, while others may need to be purchased separately.

Tools Required:

Parts Needed:

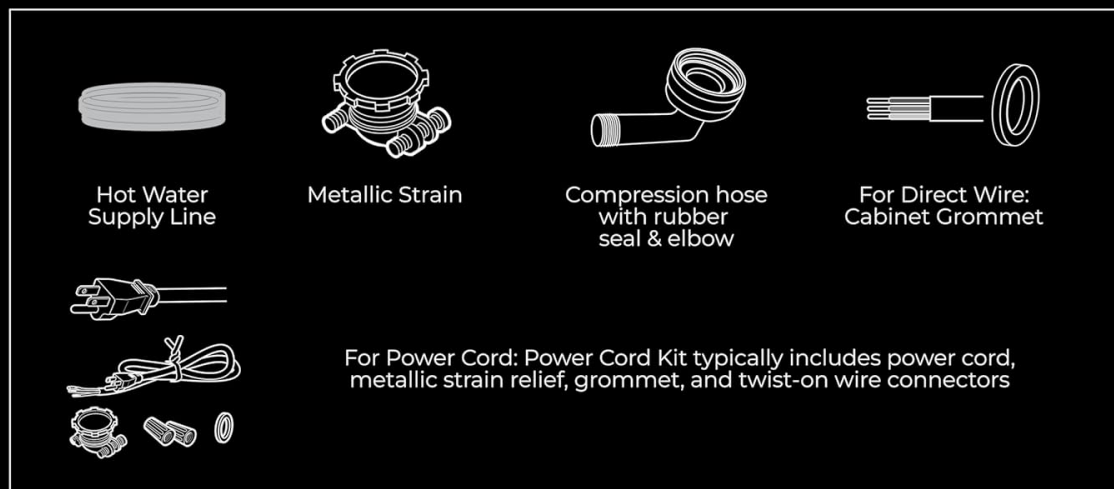

Parts Included:

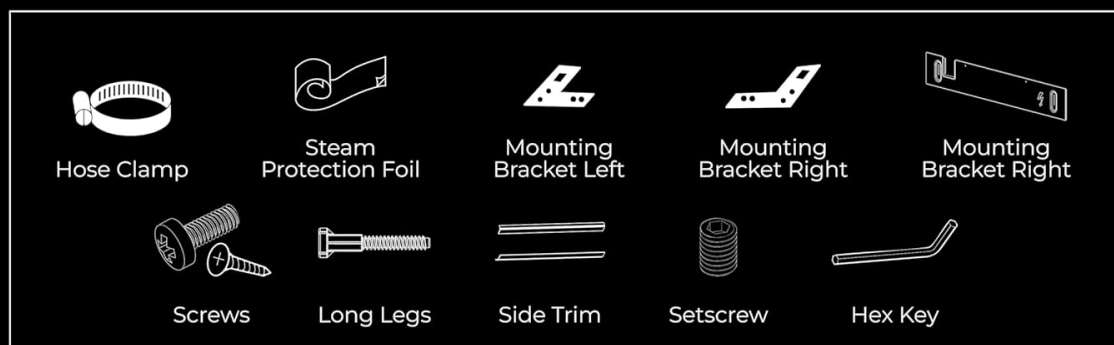 


Figure 3.2: Illustration of tools and parts needed for dishwasher installation.

3.3 Electrical and Water Requirements

- **Electrical:** The dishwasher requires a 120 Volts electrical connection. Refer to local electrical codes for specific wiring requirements.
- **Water Line:** An established hot water line is necessary for operation. Ensure the water supply is accessible and within reach of the dishwasher's connection point.

3.4 Installation Guidance Video

Watch this video for detailed guidance on measuring your home for appliance delivery and ensuring proper fit.

Video 3.1: Kenmore Appliance Measurement Guide. This video provides instructions on how to measure your home to ensure your new appliance will fit through all entry points and into its designated space.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the dishwasher's controls and cycles for optimal cleaning performance.

4.1 Loading the Dishwasher

Proper loading ensures effective cleaning. Utilize the **MoreSpace Adjustable Upper Rack** to accommodate various dish sizes. Place larger items in the lower rack and smaller items, glasses, and cups in the upper rack. Ensure spray arms are not obstructed.



Figure 4.1: Properly loaded dishwasher racks demonstrating capacity and organization.

4.2 Wash Cycles and Options

Select the appropriate cycle and options based on the soil level and type of dishes.

- **Normal:** For regular loads and everyday messes.
- **Heavy Duty:** Ideal for heavily soiled dishes, pots, and pans.
- **EcoWash:** Energy-efficient cycle for lightly soiled dishes.
- **Express Wash:** Quick cycle for lightly soiled dishes that need to be cleaned fast.
- **SmartWash:** Automatically adjusts settings based on soil level detected by sensors.
- **Sani Rinse:** Adds a high-temperature rinse to sanitize dishes.
- **Heated Dry:** Activates a heating element for improved drying performance.
- **Delay Start:** Allows you to set the dishwasher to start at a later time.

Designed for Ease: Smarter Touch, Smarter Storage

Loading and starting your dishwasher has never been simpler.

Lower, lift or remove the **MoreSpace Adjustable Upper Rack** with ease to accommodate large and oddly shaped items. 2 different levels give you flexibility to create the space you need

Time Remaining Display keeps you informed with at-a-glance information

Easy-to-use push button controls



Figure 4.2: Dishwasher control panel and adjustable upper rack for flexible loading.

5. MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your Kenmore dishwasher.

5.1 Cleaning the UltraWash Filter

The 3-stage UltraWash Filter captures food particles and should be cleaned monthly to maintain performance. To clean, remove the filter assembly, rinse under running water to remove trapped particles, and reassemble securely.



Designed for Peace of Mind

The **Durable Hybrid Stainless Steel and Plastic** dishwasher tub combines the durability and rust resistance of stainless steel with the ability to retain heat to help with drying, which ensures reliable performance wash after wash.

Figure 5.1: The UltraWash filter system located at the bottom of the dishwasher tub.

5.2 General Cleaning

- **Exterior:** Wipe the exterior with a soft, damp cloth. For fingerprint-resistant stainless steel, use a stainless steel cleaner.
- **Interior:** Periodically clean the interior with a dishwasher cleaner or a mixture of vinegar and baking soda to prevent odor and mineral buildup.
- **Door Seal:** Wipe the door gasket with a damp cloth to remove food particles and residue.

6. TROUBLESHOOTING

Before calling for service, review these common issues and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, clogged filter, low water temperature, incorrect detergent.	Reload dishes correctly, clean UltraWash filter, ensure hot water supply, use recommended detergent.
Dishwasher not draining	Clogged drain hose or filter, air gap blockage, drain pump issue.	Check and clear drain hose/filter, inspect air gap, consult service if pump is faulty.
Excessive noise	Improper loading, foreign object in pump, spray arm hitting dishes.	Adjust dish placement, remove foreign objects, ensure spray arms rotate freely.
Water leaks	Loose hose connections, damaged door gasket, excessive suds.	Tighten connections, inspect/replace gasket, use less detergent.

7. SPECIFICATIONS

Detailed technical specifications for the Kenmore 2214785 Dishwasher.

Feature	Specification
Model Number	2214785
Brand	Kenmore
Product Dimensions (D x W x H)	22.6" x 23.6" x 33.7"
Item Weight	69 Pounds
Capacity	12 Place Settings
Noise Level	54 dBA
Energy Consumption	240 Kilowatt Hours Per Year
Certification	Energy Star
Voltage	120 Volts
Material Type	Plastic, Stainless Steel
Special Features	Cycle Status Indicator, MoreSpace Adjustable Rack, SmartWash Cycle, Soil Sensor, UltraWash System
Included Components	Cutlery Basket

8. WARRANTY AND SUPPORT

For product registration, warranty information, parts, accessories, repairs, and service, please refer to the Kenmore customer support resources.

8.1 Customer Support

If you have any questions or require assistance, please contact Kenmore customer support:

- **Phone:** 1-844-553-6667
- **Email:** customersupport@kenmore.com




8.2 Product Registration



 
Register your product to receive important updates and warranty information. Visit the official Kenmore website for product registration details.

8.3 Warranty Information

Your Kenmore dishwasher comes with a manufacturer's warranty. Please refer to the warranty documentation included with your product for specific terms and conditions. Keep your proof of purchase for warranty claims.

Related Documents - 2214785

	<p>Kenmore 22-13073 Ultra Wash Dishwasher: Specifications, Dimensions, and Features</p> <p>Detailed specifications, dimensions, features, and installation information for the Kenmore 22-13073 Ultra Wash stainless steel dishwasher. Includes warranty and parts details.</p>
	<p>Kenmore Ultra Wash Dishwasher with SmartWash Technology - Models 22-13032, 22-13033, 22-13039</p> <p>Detailed specifications, features, dimensions, and accessory information for the Kenmore Ultra Wash Dishwasher with SmartWash Technology. Covers models 22-13032 (White), 22-13033 (Stainless), and 22-13039 (Black), highlighting its wash system, cycles, energy efficiency, and warranty.</p>
	<p>Kenmore 22-13292/3/9 Ultra Wash Dishwasher with SmartWash Technology - Specifications and Features</p> <p>Detailed specifications, features, dimensions, and warranty information for the Kenmore Ultra Wash Dishwasher with SmartWash Technology (Models 22-13292, 22-13293, 22-13299). Includes installation guidance and part numbers.</p>

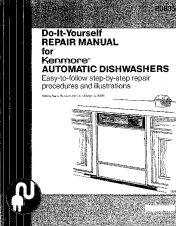	<p>Kenmore Dishwasher User Manual: Care, Installation, and Operation Guide</p> <p>Comprehensive guide for Kenmore dishwashers (Models 263.1462#, 263.1463#, 263.1464#, 263.1467#). Learn about safety, installation, operation, maintenance, and troubleshooting.</p>
	<p>Kenmore 587.1466*, 587.1465* Dishwasher Use & Care Guide</p> <p>Comprehensive Use & Care Guide for Kenmore Dishwasher models 587.1466* and 587.1465*, including safety instructions, operating procedures, dish preparation, loading, detergent and rinse aid usage, care and cleaning, troubleshooting, and warranty information.</p>
	<p>Kenmore Automatic Dishwasher Do-It-Yourself Repair Manual</p> <p>Comprehensive repair manual for Kenmore automatic dishwashers, offering easy-to-follow step-by-step procedures, illustrations, installation guidance, and troubleshooting tips for various models.</p>