



Manuals.plus /

› Techwood /

› Techwood 7.5-Quart Multi-Cooker Instruction Manual

## Techwood GP-001

# Techwood 7.5-Quart Multi-Cooker Instruction Manual

MODEL: GP-001

**Safety  
Instructions**

**Product  
Overview**

**Setup**

**Operation**

**Cleaning & Maintenance**

**Warranty &**

**Support**

**Troubleshooting**

**Specifications**

## 1. SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the Techwood Multi-Cooker. Retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged from the power outlet before assembly, disassembly, or cleaning.
- Do not immerse the heating base, cord, or plug in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Techwood customer support for assistance.
- Use only attachments and accessories recommended by the manufacturer.
- Do not use outdoors. This appliance is for household indoor use only.
- Always place the appliance on a stable, heat-resistant surface. Ensure adequate ventilation around the appliance during use.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- The cooking pot and skillet pan become hot during use. Use oven mitts or heat-resistant gloves when handling hot components. Cool-touch handles are designed to minimize heat transfer but caution is still advised.

- Do not use abrasive cleaners or scouring pads on the non-stick surfaces.

## 2. PRODUCT OVERVIEW

---

The Techwood 7.5-Quart Multi-Cooker is a versatile 2-in-1 appliance designed for various cooking methods, including slow cooking, grilling, sautéing, and hot pot. It features a large capacity and easy-to-use controls.

### Components

- **Heating Base:** The main unit containing the heating element and control panel.
- **Control Knob:** Dial for selecting temperature settings.
- **Grill Plate:** Non-stick plate with ridges for grilling.
- **Cooking Pot:** Deep, non-stick pot for slow cooking, sautéing, and hot pot.
- **Glass Lid:** Transparent lid with a cool-touch handle, fits both the grill plate and cooking pot.
- **Cool-Touch Handles:** Integrated handles on the cooking pot and grill plate for safe handling.



Figure 2.1: Exploded view showing the heating base, control knob, grill plate, cooking pot, and glass lid.

## Key Features

- **7.5-Quart Extra-Large Capacity:** Ideal for preparing meals for families or entertaining guests.
- **5-Level Heat Settings:** Precise temperature control from Warm to Max for various cooking needs.
- **Versatile 2-in-1 Design:** Easily switch between a deep cooking pot and a grill plate.
- **Non-Stick Surface:** Ensures easy food release and simplifies cleaning.
- **Dishwasher Safe Removable Parts:** The cooking pot and skillet pan are safe for dishwasher cleaning.



Figure 2.2: The multi-cooker demonstrating its dual functionality with both the cooking pot and grill plate in use.

## 3. SETUP

---

Before first use, and after each use, ensure proper cleaning and assembly of the multi-cooker.

### Initial Cleaning

1. Unpack all components and remove any packaging materials.
2. Wash the cooking pot, grill plate, and glass lid with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the heating base with a damp cloth. Do not immerse the heating base in water.

### Assembly

1. Place the heating base on a stable, flat, and heat-resistant surface.
2. Select either the cooking pot or the grill plate. Gently place it onto the heating element within the base, ensuring it sits securely.
3. Ensure the power cord is not obstructed and is easily accessible for plugging into a grounded 120V AC outlet.



Figure 3.1: The split design allows for easy removal and cleaning of the cooking pot or grill plate.

## 4. OPERATION

---

The Techwood Multi-Cooker offers flexible cooking options with its adjustable temperature control and interchangeable cooking surfaces.

### Temperature Control

The appliance features a single control knob with 5 heat settings:

- **OFF:** Turns the appliance off.
- **WARM:** Maintains food at a serving temperature.
- **LOW:** Ideal for slow cooking and gentle simmering.
- **MID:** Medium heat for general cooking, sautéing, and simmering.
- **HIGH:** High heat for faster cooking, boiling, and searing.
- **MAX:** Maximum heat for rapid heating and intense searing.



Figure 4.1: The control knob allows selection of 5 distinct heat settings.

## Using the Grill Plate

1. Ensure the grill plate is securely placed on the heating base.
2. Plug the power cord into a grounded 120V AC outlet.
3. Turn the control knob to the desired heat setting (e.g., HIGH or MAX for searing). Allow a few minutes for preheating. The indicator light will illuminate when heating and turn off when the set temperature is reached.
4. Place food directly onto the grill plate. Use the glass lid to help cook food more evenly or to prevent splattering.
5. After cooking, turn the control knob to OFF and unplug the appliance. Allow the grill plate to cool completely before cleaning.

## Using the Cooking Pot (Skillet/Slow Cooker/Hot Pot)

1. Ensure the cooking pot is securely placed on the heating base.
2. Plug the power cord into a grounded 120V AC outlet.
3. Turn the control knob to the desired heat setting (e.g., MID for sautéing, LOW for slow cooking). Allow a few minutes for preheating.
4. Add ingredients to the cooking pot. Use the glass lid for simmering, slow cooking, or maintaining heat.
5. After cooking, turn the control knob to OFF and unplug the appliance. Allow the cooking pot to cool completely before cleaning.

## 5. CLEANING & MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your Techwood Multi-Cooker and ensure optimal performance.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the cooking pot or grill plate from the heating base.
3. The cooking pot, grill plate, and glass lid are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a soft sponge.
4. For stubborn food residue, soak the removable parts in warm, soapy water for a short period before cleaning.
5. Do not use metal scouring pads, abrasive cleaners, or harsh chemicals on the non-stick surfaces, as this can damage the coating.
6. Wipe the exterior of the heating base with a damp cloth. Do not immerse the heating base in water or any other liquid.
7. Ensure all parts are thoroughly dry before storing or reassembling.



Figure 5.1: The cooking pot and grill plate are easily detachable from the heating base for convenient cleaning.

## 6. TROUBLESHOOTING

---

If you encounter issues with your Techwood Multi-Cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; control knob not set.	Ensure the power cord is securely plugged into a working 120V AC outlet. Turn the control knob to a heat setting (e.g., LOW, MID, HIGH).
Food sticks to the non-stick surface.	Insufficient oil/fat; surface damage; incorrect temperature.	Use a small amount of cooking oil or fat. Avoid using metal utensils that can scratch the non-stick coating. Ensure the correct temperature setting for the food being cooked.
Uneven heating.	Cooking pot/grill plate not seated correctly; insufficient preheating time.	Ensure the cooking pot or grill plate is properly seated on the heating element. Allow sufficient time for the appliance to preheat before adding food.
Indicator light not working.	Appliance not powered; bulb malfunction.	Check power connection. If the appliance is heating but the light is off, contact customer support.

If the problem persists after attempting these solutions, please contact Techwood customer support.

## 7. SPECIFICATIONS

---

Detailed technical specifications for the Techwood Multi-Cooker, Model GP-001.

Feature	Detail
Model Number	GP-001
Capacity	7.5 Quarts
Voltage	120 Volts
Power Settings	5-Level (Warm/Low/Mid/High/Max)
Material	Cast Iron, Glass, Stainless Steel
Color	Black
Product Dimensions	12"D x 17"W x 11"H
Item Weight	13.27 pounds
Special Feature	Non-Stick Coating, Temperature Control
Included Components	Cooking Pot, Skillet Pan (Grill Plate)

# SKILLET, GRIDDLE, HOT POT & SLOW COOKER ALL IN ONE

Indulge yourself with Techwood Multi-Cooker



Figure 7.1: Visual representation of the multi-cooker's dimensions.

## 8. WARRANTY & SUPPORT

Techwood products are designed for reliability and performance. For detailed warranty information and customer support, please refer to the following:

- **Product Liability Insurance:** All Techwood products are protected by US Product Liability Insurance. Specific details regarding coverage and terms are available upon request or can be found on the official Techwood website.
- **Customer Support:** For technical assistance, troubleshooting not covered in this manual, or warranty claims, please visit the official Techwood Store or contact their customer service department.

You can find more information and contact details at the **Techwood Store on Amazon**.